

Mellerware 22300WH

Mellerware 22300WH Glass Kettle Instruction Manual

Model: 22300WH

1. IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using your Mellerware Glass Kettle. Keep this manual for future reference.

- Ensure the voltage indicated on the appliance corresponds with your mains voltage before connecting.
- Do not immerse the kettle, power base, cord, or plug in water or any other liquid.
- Keep the appliance out of reach of children and supervise them when the kettle is in use.
- Avoid touching hot surfaces. Always use the handle.
- Do not operate the kettle with a damaged cord or plug, or if the appliance malfunctions or has been damaged in any manner.
- Place the kettle on a stable, flat, heat-resistant surface, away from hot gas or electric burners.
- Do not fill the kettle above the 'MAX' mark or below the 'MIN' mark to prevent boiling dry or water overflow.
- Always ensure the lid is securely closed before operating.
- Unplug the kettle from the outlet when not in use and before cleaning.
- This kettle is equipped with boil-dry protection and automatic shut-off for safety.

2. PRODUCT OVERVIEW

Familiarize yourself with the components of your Mellerware Glass Kettle.

- **Glass Body:** Transparent body with water level markings.
- **Lid:** Hinged lid with a pop-up mechanism for easy filling.
- **Handle:** Ergonomically designed for safe pouring.
- **Power Switch:** Located on the handle, illuminates blue when boiling.
- **Water Level Indicator:** Clearly marked MIN (0.6L), 1.2L, and MAX (1.8L) levels.
- **360-Degree Cordless Power Base:** Allows the kettle to be placed from any angle.



2200W

Water level markings (MIN, 1.2L, MAX) on the glass body.



Ergonomic handle with the lid release button and power switch.

3. SETUP AND FIRST USE

1. **Unpack:** Carefully remove the kettle and all accessories from the packaging. Retain packaging for future storage or disposal.
2. **Position:** Place the power base on a dry, flat, and stable surface. Ensure the power cord is not dangling or in contact with hot surfaces.
3. **Initial Cleaning:** Before first use, fill the kettle with water to the MAX level. Boil the water, then discard it. Repeat this process 2-3 times to remove any manufacturing residues.

4. OPERATING INSTRUCTIONS

Follow these steps to safely operate your Mellerware Glass Kettle:

1. **Fill the Kettle:** Press the lid release button to open the lid. Fill the kettle with the desired amount of water, ensuring

it is between the MIN (0.6L) and MAX (1.8L) marks. Close the lid securely until it clicks.

2. **Place on Power Base:** Position the kettle onto the 360-degree cordless power base.
3. **Switch On:** Plug the power base into a suitable electrical outlet. Press the power switch down. The blue illumination will light up, indicating the kettle is heating.
4. **Boiling Process:** The water will begin to boil. The blue illumination will remain on during this process.
5. **Automatic Shut-Off:** Once the water reaches boiling point, the kettle will automatically switch off, and the blue illumination will extinguish.
6. **Pouring:** Carefully lift the kettle from its base and pour the hot water. Exercise caution as steam and hot water can cause burns.
7. **Re-boiling:** If you need to re-boil, wait a few seconds for the internal thermostat to reset, then press the power switch again.



Opening the lid to fill the kettle.



Kettle in operation, showing blue illumination during boiling.



Kettle ready for serving after boiling.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life of your kettle.

- **Always unplug** the kettle from the power outlet and allow it to cool completely before cleaning.
- **Exterior Cleaning:** Wipe the exterior of the kettle and the power base with a soft, damp cloth. Do not use abrasive cleaners or harsh chemicals.
- **Interior Cleaning (Descaling):** Over time, mineral deposits (limescale) may build up inside the kettle, especially in hard water areas.
 - a. Fill the kettle with 1 part white vinegar and 2 parts water.
 - b. Bring the mixture to a boil and let it stand for at least 30 minutes, or longer for heavy scale.
 - c. Empty the kettle and rinse thoroughly with fresh water several times.
 - d. Alternatively, use a commercial descaling solution following the product's instructions.
- **Do Not Immerse:** Never immerse the kettle or its power base in water or any other liquid.

6. TROUBLESHOOTING

If you encounter issues with your kettle, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Kettle does not turn on.	No power supply; Kettle not properly seated on base; Power switch not engaged.	Check power outlet; Ensure kettle is correctly placed on the power base; Press the power switch down firmly.
Kettle boils but does not switch off automatically.	Lid is not closed properly; Faulty thermostat.	Ensure the lid is securely closed; If the problem persists, contact customer support.
Water tastes strange or has particles.	New kettle residue; Limescale buildup.	Perform initial cleaning steps (boil and discard water); Descale the kettle as per maintenance instructions.

Problem	Possible Cause	Solution
Kettle leaks.	Overfilled; Damage to the kettle body.	Do not fill above the MAX line; If damaged, discontinue use and contact customer support.

7. SPECIFICATIONS

Detailed technical specifications for the Mellerware 22300WH Glass Kettle.

Model	22300WH
Brand	Mellerware
Capacity	1.8 Liters
Power / Wattage	2200 watts
Voltage	240 Volts
Material	Glass
Colour	White
Special Features	Automatic Shut-Off, Cordless, Illumination while boiling
Item Weight	890 g
Product Dimensions	21.5L x 16.5W x 24H centimetres



Indicates 2200 Watts of power.

8. WARRANTY AND SUPPORT

Your Mellerware Glass Kettle comes with a warranty to ensure your peace of mind.

- **Standard Warranty:** The product includes a 1-year retail warranty from the date of purchase.
- **Extended Warranty:** This warranty can be extended up to 3 years by registering your product online and opting into communication. Please refer to the Mellerware official website for details on online registration and terms and conditions.



Warranty details: 1 Year Retail Warranty, 1 Year Online Registration, 1 Year Communication Opt-in for a total of 3 years.

For further assistance, technical support, or warranty claims, please contact Mellerware customer service through their official website or the contact information provided with your purchase documentation.

© 2026 Mellerware. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question