

Gorenje BOS6747A01X

Gorenje BOS6747A01X 60 cm Electric Oven User Manual

Model: BOS6747A01X

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Gorenje BOS6747A01X 60 cm Electric Oven. Please read these instructions carefully before using the appliance and retain them for future reference.

2. SAFETY INSTRUCTIONS

- Ensure the oven is installed by a qualified technician in accordance with local regulations.
- Do not touch hot surfaces. Always use oven mitts or gloves when handling hot items or surfaces inside the oven.
- Keep children away from the appliance during operation, as surfaces can become very hot.
- Never use water to extinguish oil or grease fires. Turn off the appliance and cover the flame with a lid or fire blanket.
- Do not store flammable materials in or near the oven.
- Disconnect the appliance from the power supply before cleaning or performing any maintenance.
- Ensure proper ventilation around the oven during use.

3. PRODUCT OVERVIEW

The Gorenje BOS6747A01X is a 60 cm built-in electric oven with a 77-liter capacity, designed for efficient cooking. It features a stainless steel finish and an intuitive control panel.



Image 3.1: Front view of the Gorenje BOS6747A01X electric oven, closed. This image displays the sleek stainless steel exterior and the integrated digital control panel with a central rotary knob.



Image 3.2: Front view of the Gorenje BOS6747A01X electric oven with the door open. The interior cavity is visible, featuring a rear fan for convection cooking and multiple levels for rack placement.



Image 3.3: Oven racks and baking trays. This image illustrates the standard accessories provided with the oven, including a wire rack and two baking trays, designed to slide into the oven's support rails.

4. SETUP AND INSTALLATION

The Gorenje BOS6747A01X is a built-in appliance. For safety and optimal performance, installation must be carried out by a qualified professional electrician or appliance installer. Ensure the electrical supply meets the requirements specified in the appliance's technical data (2300 watts). The oven should be securely fitted into the cabinet opening.

Before first use, remove all packaging materials and accessories from the oven cavity. Clean the interior with a damp cloth and mild detergent, then dry thoroughly. It is recommended to run the oven empty at maximum temperature for approximately 30 minutes to burn off any manufacturing residues. Ensure the room is well-ventilated during this process.

5. OPERATING INSTRUCTIONS

The oven features an ergonomic control panel for selecting cooking functions, temperature, and time.



Image 5.1: Digital control panel. This image shows the oven's user interface, featuring a digital display, a central rotary knob for adjustments, and various touch-sensitive buttons for functions like power, preheat, light, and start/stop.

5.1. Control Panel Overview

- **On/Off Button:** Powers the oven on or off.
- **Rotary Knob:** Used to navigate menus, select cooking functions, set temperature, and adjust time.
- **Function Selection:** Icons on the display represent various cooking modes (e.g., conventional baking, grill, fan-assisted cooking). Rotate the knob to select.
- **Temperature Setting:** Once a function is selected, use the rotary knob to set the desired temperature, up to 300 °C.
- **Timer/Clock:** Set cooking duration or the current time.
- **Light Button:** Activates the oven interior light.
- **Start/Stop Button:** Initiates or pauses the cooking process.

5.2. Basic Operation

1. Press the **On/Off** button to activate the oven.
2. Rotate the central knob to select the desired cooking function.
3. Adjust the temperature using the rotary knob. The display will show the selected temperature.

- 4. If required, set a cooking duration using the timer function.
- 5. Place your food inside the oven on the appropriate rack level.
- 6. Press the **Start** button to begin cooking.
- 7. To stop cooking, press the **Stop** button or turn off the oven.

5.3. Using Oven Racks and Trays

The oven is equipped with multiple rack positions to accommodate various cooking needs. Ensure racks and trays are inserted correctly into the side supports for stability. For optimal heat distribution, avoid overcrowding the oven.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance ensure the longevity and efficiency of your oven.

6.1. Exterior Cleaning

- Clean the stainless steel exterior with a soft cloth and a non-abrasive stainless steel cleaner.
- Avoid using harsh chemicals, abrasive pads, or sprays directly on the control panel.

6.2. Interior Cleaning

- Allow the oven to cool completely before cleaning the interior.
- Remove all racks and trays. These can be washed in warm soapy water.
- Wipe the interior surfaces with a damp cloth and a mild oven cleaner or soapy water. For stubborn stains, follow the instructions of a specialized oven cleaner.
- Ensure all cleaning agents are thoroughly rinsed off and the interior is dry before next use.

7. TROUBLESHOOTING

If you encounter issues with your oven, refer to the following common troubleshooting steps:

- **Oven not heating:** Check if the oven is properly plugged in and the circuit breaker has not tripped. Ensure a cooking function and temperature have been selected and the start button pressed.
- **Uneven cooking:** Ensure food is placed centrally and not too close to the oven walls. Avoid overcrowding the oven.
- **Oven light not working:** The bulb may need replacement. Ensure the oven is disconnected from power before attempting to replace the bulb.
- **Error codes:** If an error code appears on the display, try turning the oven off and on again. If the error persists, contact Gorenje customer support.

For problems not listed here, or if troubleshooting steps do not resolve the issue, contact authorized service personnel.

8. SPECIFICATIONS

Feature	Specification
Brand	Gorenje
Model	BOS6747A01X

Type	Electric Oven
Installation Type	Built-In
Capacity	77 Liters
Size	60 cm
Color	Stainless Steel
Energy Class	A
Maximum Oven Temperature	300 °C
Grill Power	2300 W
Item Weight	29 Kilograms
Dimensions (D x W x H)	67.5D x 59.5W x 59.5H cm



9. WARRANTY AND SUPPORT

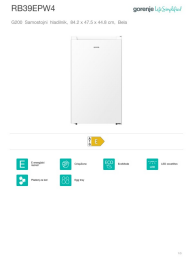 
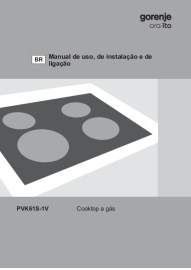 
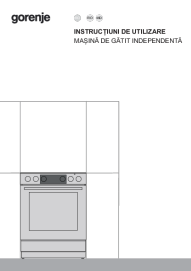 

Your Gorenje BOS6747A01X Electric Oven comes with a **5-year warranty**. Please retain your proof of purchase for warranty claims.

For technical assistance, service requests, or further information, please contact Gorenje customer support or visit the official Gorenje website. Ensure you have your model number (BOS6747A01X) and purchase details available when contacting support.

© 2024 Gorenje. All rights reserved.

Related Documents - BOS6747A01X

	<p>Gorenje Built-In Oven: Instructions for Use</p> <p>Comprehensive guide to operating your Gorenje built-in oven, covering safety precautions, appliance description, control unit functions, cooking modes, time functions, automatic programs, cleaning, and troubleshooting.</p>
	<p>Gorenje MMC1000CA Kitchen Robot - Features and Technical Specifications</p> <p>Explore the Gorenje MMC1000CA kitchen robot, a powerful appliance featuring a 1000W motor, 6-liter stainless steel bowl, versatile attachments including a blender and meat grinder, and advanced mixing capabilities for effortless home cooking.</p>

 The image shows the front of a white Gorenje RB39EPW4 refrigerator. It has a single door with a silver handle and a control panel on the right side. The Gorenje logo is visible in the top right corner of the image.	<p>Gorenje RB39EPW4 Freestanding Refrigerator Specifications</p> <p>Detailed technical specifications and features for the Gorenje RB39EPW4 G200 freestanding refrigerator, including dimensions, energy efficiency, control, equipment, and more.</p>
 The image shows the front of a black Gorenje PVK61S-1V cooktop. It has four burners and a control panel on the right side. The Gorenje logo is visible in the top right corner of the image.	<p>Manual de Uso, Instalação e Ligação do Cooktop a Gás Gorenje PVK61S-1V</p> <p>Este manual detalha a instalação, operação segura, manutenção e solução de problemas do cooktop a gás Gorenje PVK61S-1V. Aprenda a conectar e usar seu aparelho Gorenje de forma eficaz.</p>
 The image shows the front of a white Gorenje independent oven. It has a single door with a silver handle and a control panel on the right side. The Gorenje logo is visible in the top left corner of the image.	<p>Gorenje Mașină de Gătit Independentă - Manual de Utilizare</p> <p>Manual detaliat de utilizare pentru mașina de gătit independentă Gorenje, incluzând instrucțiuni de siguranță, operare, întreținere și depanare pentru o utilizare optimă și sigură a aparatului dumneavoastră.</p>
 The image shows the front of a white Gorenje GV643E90 dishwasher. It has a single door with a silver handle and a control panel on the right side. The Gorenje logo is visible in the top left corner of the image.	<p>Gorenje GV643E90 Instrukcja Użytkowania - Podręcznik Zmywarki</p> <p>Kompletna instrukcja obsługi dla zmywarki Gorenje GV643E90. Znajdź informacje o instalacji, użytkowaniu, pielęgnacji, rozwiązywaniu problemów i danych technicznych.</p>