

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Mellerware](#) /

> [Mellerware Storm Cordless Glass Kettle Instruction Manual](#)

## Mellerware Storm

# Mellerware Storm Cordless Glass Kettle

## INSTRUCTION MANUAL

Model: Storm (BOCT8GM7MK)

### Important Safety Instructions

---

Please read these instructions carefully before using your Mellerware Storm Cordless Glass Kettle and retain them for future reference. Incorrect use may result in electric shock, fire, or serious injury.

#### General Safety

- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Avoid contact with moving parts.
- This appliance is intended for household use only.
- Ensure the lid is securely closed before operating the kettle.
- Do not fill above the MAX level indicator to prevent boiling water from overflowing.
- Use only with the provided power base.

#### Electrical Safety

- Ensure your mains voltage corresponds to that stated on the rating label of the appliance.
- Do not allow the power cord to come into contact with water or other liquids.
- Regularly inspect the power cord and plug for any damage.

## Product Overview

---

Familiarize yourself with the components of your Mellerware Storm Cordless Glass Kettle.

### Components

- **Kettle Body:** Made of high borosilicate glass with a 1.8L capacity.
- **Lid:** Hinged lid for easy filling.
- **Handle:** Ergonomically designed for comfortable pouring.
- **On/Off Switch:** Located on the handle for easy operation.
- **LED Illumination Light:** Illuminates blue when the kettle is boiling.
- **Water Level Indicator:** Markings for MIN (0.6L), 1.2L, and MAX (1.8L).
- **Power Base:** 360° swivel base for cordless operation.
- **Concealed Heating Element:** 202 Stainless steel element for efficient heating and easy cleaning.



**Image:** Front view of the Mellerware Storm Cordless Glass Kettle, showcasing its glass body, handle, and power base.

## Setup and First Use

---

### Unpacking

- Carefully remove the kettle and all accessories from the packaging.
- Dispose of all packaging materials responsibly.

### Before First Use

1. Wipe the exterior of the kettle with a damp cloth. Do not immerse the kettle or power base in water.
2. Fill the kettle with clean water up to the MAX (1.8L) level.
3. Boil the water as described in the 'Operating Instructions' section.
4. Discard the boiled water. Repeat this process 2-3 times to remove any manufacturing residues and ensure optimal taste.

## Operating Instructions

---

### Filling the Kettle

1. Press the lid release button to open the lid.
2. Fill the kettle with the desired amount of fresh water. Ensure the water level is between the MIN (0.6L) and MAX (1.8L) markings on the water level indicator.
3. Close the lid firmly until it clicks into place.



**Image:** The Mellerware Storm Kettle boiling, showing the water level markings (MIN, 1.2L, MAX) and the blue LED illumination at the base.

### **Placing on Power Base**

- Place the kettle securely onto its 360° swivel power base. Ensure it is properly seated.

### **Boiling Water**

1. Plug the power base into a suitable wall outlet.
2. Press the On/Off switch located on the handle downwards. The blue LED illumination light will turn on, indicating that the kettle is heating.
3. The kettle will automatically switch off once the water has boiled, and the LED light will extinguish.
4. You can remove the kettle from its power base for serving.



Image: Close-up view of the kettle's black handle, showing the integrated On/Off switch.

## Maintenance and Cleaning

---

Regular cleaning and descaling will prolong the life of your kettle and ensure optimal performance.

### General Cleaning

- Always unplug the kettle from the power outlet and allow it to cool completely before cleaning.
- Wipe the exterior of the kettle with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- Never immerse the kettle body or power base in water or any other liquid.
- Rinse the interior of the kettle with clean water.

### Descaling

Limescale buildup can affect the kettle's performance and lifespan. Descale regularly, especially in hard

water areas.

- Fill the kettle with 1 part white vinegar and 2 parts water. Alternatively, use a commercial descaling solution following its instructions.
- Bring the mixture to a boil and then let it stand for at least 30 minutes, or longer if the scale is heavy.
- Pour out the mixture and rinse the kettle thoroughly with fresh water several times.
- Boil fresh water in the kettle and discard it to remove any residual vinegar taste.

## Troubleshooting

If you encounter any issues with your kettle, please refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Kettle does not turn on.	No power supply; Kettle not properly seated on base; On/Off switch not pressed.	Check power outlet; Ensure kettle is correctly placed on the power base; Press the On/Off switch firmly.
Kettle switches off before boiling.	Limescale buildup; Kettle is empty (boil-dry protection activated).	Descal the kettle; Ensure kettle is filled with water above the MIN level.
Water tastes strange.	New appliance residue; Limescale buildup.	Perform first-use cleaning steps (boil and discard water multiple times); Descal the kettle.
Lid does not close properly.	Obstruction or misalignment.	Check for any debris around the lid mechanism and clear it. Ensure the lid is aligned correctly before closing.

## Specifications

Technical details for the Mellerware Storm Cordless Glass Kettle.

Feature	Value
Brand	Mellerware
Model	Storm
Capacity	1.8 Liters
Power / Wattage	2200 Watts
Voltage	240 Volts
Material	High Borosilicate Glass, 202 Stainless Steel
Colour	Black

Feature	Value
Special Features	Automatic Shut-Off, Boil-dry and Overheat Protection, LED Illumination Light, 360° Swivel Base
Item Weight	890 g
Product Dimensions	16.5L x 24W x 21.5H centimetres

## Warranty and Support

---

### Warranty Information

Your Mellerware Storm Cordless Glass Kettle comes with a comprehensive warranty:

- **1 Year Retail Warranty:** Standard warranty from the date of purchase.
- **1 Year Online Registration:** An additional year of warranty upon successful online registration of your product.
- **1 Year Communication Opt-in:** Further extension of warranty by opting into Mellerware communications.

This provides a potential total of **3 years** of warranty coverage. Please refer to the Mellerware website or your purchase documentation for full terms and conditions regarding warranty registration and claims.



**Image:** A circular graphic displaying '3 years' in the center, surrounded by '1 Year Retail Warranty', '1 Year Online Registration', and '1 Year Communication Opt-in', indicating the total warranty period.

### Customer Support

For any further assistance, product inquiries, or warranty claims, please contact Mellerware customer support through their official website or the contact details provided with your purchase documentation.