

Karrong MJQ003

Karrong Professional 9-in-1 Cordless Nail Drill Manicure Pedicure Kit

MODEL: MJQ003

Introduction

Thank you for choosing the Karrong Professional 9-in-1 Cordless Nail Drill Manicure Pedicure Kit. This versatile device is designed to provide salon-quality nail care at home or in a professional setting. With its cordless operation, multiple speed settings, and a comprehensive set of accessories, achieving perfectly manicured and pedicured nails is now easier than ever.

Safety Information

- Always wear protective eyewear to prevent eye injury from flying debris or dust during operation.
- Avoid touching the rotating bit or motor to prevent burns.
- Use this device with proper care and attention.
- Do not store this product in humid or high-temperature environments for extended periods.
- If not in use for a long time, ensure the product is fully charged before storage.
- Dispose of the product responsibly at a designated recycling center; do not discard with household waste.
- This product is not suitable for children, diabetics, individuals with skin inflammation on fingers or toes, allergies, physical sensory impairments, or mental disabilities.
- Discontinue use immediately and consult a doctor if you experience any discomfort.
- This product is intended solely for nail drilling purposes; do not use for any other applications.
- Do not attempt to disassemble, repair, or modify the product yourself.

Package Contents

Your Karrong Professional 9-in-1 Cordless Nail Drill Manicure Pedicure Kit includes the following items:

- 1 x Electric Nail Filer (Main Device)
- 9 x High-Quality Nail Drill Bits

- 100 x Sanding Bands (various grits)
- 1 x Type-C Charging Cable
- 1 x Dust Cover
- 1 x User Manual
- 1 x Storage Pouch

HIGH-SPEED & TORQUE MOTOR

Speed max 20000rpm, 5 speed mode to choose.

20000 RPM

2-Way
Rotation

Remove acrylic
or gel nail



VS



Polish your
natural nails



VS



Remove
calluses



VS



Remove
dead skin



VS



Care toenail
thick nails



VS



Image: The complete Karrong 9-in-1 Cordless Nail Drill Kit, showcasing the main device, 9 drill bits, 100 sanding bands, charging cable, and storage pouch.

Setup

Charging the Device

The Karrong nail drill is equipped with a 2000 mAh rechargeable battery. Before first use, or when the battery indicator shows low power (flashing red), charge the device using the provided Type-C charging cable. A full charge takes approximately 3 hours and provides over 4 hours of continuous cordless operation.

USB RECHARGEABLE & LONG BATTERY LIFE



3 Hr Fast Charging



4 Hr Operation



3000mAh Battery



Image: The cordless nail drill being charged via its Type-C port, with LED indicators showing battery status.

Installing Drill Bits

To install a drill bit, simply push the desired bit firmly into the opening at the top of the device until it is securely fixed. To remove, pull the bit firmly. Ensure the device is powered off before changing bits.

LOW HEAT & MORE DURABLE

Upgrade motor & aluminum case efficient heat dissipation.



Image: A hand demonstrating the installation of a drill bit into the device, highlighting the ease of attachment.

Attaching the Dust Cover

The included dust cover helps to reduce nail dust scattering during use. Simply slide the clear dust cover over the installed drill bit until it clicks into place. This ensures a cleaner working environment.

Operating Instructions

Power On/Off and Speed Adjustment

To power on the device, slide the main switch up or down. The device offers 5 adjustable speed modes (Baby, Adult, Medium, Fast, Strong) ranging from 2700 to 20,000 RPM. Press the speed button to cycle through the modes. The LED indicators will show the current speed setting. To stop the device, push the main switch to the middle position.

USB RECHARGEABLE & LONG BATTERY LIFE



Image: The control panel of the nail drill, illustrating the power switch and LED indicators for the five speed settings.

Rotation Direction

The nail drill supports dual rotation (forward and reverse), making it suitable for both left and right-handed users. Use the dedicated button to switch between clockwise and counter-clockwise rotation as needed.

LED Light Function

Activate the integrated LED light by pressing the light button. This illuminates the working area, providing a clear and precise view, especially for hard-to-reach nail corners and dark areas.

MULTI-FUNCTIONAL ELECTRIC NAIL DRILL KIT

9 pcs drill bits + 100 pcs different sanding bands + dust cover



Image: The nail drill in action, with the LED light providing enhanced visibility for detailed nail work.

Application Examples

Utilize the various drill bits and sanding bands for a wide range of nail care tasks:

- **Sapphire Cone Bit:** For thinning nails, removing calluses, and dead skin.
- **Sapphire Callus Sander:** Specifically designed for removing calluses on the soles of the foot and heel.
- **Needle Bit:** Ideal for nail carving and precise nail corner filing.
- **Felted Wool Bit:** For polishing and cleaning debris on nail surfaces.
- **Long Cone Bit:** To polish nail sidewalls and cuticles.
- **Coarse Disc Bit:** For trimming and shaping nails.
- **Cylindrical Milling Cutter:** For removing cuticles, grinding, and smoothing thick nails.
- **Barrel Bit:** For removing calluses on the soles of the foot and heel quickly.
- **Mandrel with Sanding Bands:** Use with the 100 included sanding bands for polishing hard and rough nails.



Image: A visual guide detailing each of the 9 drill bits and their recommended applications for comprehensive nail care.

Your browser does not support the video tag.

Video: An official Karrong video demonstrating the various functions and ease of use of the manicure pedicure kit.

Maintenance

Cleaning the Device

Always ensure the device is powered off before cleaning. Do not immerse the device or its accessories in water. Use a clean, wrung-out wet cloth to wipe the device surfaces. Avoid using any lubricants, cleaners, polishes, or air fresheners, as these may damage the unit.

Replacing Sanding Bands

The kit includes 100 sanding bands of various grits. These are designed to be replaceable. When a sanding band becomes worn or dull, simply remove it from the mandrel bit and replace it with a fresh one to maintain optimal performance.

Troubleshooting

Device Not Working

- **Check Battery:** Ensure the product is sufficiently charged. A low battery indicator (flashing red) means it needs charging.
- **Inspect Drill Hole:** Verify that the drill hole is not deformed or cracked. Ensure the drill bit is inserted correctly and firmly.
- **Clear Obstructions:** Remove any accumulated excessive nail dust or debris from the device.
- **Avoid Water Damage:** Do not wash the device with water, as this can cause internal circuit shorts.

Product Cannot Use Replaceable Drill Bits

- Ensure the diameter of the drill bit is compatible with the device.

Surface that the drill bit touches is too hot

- It is recommended to increase the rotating speed to reduce heat buildup.

Specifications

- **Model Number:** MJQ003
- **Package Dimensions:** 8.74 x 5.83 x 1.77 inches
- **Item Weight:** 0.32 Kilograms (11.22 ounces)
- **Material Type:** Stainless Steel
- **Batteries:** 1 Lithium Polymer batteries required (included)
- **Voltage:** 5 Volts
- **Power Source:** Battery Powered
- **Battery Average Life:** 50000 Hours
- **Input Power:** 3 Watts
- **Maximum Rotational Speed:** 20000 RPM

Warranty & Support

Karrong offers a 30-day money-back guarantee for this product. For any inquiries, assistance, or to utilize your warranty, please contact Karrong customer support. Round-the-clock customer support is available to ensure your satisfaction with this professional manicure and pedicure kit.

Visit the official [Karrong Store](#) for more information and products.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

