

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Miele](#) /

› [Miele WWG 660 WCS Washing Machine and TWF 760 WP Heat-Pump Dryer User Manual](#)

Miele WWG 660 WCS, TWF 760 WP

Miele WWG 660 WCS Washing Machine and TWF 760 WP Heat-Pump Dryer User Manual

Models: WWG 660 WCS (Washing Machine), TWF 760 WP (Heat-Pump Dryer)

INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Miele WWG 660 WCS Washing Machine and TWF 760 WP Heat-Pump Dryer. Please read these instructions carefully before first use to ensure optimal performance and longevity of your appliances.



Image: The Miele WWG 660 WCS Washing Machine and TWF 760 WP Heat-Pump Dryer displayed together, showcasing their sleek design and front-loading doors.

SAFETY INSTRUCTIONS

Always adhere to the following safety guidelines to prevent injury or damage to the appliances:

- Ensure the appliances are properly grounded.
- Do not allow children to play with or operate the appliances.
- Unplug the appliances before cleaning or performing any maintenance.
- Do not wash or dry items that have been soiled with flammable substances.
- Keep the area around the appliances clear of obstructions.
- Refer to the rating plate for electrical specifications.

SETUP AND INSTALLATION

Unpacking

Carefully remove all packaging materials. Inspect the appliances for any transport damage. Report any damage immediately to your dealer.

Placement

Place the washing machine and dryer on a firm, level surface. Ensure adequate ventilation around both units. The appliances can be stacked using an appropriate stacking kit (sold separately).



Image: A person is shown adjusting the control dial of the Miele washing machine, which is integrated into a modern laundry room setup with wooden cabinetry.

Water Connection (Washing Machine)

- Connect the water inlet hose to a cold water tap with a $\frac{3}{4}$ " thread.
- Ensure all connections are tight to prevent leaks.
- Position the drain hose securely into a standpipe or sink.

Electrical Connection

- Connect the power plug to a properly installed and grounded electrical outlet.
- Do not use extension cords or multi-sockets.

Leveling

Use a spirit level to ensure both appliances are perfectly level. Adjust the feet as necessary to prevent vibration and noise during operation.

OPERATING INSTRUCTIONS

Control Panel Overview

Both appliances feature intuitive control panels with a central program selector, display, and touch controls for various functions.

Washing Machine (WWG 660 WCS)

1. **Loading Laundry:** Open the door and load laundry loosely into the drum. Do not overload.
2. **Adding Detergent:**
 - **TwinDos:** If using the integrated TwinDos system, ensure the detergent cartridges are inserted.
 - **CapDosing:** For special applications, insert a CapDosing capsule into the dispenser.
 - **Manual Dispenser:** Add powder or liquid detergent to the appropriate compartments in the dispenser drawer.
3. **Selecting a Program:** Turn the program selector to choose the desired wash program (e.g., Cottons, Minimum iron, Delicates, Woollens, Express, Dark garments, Shirts, Outdoor, Proofing).
4. **Adjusting Settings:** Use the touch controls to modify temperature, spin speed, or add options like "Pre-wash" or "Soak".
5. **Starting the Program:** Press the "Start/Stop" button.

Heat-Pump Dryer (TWF 760 WP)

1. **Loading Laundry:** Load washed laundry into the drum. Ensure the lint filter is clean.
2. **Selecting a Program:** Turn the program selector to choose the desired drying program (e.g., Cottons, Minimum iron, Delicates, Woollens, Express, Finish, Warm air/DryFresh).
3. **FragranceDos:** If desired, insert a FragranceDos flacon into its holder for scented laundry.
4. **PerfectDry:** This feature automatically adjusts drying time based on the mineral content of the water, ensuring perfect drying results.
5. **EcoSpeed:** For faster drying with optimal energy efficiency.
6. **Starting the Program:** Press the "Start/Stop" button.

MAINTENANCE

Washing Machine Care

- **Cleaning the Detergent Dispenser:** Regularly remove and clean the detergent dispenser drawer to prevent residue buildup.
- **Cleaning the Drum:** Run a maintenance wash program (e.g., "Machine Clean") periodically to clean the drum and prevent odors.
- **Cleaning the Filter:** Check and clean the drain pump filter as needed.

Dryer Care

- **Cleaning the Lint Filter:** Clean the lint filter after every drying cycle to maintain drying efficiency and prevent fire hazards.
- **Emptying the Condensate Container:** Empty the condensate container after each cycle, unless the dryer is connected to a drain.
- **Cleaning the Heat Exchanger/Condenser:** The heat exchanger is largely maintenance-free due to the EcoDry technology. Refer to the full manual for specific cleaning instructions if required.



Image: An angled view of the Miele washing machine and dryer, highlighting their control panels and the sleek design of their doors.

TROUBLESHOOTING

Before contacting customer service, please refer to the following common issues and their solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Appliance does not start.	No power supply; door not closed properly; program not selected.	Check power plug; ensure door is latched; select a program and press "Start".
Washing machine not filling with water.	Water tap closed; inlet hose kinked; water filter blocked.	Open water tap; straighten hose; clean water inlet filter.
Dryer not drying effectively.	Lint filter blocked; condensate container full; wrong program selected.	Clean lint filter; empty condensate container; select appropriate drying program.
Unusual noise/vibration.	Appliance not level; transport bolts not removed (washer); foreign objects in drum.	Level the appliance; ensure transport bolts are removed; check drum for objects.

SPECIFICATIONS

Miele WWG 660 WCS Washing Machine

- **Capacity:** 9 kg
- **Maximum Spin Speed:** 1400 RPM
- **Drum Material:** Stainless Steel
- **Special Features:** Extra Quiet, Scratch and corrosion-free enamel coated, TwinDos, CapDosing, Miele@home
- **Control Type:** Push Button
- **Access Location:** Front Load

Miele TWF 760 WP Heat-Pump Dryer

- **Capacity:** 8 kg
- **Special Features:** EcoDry Technology, FragranceDos, PerfectDry, EcoSpeed, DryCare 40, Miele@home
- **Control Type:** Push Button



Image: The Miele washing machine is shown as a central appliance in a bright, organized laundry room, emphasizing its integration into a home environment.

WARRANTY AND SUPPORT

Your Miele appliances come with a manufacturer's warranty. Please refer to the warranty card provided with your purchase for specific terms and conditions, including warranty period and coverage details.

For technical assistance, spare parts, or service requests, please contact Miele customer service. Contact details can typically be found on the Miele website or in your warranty documentation.

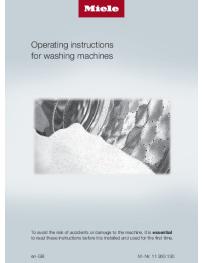
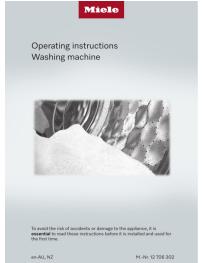
For more information, visit the official Miele website: www.miele.com

© 2024 Miele. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

Related Documents - WWG 660 WCS, TWF 760 WP

	<p>Miele WWG 880 Pralka Instrukcja Użytkowania</p> <p>Szczegółowa instrukcja obsługi pralki Miele WWG 880, obejmująca instalację, użytkowanie, wybór programów, konserwację i rozwiązywanie problemów. Dowiedz się, jak bezpiecznie i efektywnie korzystać z urządzenia Miele.</p>
---	---

	<p>Miele WWG 660 Washing Machine Quick Start Guide</p> <p>A concise guide to operating your Miele WWG 660 washing machine, covering preparation, program selection, operation, and maintenance. Learn how to efficiently wash your laundry with Miele's advanced features.</p>
	<p>Miele Washing Machine Operating Instructions - Model 11 360 130</p> <p>Comprehensive operating instructions for Miele washing machines, model number 11 360 130. Covers safe operation, installation, program selection, detergent use (TwinDos, CapDosing), maintenance, troubleshooting, and technical specifications for optimal performance and care.</p>
	<p>Miele WWF 660 / WXF 660 Washing Machine: Quick Start Guide & Operation</p> <p>Discover how to efficiently operate your Miele WWF 660 or WXF 660 washing machine. This guide covers essential steps from preparation and program selection to loading, detergent use, and maintenance for optimal laundry care.</p>
	<p>Miele WWG 880 Washing Machine: Operating Instructions and User Guide</p> <p>Comprehensive operating instructions for the Miele WWG 880 washing machine, covering installation, operation, safety, maintenance, and troubleshooting. Learn how to use your appliance efficiently and safely.</p>
	<p>Miele WWG 880 Washing Machine: Quick Start Guide and Operation</p> <p>Concise guide to operating your Miele WWG 880 washing machine, covering preparation, program selection, loading, detergent use, cleaning, and troubleshooting.</p>