

[Manuals.plus](#) /

› [JUKI](#) /

› Juki Overlock Sewing Machine Cloth Waste Cover #131-04203 Instruction Manual

JUKI 131-04203

Juki Overlock Sewing Machine Cloth Waste Cover #131-04203 Instruction Manual

For Models: MO-3616, MO-3716, MO-3916, MO-6716

INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of the Juki Cloth Waste Cover, part number 131-04203. This accessory is designed to enhance your sewing experience by efficiently collecting fabric scraps and thread trimmings generated during overlock stitching, keeping your workspace clean and organized. Please read this manual thoroughly before installation and use to ensure proper function and longevity of the product.

PRODUCT OVERVIEW

The Juki Cloth Waste Cover 131-04203 is a genuine replacement or accessory part for specific Juki overlock sewing machines. It is constructed from durable material, typically metal or high-grade plastic, and is shaped to fit precisely onto the machine's waste collection area. Its primary function is to direct and contain waste material, preventing it from scattering around the sewing area.



Figure 1: Juki Cloth Waste Cover, part number 131-04203. This image displays the Juki Cloth Waste Cover, part number 131-04203. It is a light gray, L-shaped metal or plastic component designed to attach to an overlock sewing machine to collect fabric scraps and thread trimmings.

Compatibility

This Cloth Waste Cover is compatible with the following Juki Overlock Sewing Machine models:

- Juki MO-3616
- Juki MO-3716
- Juki MO-3916
- Juki MO-6716

Ensure your machine model is listed above for proper fit and function.

SETUP AND INSTALLATION

Follow these steps to correctly install the Cloth Waste Cover onto your Juki overlock sewing machine.

- 1. Safety First:** Before beginning installation, ensure your sewing machine is turned off and unplugged from the power outlet to prevent accidental operation.
- 2. Locate Mounting Area:** Identify the designated area on your Juki overlock machine where the waste cover is to be attached. This is typically located near the cutting knives, designed to catch fabric and thread waste. Refer to your sewing machine's main instruction manual if you are unsure of the exact location.
- 3. Align the Cover:** Carefully align the Cloth Waste Cover (part #131-04203) with the mounting points on the machine. The cover is designed with specific contours and holes to match the machine's structure.
- 4. Secure the Cover:** Depending on your specific Juki model, the cover may snap into place, slide into grooves, or require screws for attachment.
 - Snap-on/Slide-in:* Gently press or slide the cover until it securely locks into position. You should feel or hear a click, indicating it is properly seated.
 - Screw Attachment:* If your machine requires screws, use the appropriate screws (typically provided with the machine or the cover, if purchased as a kit) to fasten the cover. Do not overtighten.
- 5. Verify Stability:** Once installed, gently tug on the cover to ensure it is firmly attached and does not wobble. A stable cover is crucial for effective waste collection and safe operation.
- 6. Power On:** Plug in and power on your sewing machine. The Cloth Waste Cover is now ready for use.

OPERATING INSTRUCTIONS

The Cloth Waste Cover operates passively by collecting trimmings as you sew. No special operational steps are required beyond its installation.

- Sewing:** As fabric is fed through the overlock machine and the knives trim the edges, the waste material will fall directly into the collection area provided by the cover.
- Monitoring:** Periodically check the waste cover during extended sewing sessions.
- Emptying:** When the cover becomes full, or at the end of your sewing session, remove the cover (or open its access point, if applicable) and empty the collected waste into a trash receptacle. Reattach the cover securely after emptying.

MAINTENANCE

Regular cleaning of the Cloth Waste Cover will ensure optimal performance and hygiene.

- Daily Cleaning:** After each use, or at the end of a sewing day, empty the collected waste.
- Wipe Down:** Use a soft, dry cloth to wipe down the interior and exterior surfaces of the cover to remove any lingering dust or small fibers.
- Deep Cleaning (as needed):** If the cover becomes sticky or heavily soiled, it can be removed from the machine and gently washed with mild soap and water. Ensure it is completely dry before reattaching it to the machine. Do not use harsh chemicals or abrasive cleaners, as these may damage the material or finish.
- Inspection:** Periodically inspect the cover for any signs of damage, cracks, or wear. Replace if necessary to maintain effective waste collection.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Waste not collecting properly	Cover is not installed correctly or is loose.	Ensure the cover is securely attached to the machine. Refer to the "Setup and Installation" section.
Cover falls off during operation	Improper installation or damaged mounting points.	Re-install the cover, ensuring it clicks or screws into place firmly. Inspect the cover and machine's mounting points for damage. If damaged, replacement may be necessary.
Excessive lint/dust buildup on cover	Infrequent cleaning.	Increase frequency of cleaning. Refer to the "Maintenance" section.

SPECIFICATIONS

- **Part Number:** 131-04203
- **Brand:** JUKI
- **Product Type:** Cloth Waste Cover / Waste Collector
- **Compatibility:** Juki Overlock Models MO-3616, MO-3716, MO-3916, MO-6716
- **Material:** Durable metal or high-grade plastic (typical for Juki parts)
- **Color:** Light Gray (as depicted in product images)

WARRANTY AND SUPPORT

For specific warranty information regarding your Juki Cloth Waste Cover 131-04203, please refer to the documentation provided with your original purchase or contact your authorized Juki dealer or the retailer from whom the part was acquired. Warranty terms typically cover manufacturing defects for a limited period.

For technical support, installation assistance beyond this manual, or to inquire about replacement parts, please contact Juki customer service or an authorized Juki service center. Contact information can usually be found on the official Juki website or in your sewing machine's main instruction manual.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CT8XP5XS>

More documents and user manuals: <https://manuals.plus/>