

[manuals.plus](#) /

› [Modecom](#) /

› [Modecom Freeway CX 7-inch GPS Navigation User Manual](#)

Modecom S9141025

Modecom Freeway CX 7-inch GPS Navigation User Manual

Model: S9141025

PRODUCT OVERVIEW

The Modecom Freeway CX is a 7-inch GPS navigation device designed to provide reliable guidance for your journeys. It features a clear display, ample internal memory, and connectivity options to enhance your travel experience.



Figure 1: The Modecom Freeway CX 7-inch GPS Navigation device. The image shows the device mounted via a suction cup, displaying a navigation map with a highlighted route and current location details. The screen shows "Heilbronner Straße" and "MODECOM" branding at the bottom.

Key features include:

- 7-inch display for clear map viewing.
- 8 GB internal memory for maps and data.
- 256 MB RAM for smooth operation.
- Bluetooth connectivity for hands-free calling or data transfer.
- Support for microSDHC and MicroSD (TransFlash) memory cards for expanded storage.

SETUP

1. Unpacking and Initial Inspection

Carefully remove all components from the packaging. Verify that all items listed in the package contents are present and undamaged. If any items are missing or damaged, contact your retailer.

2. Charging the Device

Before first use, fully charge the device's internal battery. Connect the provided power adapter to the device's charging port and plug it into a standard electrical outlet. The charging indicator will illuminate. A full charge typically takes several hours.

3. Mounting the Device

The device comes with a suction cup mount for vehicle installation. Choose a location on your windshield or dashboard that does not obstruct your view of the road or interfere with airbags. Clean the mounting surface thoroughly before attaching the suction cup.

1. Attach the device to the mounting bracket.
2. Press the suction cup firmly against the chosen surface.
3. Flip the lever on the suction cup to secure it in place.
4. Adjust the viewing angle of the device using the swivel joint on the mount.

4. Powering On and Initial Configuration

Press and hold the power button until the screen illuminates. Upon first startup, you may be prompted to configure basic settings such as:

- Language selection.
- Time zone and time format.
- Volume settings.
- Map region selection (if applicable).

Follow the on-screen instructions to complete the initial setup.

OPERATING INSTRUCTIONS

1. Main Menu Navigation

From the main screen, you can access various functions by tapping the corresponding icons. Common options include "Navigation," "Settings," "Media Player," and "Bluetooth."

2. Using GPS Navigation

1. Tap the "Navigation" icon to enter the map interface.
2. Tap "Find Destination" or a similar option.
3. Enter the address, point of interest (POI), or coordinates using the on-screen keyboard.
4. Select the desired destination from the search results.
5. Choose your preferred route type (e.g., fastest, shortest, avoid highways).
6. Tap "Start Navigation" to begin guidance.

The device will provide turn-by-turn voice instructions and visual cues on the map.

3. Bluetooth Connectivity

To pair your mobile phone or other Bluetooth devices:

1. Go to the "Settings" menu and select "Bluetooth."
2. Ensure Bluetooth is enabled on both the GPS device and your external device.
3. Search for available devices on your GPS.

4. Select your device from the list and follow the pairing instructions, entering a PIN if prompted.

Once paired, you can use the GPS for hands-free calling or to transfer data, depending on the device's capabilities.

4. Memory Card Usage

The device supports microSDHC and MicroSD (TransFlash) memory cards. Insert the memory card into the designated slot until it clicks into place. The device will automatically detect the card, allowing you to store additional maps, media files, or other data.

MAINTENANCE

1. Cleaning the Device

Use a soft, lint-free cloth to clean the screen and exterior of the device. For stubborn smudges, slightly dampen the cloth with water or a screen-cleaning solution. Avoid using abrasive cleaners, solvents, or aerosol sprays, as these can damage the device.

2. Software Updates

Periodically check the manufacturer's website (Modecom) for available software and map updates. Keeping your device's software up-to-date ensures optimal performance and the most current map data. Follow the instructions provided by Modecom for downloading and installing updates.

3. Battery Care

To prolong battery life:

- Avoid exposing the device to extreme temperatures (hot or cold).
- Do not leave the device in direct sunlight for extended periods.
- If storing the device for a long time, ensure it has at least a 50% charge.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Low battery; power button not pressed correctly.	Charge the device for at least 30 minutes. Press and hold the power button for 5-10 seconds.
No GPS signal.	Obstructed view of sky; device indoors; first use.	Move to an open outdoor area. Allow several minutes for initial satellite acquisition.
Touchscreen unresponsive.	Software glitch; screen dirty.	Clean the screen. Perform a soft reset (refer to device manual for specific reset procedure, usually a small reset button or holding power button).
Bluetooth pairing fails.	Bluetooth not enabled; device out of range; incorrect PIN.	Ensure Bluetooth is on for both devices. Bring devices closer. Re-enter PIN carefully.

If the problem persists after trying these solutions, please contact Modecom customer support.

SPECIFICATIONS

Feature	Detail
Brand	Modecom
Model Number	S9141025
Display Size	7 Inch (17.8 cm)
Resolution	800 x 480 px
Internal Memory	8 GB
RAM	256 MB
Connectivity	Bluetooth
Compatible Memory Cards	microSDHC, MicroSD (TransFlash)
Color	Multi-colored (primarily black)
Product Dimensions	11.3 x 17.4 x 10.8 cm; 700 g
Human Interface Input	Touchscreen
Batteries Included	No







WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your product or consult the official Modecom website. Warranty terms and conditions may vary by region and retailer.

For technical support, software updates, or further assistance, please visit the official Modecom support page or contact their customer service department. Keep your product model number (S9141025) and purchase details ready when seeking support.

Note: Modecom is the manufacturer of this product.

Related Documents - S9141025

	<p>MODECOM FreeWAY CX74 GPS Navigator - Quick Start Guide</p> <p>Get started quickly with your MODECOM FreeWAY CX74 GPS navigation device. This guide covers setup, basic operation, and essential features for easy navigation.</p>
	<p>FreeWAY CX 7.3 Quick Start Guide</p> <p>A quick start guide for the FreeWAY CX 7.3 personal navigation device, covering device setup, GPS usage, safety instructions, and support contact information.</p>
	<p>MODECOM FREEWAY SX2 Firmware Update Guide for Windows CE 6.0</p> <p>Step-by-step instructions for updating the firmware on the MODECOM FREEWAY SX2 GPS navigation device. Learn how to prepare a microSD card and install the latest Windows CE 6.0 firmware for your device.</p>
	<p>MODECOM Volcano Jager Optical Mouse User Manual</p> <p>User manual for the MODECOM Volcano Jager optical mouse, detailing instructions for detachable parts and proper disposal.</p>
	<p>MODECOM HEX GOLD Power Supply User Manual</p> <p>Comprehensive user manual for the MODECOM HEX GOLD computer power supply, covering installation, safety, troubleshooting, and maintenance.</p>
	<p>MODECOM MC-SHC01 & MC-THC01 Car Holder User Manual and Installation Guide</p> <p>Provides installation instructions and environmental disposal guidelines for MODECOM MC-SHC01 and MC-THC01 car holders.</p>

