

[manuals.plus](#) /› [Blow](#) /› [Blow KidsTAB8 8-inch Tablet User Manual \(Model S9148142\)](#)

Blow S9148142

Blow KidsTAB8 8-inch Tablet User Manual

Model: S9148142

Overview	Introduction	Safety Information	Package Contents	Device
Setup	Operating	Maintenance	Troubleshooting	Specifications
			Support	Warranty &

1. INTRODUCTION

This user manual provides essential information for the safe and efficient operation of your Blow KidsTAB8 8-inch tablet. Please read this manual thoroughly before using the device and retain it for future reference. The Blow KidsTAB8 features an 8-inch IPS display, UNISOC T606 octa-core processor, 4GB RAM, 64GB internal storage, and runs on Android 12.

2. SAFETY INFORMATION

- Do not expose the tablet to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the tablet to severe impact.
- Use only the charger provided or approved by the manufacturer.
- Do not attempt to disassemble or repair the tablet yourself. Refer to qualified service personnel.
- Keep the tablet away from water and other liquids.
- Dispose of the tablet and its battery responsibly according to local regulations.

3. PACKAGE CONTENTS

Verify that your package contains the following items:

- Blow KidsTAB8 8-inch Tablet
- USB-C Charging Cable
- Power Adapter
- User Manual (this document)

Note: Specific accessories may vary by region.

4. DEVICE OVERVIEW

Familiarize yourself with the physical components of your tablet.



Figure 4.1: Front view of the Blow KidsTAB8 tablet, showing the 8-inch display and front camera.

4.1 Physical Features

- **8-inch IPS Display:** High-definition screen for clear visuals.
- **Front Camera:** Located above the screen for video calls and selfies.
- **Rear Camera:** Located on the back for capturing photos and videos (2 MP resolution).
- **Power Button:** Typically on the side, used to power on/off and wake/sleep the device.
- **Volume Buttons:** Adjust audio levels.
- **USB-C Port:** For charging and data transfer.
- **Micro SIM/SD Card Slot:** For mobile connectivity and expandable storage.

5. SETUP

5.1 Initial Charging

Before first use, fully charge your tablet. Connect the USB-C cable to the tablet's USB-C port and the power adapter to a wall outlet. The battery indicator on the screen will show charging status. The tablet has a 4800 mAh battery.

5.2 Powering On/Off

- **To Power On:** Press and hold the Power button until the Blow logo appears.
- **To Power Off:** Press and hold the Power button, then select "Power off" from the options on the screen.
- **To Sleep/Wake:** Briefly press the Power button to put the tablet to sleep or wake it up.

5.3 SIM Card and MicroSD Card Installation

The tablet supports a Micro SIM card for 4G LTE connectivity and a MicroSD card for expandable storage up to 64GB (or more, depending on card compatibility).

1. Locate the SIM/MicroSD card tray on the side of the tablet.
2. Use the provided SIM ejector tool (if included) to open the tray.
3. Carefully place the Micro SIM card and/or MicroSD card into the designated slots on the tray, ensuring correct orientation.
4. Gently push the tray back into the tablet until it clicks into place.

6. OPERATING INSTRUCTIONS

6.1 Basic Navigation (Android 12)

- **Home Screen:** Swipe left or right to navigate between home screens.
- **App Drawer:** Swipe up from the bottom of the screen to access all installed applications.
- **Notifications & Quick Settings:** Swipe down from the top of the screen to view notifications and access quick settings toggles.
- **Back, Home, Recent Apps:** Use the navigation buttons at the bottom of the screen (or gestures, if enabled) to navigate.

6.2 Connectivity

- **Wi-Fi:** Go to **Settings > Network & internet > Wi-Fi** to connect to available Wi-Fi networks (supports 802.11ac, b, g, n, and 5 GHz).
- **Bluetooth:** Go to **Settings > Connected devices > Bluetooth** to pair with Bluetooth 5.0 compatible devices.
- **Mobile Data (4G LTE):** If a Micro SIM card is installed, enable mobile data in **Settings > Network & internet > Mobile network**.
- **GPS:** The tablet supports GPS, Glonass, and BeiDou for location services. Ensure location services are enabled in **Settings > Location**.

6.3 Camera Usage

Open the Camera app to take photos or record videos. The tablet features a front camera and a 2 MP rear camera.

6.4 Applications

Download and install applications from the Google Play Store. Ensure you have a Google account set up on your tablet.

7. MAINTENANCE

7.1 Cleaning the Tablet

Use a soft, lint-free cloth to clean the screen and body of the tablet. Do not use abrasive cleaners or solvents. If necessary, slightly dampen the cloth with water or a screen cleaner specifically designed for electronics.

7.2 Software Updates

Periodically check for software updates to ensure your tablet has the latest features and security enhancements. Go to **Settings > System > System update**.

8. TROUBLESHOOTING

Problem	Solution
Tablet does not power on.	Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on again.
Wi-Fi connection issues.	Check if Wi-Fi is enabled in settings. Restart your Wi-Fi router. Forget the network and reconnect.
Apps are crashing or freezing.	Close and restart the app. Clear the app's cache in Settings > Apps > [App Name] > Storage & cache . Restart the tablet.
Slow performance.	Close unused apps. Clear cache. Consider uninstalling unnecessary applications. Perform a factory reset as a last resort (backup data first).

9. SPECIFICATIONS

Model Number	S9148142
Display	8-inch IPS, 1280 x 800 px (HD)
Processor	UNISOC T606 Octa-Core
RAM	4 GB
Internal Storage	64 GB
Operating System	Android 12
Battery Capacity	4800 mAh
Connectivity	Wi-Fi (802.11ac, b, g, n, 5 GHz), Bluetooth 5.0, 4G LTE, GPS, Glonass, BeiDou
Ports	USB-C 3.0 x 1, Micro SIM slot, MicroSD card reader
Cameras	Front Camera, Rear Camera (2 MP)
Dimensions	18.2 x 2.2 x 25 cm
Weight	880 g

10. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official Blow website. Keep your proof of purchase for warranty claims.

Manufacturer: Blow

Model: KidsTAB8 (S9148142)

© 2024 Blow. All rights reserved. Information in this manual is subject to change without notice.