

[Manuals.plus](#) /

› [Dyson](#) /

› [Dyson V8 Plus Cordless Vacuum User Manual](#)

Dyson V8 Plus

Dyson V8 Plus Cordless Vacuum User Manual

Model: V8 Plus

INTRODUCTION

The Dyson V8 Plus cordless vacuum is engineered for powerful, versatile cleaning in homes with pets. Its lightweight design and advanced features make it ideal for various cleaning tasks, from deep cleaning carpets and hard floors to tackling pet hair and fine dust.



dyson v8 plus

Lightweight for quick, versatile
cordless cleaning

Image: The Dyson V8 Plus in action, demonstrating its lightweight and versatile cordless cleaning capabilities in a home setting.

Key Features:

- **Lightweight and Versatile:** Designed for quick, effortless cleaning and transforms into a handheld vacuum.
- **Powerful Suction:** Delivers fade-free Dyson power for up to 40 minutes.
- **Motorbar™ Cleaner Head:** Deep cleans all floor types and de-tangles long hair and pet hair.
- **Advanced Whole-Machine Filtration:** Captures 99.99% of particles as small as 0.3 microns, expelling cleaner air.
- **Specialized Tools:** Includes the Hair screw tool for pet hair and other Dyson-engineered accessories.



Run time

Up to 40 minutes of fade-free power¹



Cordless versatility

Lightweight and transforms to handheld vacuum with one click



All floor types

Motorbar™ cleaner head deep cleans hard floors and carpets



Whole machine filtration

Traps 99.99% of particles as small as 0.3 microns²

Image: An infographic summarizing the key features of the Dyson V8 Plus, including its run time, cordless versatility, suitability for all floor types, and advanced whole-machine filtration.

WHAT'S INCLUDED

Your Dyson V8 Plus Cordless Vacuum comes with the following components:

- Dyson V8 Cordless Vacuum (main body)
- Wall Docking Station
- Charger
- Mini Soft Dusting Brush
- Motorbar™ Cleaner Head
- Crevice Tool
- Hair Screw Tool
- Lithium Ion Battery (pre-installed)

Attachments and Accessories



Motorbar™ cleaner head



Hair screw tool



Mini soft dusting brush



Crevice tool



Wall dock



Charger

Image: A visual representation of all the attachments and accessories that come with the Dyson V8 Plus, including various cleaning tools and the charging dock.

SETUP

Initial Charge:

Before first use, it is recommended to fully charge your Dyson V8 Plus. Connect the charger to the wall docking station or directly to the vacuum's charging port. The battery indicator lights will show charging progress.

Assembly:

1. Attach the wand to the main body of the vacuum until it clicks securely into place.
2. Select your desired cleaner head or accessory and attach it to the end of the wand or directly to the main body for handheld use. Ensure it clicks into place.
3. For convenient storage and charging, install the wall docking station in a suitable location near a power outlet. Use appropriate fasteners for your wall type.



Image: The Dyson V8 Plus vacuum assembled with its main cleaner head, shown with additional accessories ready for attachment.

OPERATING INSTRUCTIONS

Power Modes:

The Dyson V8 Plus features two power modes to suit different cleaning needs:

- **Powerful Mode:** Provides the optimal balance of power and run time for everyday cleaning tasks.
- **MAX Mode:** Offers increased suction for intensive spot cleaning or stubborn dirt. Activate by sliding the switch on the top of the main body.



Two cleaning modes for the right balance of power and run time

Image: A close-up view of the Dyson V8 Plus's main unit, highlighting the switch for selecting between the two cleaning modes.

Using Attachments:

Select the appropriate attachment for the surface you are cleaning:

- **Motorbar™ Cleaner Head:** Ideal for deep cleaning both carpets and hard floors. Its de-tangling technology prevents hair wrap.
- **Hair Screw Tool:** Specifically designed for removing long hair and pet hair from upholstery, pet beds, and stairs. Its conical brush bar minimizes tangles.
- **Crevice Tool:** Perfect for reaching narrow gaps, edges, and tight spaces.
- **Mini Soft Dusting Brush:** Use for gentle dusting on delicate surfaces like blinds, shelves, and electronics.



Motorbar™ cleaner head de-tangles as you clean

Image: A detailed view of the Motorbar™ cleaner head, demonstrating its effectiveness in picking up debris and hair from floors.



De-tangle long hair and pet hair



Navigate around tricky edges and hard-to-reach spaces



Lift dust from delicate surfaces

Image: A composite image illustrating the Dyson V8 Plus's versatility, showing it cleaning a car interior, reaching tight corners, and gently dusting surfaces.

MAINTENANCE

Emptying the Bin:

Empty the clear bin as soon as the dirt reaches the MAX level. To empty, hold the vacuum over a trash can, push the red lever down to release the bin flap, and the dirt will fall out. Push the flap back up until it clicks to close.



No-touch bin emptying. Easy wall-mounted docking and charging.

Image: Instructions for no-touch bin emptying and easy wall-mounted docking and charging.

Washing the Filter:

For optimal performance, wash the filter at least once a month. Twist the filter counter-clockwise to remove it from the top of the main body. Wash under cold tap water until the water runs clear. Squeeze and tap to remove excess water. Allow to air dry completely for at least 24 hours before reinserting. Do not use a washing machine or dryer.

Cleaning the Motorbar™ Cleaner Head:

Periodically check the cleaner head for blockages or debris. The de-tangling vanes help, but occasional manual removal of tangled hair may be necessary. Refer to the included quick-start guide for detailed instructions on removing the brush bar for cleaning.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Vacuum has no power or short run time.	Battery not charged; Blockage in the machine.	Ensure the battery is fully charged. Check for and clear any blockages in the cleaner head, wand, or bin.
Suction is weak.	Bin is full; Filter needs washing; Blockage; Cleaner head issue.	Empty the bin. Wash and thoroughly dry the filter. Check for and clear any blockages. Ensure the cleaner head is properly attached and free of debris.
Cleaner head not spinning.	Blockage in brush bar; Cleaner head not properly attached.	Remove any tangled hair or debris from the brush bar. Ensure the cleaner head is securely connected to the wand or main body.

If problems persist, please refer to the "Warranty & Support" section for further assistance.

SPECIFICATIONS

Brand: Dyson

Model Name: V8 Plus

Color: Silver/Nickel

Special Feature: Up to 40 minutes of fade-free Dyson power, Lightweight, For homes with pets, Cordless, Bagless

Filter Type: HEPA Filter

Capacity: 0.54 Liters

Runtime: 40 minutes

Wattage: 1400 watts

Noise Level: 70 dB

Product Dimensions: 8.7"L x 9.84"W x 49.5"H

Item Weight: 5.72 pounds

Battery Type: Lithium-Ion (1 included)

UPC: 885609034461

Country of Origin: Malaysia

WARRANTY & SUPPORT

The Dyson V8 Plus Cordless Vacuum comes with a **2-year warranty** from the date of purchase, covering parts and labor for defects in materials or workmanship.

For personalized machine guides, maintenance tips, and support, register your machine on the [MyDyson™ app](#) or visit the official Dyson support website.

For further assistance, please contact Dyson Customer Service:

- **Phone:** Refer to your regional Dyson website for local contact numbers.
- **Online Support:** www.dyson.com/support

