

[Manuals.plus](#) /

› [BLACK+DECKER](#) /

› Black & Decker BXHB1501E 1500W Immersion Blender User Manual

BLACK+DECKER BXHB1501E

Black & Decker BXHB1501E 1500W Immersion Blender User Manual

Model: BXHB1501E | Brand: BLACK+DECKER

IMPORTANT SAFETY INSTRUCTIONS

Please read and understand all safety instructions before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always unplug the appliance from the power supply before assembly, disassembly, or cleaning.
- Do not immerse the motor unit in water or any other liquid.
- Keep hands, hair, clothing, and other utensils away from moving blades during operation to prevent injury.
- Blades are sharp. Handle with care when cleaning.
- This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- For household use only. Do not use outdoors.

PRODUCT OVERVIEW

The Black & Decker BXHB1501E is a powerful 1500W immersion blender designed for blending, crushing, and pureeing various ingredients. It features a durable stainless steel shaft and easy-to-use controls.



Image: The Black & Decker BXHB1501E immersion blender shown alongside its accompanying measuring cup.

Components:

- **Motor Unit:** Contains the powerful 1500W motor and control buttons.
- **Blender Shaft:** Detachable stainless steel shaft with sharp blades.

- **Measuring Cup:** Included for convenient blending and measuring.



Image: A close-up view of the top section of the immersion blender, highlighting the control buttons and ergonomic grip.



Image: A detailed view of the stainless steel blending head, showing the sharp blade assembly at the bottom of the shaft.

SETUP

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.

2. **Clean:** Before first use, wash the blender shaft and measuring cup in warm soapy water. Rinse thoroughly and dry. Wipe the motor unit with a damp cloth.
3. **Assemble:** Align the blender shaft with the motor unit and twist until it locks securely into place. Ensure it is firmly attached before plugging in.
4. **Placement:** Place the appliance on a stable, flat, and dry surface.

OPERATING INSTRUCTIONS

Follow these steps for safe and effective operation of your immersion blender.



Image: A person demonstrating the use of the immersion blender to blend ingredients in a tall container within a kitchen setting.

1. **Prepare Ingredients:** Cut solid ingredients into small pieces for easier blending. Place ingredients into a tall container or the included measuring cup.
2. **Immerse Blender:** Submerge the blender shaft into the ingredients before plugging in the appliance. Ensure the liquid level is below the maximum fill line to prevent splashing.

3. **Plug In:** Connect the power cord to a suitable electrical outlet (220V).
4. **Start Blending:** Press and hold the power button on the motor unit to start blending. Use a gentle up-and-down motion to ensure all ingredients are processed evenly.
5. **Adjust Speed (if applicable):** If your model has variable speed settings, adjust as needed for desired consistency.
6. **Stop Blending:** Release the power button to stop the appliance.
7. **Unplug:** Always unplug the appliance from the power outlet immediately after use.
8. **Remove Blender:** Carefully remove the blender shaft from the container.

Important: Do not operate the blender continuously for more than 1 minute to prevent overheating. Allow a short break between blending cycles.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your appliance. The product is described as "Facile à nettoyer" (Easy to clean).

1. **Unplug:** Always ensure the appliance is unplugged from the power outlet before cleaning.
2. **Disassemble:** Twist and detach the blender shaft from the motor unit.
3. **Clean Blender Shaft:** Wash the stainless steel blender shaft and blades under running water immediately after use. Use a brush if necessary to remove food residue. Be extremely careful as the blades are sharp. The shaft can also be washed in warm soapy water.
4. **Clean Measuring Cup:** Wash the measuring cup in warm soapy water or place it in the dishwasher (if dishwasher-safe, check product markings).
5. **Clean Motor Unit:** Wipe the motor unit with a damp cloth. Never immerse the motor unit in water or any other liquid.
6. **Dry:** Thoroughly dry all parts before reassembling or storing.
7. **Storage:** Store the appliance in a dry place, out of reach of children.

TROUBLESHOOTING

If you encounter issues with your immersion blender, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Blender does not turn on.	Not plugged in. Power outlet not working. Blender shaft not securely attached. Overheating protection activated.	Ensure the power cord is firmly plugged into a working outlet. Test the outlet with another appliance. Re-attach the blender shaft, ensuring it clicks into place. Unplug and let the appliance cool down for at least 30 minutes before attempting to use again.
Blender stops during operation.	Overheating. Ingredients are too thick or hard.	Unplug and allow to cool. Reduce blending time. Add more liquid, or cut ingredients into smaller pieces. Do not overload.

Problem	Possible Cause	Solution
Poor blending results.	Not enough liquid. Ingredients too large. Blender not fully immersed.	Add more liquid to achieve desired consistency. Cut ingredients into smaller, more manageable pieces. Ensure the blending head is fully submerged in the ingredients.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

Brand	BLACK+DECKER
Model Number	BXHB1501E (Internal Reference: S9148407)
Type	Immersion Blender
Power	1500 Watts
Voltage	220 Volts
Material	Stainless Steel (blender shaft)
Dimensions (L x W x H)	12 x 24 x 11.5 cm
Weight	1.6 Kilograms
Special Feature	Easy to Clean
Recommended Uses	Blending, Crushing, Pureeing

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase. BLACK+DECKER products typically come with a manufacturer's warranty covering defects in materials and workmanship.

For technical support, spare parts, or service inquiries, please visit the official BLACK+DECKER website or contact their customer service department in your region. Please have your model number (BXHB1501E or S9148407) and purchase details ready when contacting support.

Note: Information regarding spare parts availability was not provided in the product details.