



[Manuals.plus](#) /

> [InnovaGoods](#) /

> InnovaGoods Hannde Extendable Walking Cane User Manual - Model V0103837

InnovaGoods V0103837

InnovaGoods Hannde Extendable Walking Cane User Manual

Model: V0103837

INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your InnovaGoods Hannde Extendable Walking Cane. This multifunction mobility aid features an LED light, an alarm, a mechanical grabber, and an adjustable height for enhanced comfort and safety during walking.



Image: The InnovaGoods Hannde Extendable Walking Cane, showcasing its overall design with the main handle, adjustable shaft, and 4-point base.

SAFETY INFORMATION

- The cane is designed to support a maximum weight of **70 kg (154 lbs)**. Do not exceed this limit.

- The bag hook on the lower handle supports a maximum weight of **35 kg (77 lbs)**.
- Ensure all height adjustment pins are fully engaged and locked before use.
- Regularly check the cane for any signs of damage or wear. Do not use if any part is compromised.
- Replace batteries for the LED light and alarm promptly when they show signs of weakening.
- Consult a healthcare professional for guidance on proper cane usage and posture.
- Keep out of reach of children.

PACKAGE CONTENTS

- 1 x InnovaGoods Hannde Extendable Walking Cane (Model V0103837)

SETUP

1. Battery Installation (for LED Light and Alarm)

1. Locate the battery compartment on the main handle of the cane.
2. Open the compartment cover.
3. Insert **2 x AAA batteries** (not included), ensuring correct polarity (+/-).
4. Securely close the battery compartment cover.

2. Height Adjustment

1. Press the adjustment button located on the cane's shaft.
2. While holding the button, extend or retract the lower section of the shaft to your desired height. The cane offers 6 height levels, ranging from 80 cm to 93 cm.
3. Release the button, ensuring it clicks securely into one of the adjustment holes. Verify that the shaft is firmly locked in place before use.
4. For proper ergonomic use, the top of the cane handle should be at your wrist level when you stand upright with your arms relaxed at your sides.



Image: A person standing with the cane, demonstrating appropriate height adjustment for comfortable use.

OPERATING INSTRUCTIONS

1. Using the LED Light

Press the dedicated button on the main handle to activate the integrated LED light. The light can be tilted up to 45 degrees, allowing you to direct illumination precisely where needed, which is useful in dimly lit environments or for finding objects.



Image: A close-up view of the main handle, highlighting the LED light at the front.



Image: A user utilizing the cane's LED light to illuminate a keyhole in a dark setting.

2. Activating the Alarm

To activate the audible alarm, press the alarm button on the main handle. The alarm emits an 80 dB sound, which can be used to alert others in case of an emergency or potential danger.



Image: A user pressing the alarm button on the cane's handle, indicated by a sound icon.

3. Using the Mechanical Grabber

The cane features a mechanical grabber at its lower end. To use it, pull the grabber mechanism out from the bottom of the cane. Squeeze the lever on the main handle to open and close the grabber claws. This allows you to pick up objects from the floor, high shelves, or other hard-to-reach areas without bending. The grabber tips are equipped with magnets to assist in picking up metallic items. After use, retract the grabber back into the cane for storage.



Image: A user demonstrating the mechanical grabber function, picking up an object from the ground while seated.

4. Using the Double Handle and Bag Hook

In addition to the main upper handle, the cane includes a lower assistance handle. This handle can be folded out 90 degrees to provide extra support when transitioning between sitting and standing positions. It also features a convenient slot for hanging bags or other items, supporting up to 35 kg.



Image: A user gripping the lower assistance handle for additional support.



Image: A user utilizing the lower handle's slot to hang a small bag.

5. Stability and Self-Standing Feature

The cane is designed with a stable 4-point non-slip rubber base, providing firm support and allowing it to stand upright independently. To lift the cane from the ground without bending, you can gently press down on the base with your foot, causing the cane to tilt and become easily accessible.



Image: The cane standing independently on its stable 4-point rubber base.



Image: A user demonstrating how to lift the cane using their foot, avoiding the need to bend over.

MAINTENANCE

1. Cleaning

Wipe the cane regularly with a soft, damp cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these may damage the materials.

2. Battery Replacement

Replace the 2 x AAA batteries when the LED light dims significantly or the alarm sound weakens. Always ensure correct polarity during installation.

3. Storage

Store the cane in a dry place, away from direct sunlight and extreme temperatures, to prolong its lifespan.

TROUBLESHOOTING

Issue	Possible Cause	Solution
LED light or alarm not working	Dead or incorrectly installed batteries.	Check battery polarity. Replace with new AAA batteries. Ensure battery compartment is securely closed.
Mechanical grabber not functioning	Obstruction in mechanism or lever not fully depressed.	Check for any debris blocking the grabber claws. Ensure the lever on the main handle is fully squeezed.
Cane feels unstable or wobbles	Height adjustment pins not fully engaged. Worn or damaged 4-point base.	Ensure the height adjustment button clicks securely into place. Inspect the rubber base for wear; replace if necessary.
Difficulty adjusting height	Adjustment button not fully depressed.	Press the adjustment button firmly and completely before attempting to slide the shaft.

SPECIFICATIONS

Feature	Detail
Brand	InnovaGoods
Model	V0103837
Materials	Aluminum (shaft), Polyamide (handle), Plastic (other components)
Adjustable Height	80 - 93 cm (6 levels)
Weight Capacity (Cane)	Up to 70 kg (154 lbs)
Weight Capacity (Bag Hook)	Up to 35 kg (77 lbs)
Power Source	2 x AAA batteries (not included)
Alarm Sound Level	80 dB
LED Light Tilt	Up to 45°
Base	4-point non-slip rubber
Product Dimensions (L x W x H)	25 x 25 x 93 cm
Product Weight	910 grams
Color	Multicolored

WARRANTY AND SUPPORT

This InnovaGoods product is covered by a standard manufacturer's warranty. For warranty claims,

technical support, or any inquiries regarding your product, please contact InnovaGoods customer service through their official channels or the retailer from whom you purchased the item. Please retain your proof of purchase for warranty purposes.