

One For All URC1242

One For All Universal Remote Control URC1242 User Manual

Model: URC1242 | Brand: One For All

INTRODUCTION

The One For All URC1242 Universal Remote Control is designed to simplify your home entertainment experience by consolidating multiple remote controls into one. This manual provides detailed instructions to help you set up, operate, and maintain your new universal remote.

Key features of the URC1242 include:

- Universal compatibility with various devices.
- Compact and ergonomic design.
- Intuitive button layout for ease of use.
- Durable construction for long-lasting performance.



Figure 1: One For All URC1242 Universal Remote Control. This image displays the full remote control from an angled perspective, highlighting its sleek design and the arrangement of all its buttons, including the power button, channel and volume controls, navigation pad, and numeric keypad.

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery cover.
3. Insert two AAA batteries (not included), ensuring the correct polarity (+/-) as indicated inside the compartment.
4. Close the battery cover securely.

2. Device Pairing / Programming

The URC1242 remote control can be programmed to operate various devices. Refer to the specific programming instructions provided in the separate Quick Setup Guide or visit the One For All website for the latest codes and programming methods for your specific devices (e.g., TV, DVD, Blu-ray, Audio, etc.).

- **Direct Code Entry:** Enter a 4-digit code corresponding to your device brand.
- **Brand Search:** The remote can search for the correct code for your device.
- **Learning Function:** Copy functions directly from your original remote control.

OPERATING INSTRUCTIONS

Once programmed, your One For All URC1242 remote control can operate your devices. Below are the general functions of the buttons:

Button/Section	Function
Power Button (Red, top right)	Turns the selected device On or Off.
Device Mode Buttons (TV, AV, APP, etc.)	Selects the device you wish to control (e.g., TV for television, AV for audio/video receiver).
Volume Up/Down (+/-)	Adjusts the volume level.
Mute Button	Mutes or unmutes the audio.
Channel Up/Down (▲ / ▼)	Changes the television channel.
Navigation Pad (Up, Down, Left, Right, OK)	Navigates through menus and confirms selections. The "OK" button confirms the choice.
Back/Exit Button (←)	Returns to the previous menu or exits the current menu.
Home Button (House icon)	Accesses the home screen or main menu of the device.
Menu Button (Three lines icon)	Opens the device's menu.
Info Button (i)	Displays information about the current program or content.
Media Playback Controls (Play, Pause, Stop, Rewind, Fast Forward, Record)	Controls media playback functions for devices like DVD players, Blu-ray players, or streaming boxes.
Numeric Keypad (0-9)	Directly enters channel numbers or other numerical inputs.
Netflix Button	Direct access to the Netflix application (if supported by the device).
Search Button	Activates the search function on the device.

MAINTENANCE

Cleaning the Remote

To clean your remote control, use a soft, slightly damp cloth. Do not use abrasive cleaners, alcohol, or solvents, as these may damage the surface or internal components. Ensure no liquid enters the remote.

Battery Replacement

Replace batteries when the remote's performance degrades or if it stops responding. Always replace both batteries at the same time with new ones of the same type (AAA). Dispose of old batteries responsibly according to local regulations.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Remote not responding.	<ul style="list-style-type: none">Check if batteries are correctly inserted or need replacement.Ensure the remote is pointed directly at the device's IR receiver.Verify that the correct device mode button (e.g., TV, AV) is selected.
Certain buttons do not work.	<ul style="list-style-type: none">The remote may not be fully programmed for all functions of your device. Try reprogramming or using the learning function.Ensure the device supports the specific function (e.g., not all TVs have a "Netflix" button function).
Short operating range.	<ul style="list-style-type: none">Batteries may be low; replace them.Obstructions between the remote and the device's IR receiver.Strong light sources (e.g., direct sunlight) interfering with the IR signal.

SPECIFICATIONS

Feature	Detail
Brand	One For All
Model Number	S7193551
Color	Multicolor
Maximum Range	10 Meters
Item Weight	1 Kilogram
Dimensions (L x W x H)	5.08 x 22.61 x 2.79 cm
Spare Parts Availability	Information not available
Software Updates Guaranteed Until	Information not available

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or visit the official One For All website. Keep your proof of purchase for warranty claims.

Online Resources:

- Product registration
- Frequently Asked Questions (FAQs)
- Latest programming codes and setup guides
- Contact information for customer service

© 2024 One For All. All rights reserved.

Documents - One For All – URC1242



[One For All URC1242 SIMPLESET Essence 4 Device Universal Remote Control Setup Guide](#)

This guide provides setup instructions and warranty information for the One For All URC1242 SIMPLESET Essence 4 Device Universal Remote Control. It covers device compatibility, basic setup, and disposal guidelines in multiple languages.

lang:en score:32 filesize: 2.92 M page_count: 2 document date: 2023-05-01



[One For All Essence 4 Universal Remote Control URC1242 Setup and Operation Guide](#)

This guide provides setup instructions and key descriptions for the One For All Essence 4 Universal Remote Control (URC1242), enabling users to control up to four audio-video devices like TVs, set-top boxes, and soundbars.

lang:en score:29 filesize: 4.34 M page_count: 32 document date: 2023-05-01

UNIVERSAL
ELECTRONICS.

Universal Electronics BV
Colosseum 2
7521 PT Enschede
The Netherlands

EU DECLARATION OF CONFORMITY

We, Universal Electronics BV, Colosseum 2, 7521 PT Enschede, Netherlands, hereby under sole responsibility that the products to which this declaration relates is in conformity with the following directives and standards.

Product: URC 1242 R00 ONE FOR ALL ESSENCE 4 DEVICES BASIC UNIVERSAL
TV REMOTE CONTROL

Electromagnetic Compatibility Directive (EMC) 2014/30/EU
EN 55022: 2015+A11:2020+A1:2020
EN 55032: 2015+A11:2020+A1:2020

Low Voltage Directive 2014/35/EU (LVD/Safety)
EN IEC 62368-1:2018

Packaging directive 94/62/EC
The product packaging complies to the essential requirements in Annex II of the directive
RoHS Directive 2011/65/EU and 2015/863/EU and its amendment
EN IEC62321:2018

Restriction of Hazardous Substances and Technical Documentation

Signed on behalf of:

Paul Akkermans
QA Manager
Enschede, The Netherlands July 27, 2023

www.universal.com

[\[pdf\]](#) Documentation Declaration of Conformity

3 Belle Vallejos URC1242 Declaration of Conformity One For All Documents urc 1242 r00 eu uk doc

universal utomo pim s3 west 1 amazonaws 64ca39cecb69f |||

Universal Electronics BV Colosseum 2 7521 PT Enschede The Netherlands EU

DECLARATION OF CONFORMITY We, Universal Electronics BV, Colosseum 2,

7521 PT Enschede, Netherlands, hereby under sole responsibility that the products to which this declaration relates is in conformity with the stated directive...

lang:de **score:13** filesize: 785.14 K page_count: 5 document date: 2023-07-27