

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Philips](#) /
- › [Philips L'OR LM9012/40 Double Espresso Machine User Manual](#)

Philips LM9012/40

Philips L'OR LM9012/40 Double Espresso Machine User Manual

Model: LM9012/40

INTRODUCTION

Welcome to the user manual for your Philips L'OR LM9012/40 Double Espresso Machine. This capsule coffee machine is designed to deliver high-quality espresso beverages in your home. It features a 2-liter water tank capacity and operates at 19 bar pressure, ensuring optimal extraction for a rich coffee experience. Please read this manual thoroughly before first use to ensure safe operation and proper maintenance of your appliance.



Image of the Philips L'OR LM9012/40 Double Espresso Machine, showcasing its design and emerald green color.

SAFETY INFORMATION

Before using the appliance, please read these safety instructions carefully and keep them for future reference.

- **Electrical Safety:** Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting. Do not immerse the appliance, power cord, or plug in water or any other liquid.
- **Children and Vulnerable Persons:** This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- **Hot Surfaces:** The heating element surface is subject to residual heat after use. Avoid contact with hot surfaces.
- **Placement:** Place the appliance on a stable, flat, heat-resistant surface, away from hot gas or electric burners and heated ovens.
- **Maintenance:** Do not attempt to repair the appliance yourself. Contact authorized service personnel for any repairs.

PRODUCT COMPONENTS

The Philips L'OR LM9012/40 Double Espresso Machine includes the following main components:

- Espresso Machine Unit
- Water Tank
- Drip Tray
- Capsule Container
- Power Cord (EU plug type)

Note: Specific accessories may vary by region.

SETUP

1. **Unpacking:** Carefully remove all packaging materials and ensure all components are present.
2. **Placement:** Place the machine on a stable, level, and heat-resistant surface near a power outlet. Ensure there is enough space around the machine for ventilation.
3. **Initial Cleaning:** Before first use, wash the water tank, drip tray, and capsule container with warm water and a mild detergent. Rinse thoroughly and dry.
4. **Filling the Water Tank:** Fill the water tank with fresh, cold drinking water up to the MAX level indicator. Place the water tank back into its position on the machine.
5. **First Use / Priming:**
 - Plug the machine into a grounded power outlet.
 - Place a cup under the coffee spout.
 - Press the power button to turn on the machine. It will start heating up.
 - Once the machine is ready (indicator light stops blinking), press any coffee button to run a cycle without a capsule. This primes the system and cleans internal components. Repeat this process 2-3 times.

OPERATING INSTRUCTIONS

Brewing Espresso

1. **Power On:** Ensure the water tank is filled and the machine is plugged in. Press the power button to turn on the machine. Wait for the machine to heat up (indicator light will stop blinking).
2. **Insert Capsule:** Open the lever and insert a L'OR Barista capsule into the capsule holder. Close the lever firmly.
3. **Place Cup:** Place your desired cup(s) under the coffee spout. For double espresso, ensure you use a cup large enough or two separate cups.
4. **Select Coffee:** On the touch screen interface, select your desired coffee type (e.g., Ristretto, Espresso, Lungo, or Double Espresso). The machine will automatically brew the selected beverage.
5. **Eject Capsule:** After brewing, open the lever to eject the used capsule into the internal capsule container. Close the lever.

Adjusting Coffee Volume

You can customize the volume of your coffee for each setting:

- Start brewing your desired coffee.
- Press and hold the coffee button again when the desired volume is reached. The machine will remember this setting for future brews of that specific coffee type.

MAINTENANCE

Daily Cleaning

- **Drip Tray:** Empty and rinse the drip tray daily or when the indicator floats up.
- **Capsule Container:** Empty the used capsule container daily and rinse it with water.
- **Water Tank:** Rinse the water tank daily and refill with fresh water.
- **Exterior:** Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners.

Descaling

Descaling is essential to maintain machine performance and coffee quality. The frequency depends on water hardness and usage. Refer to the full instruction manual or Philips support website for detailed descaling instructions and recommended descaling solutions.

- Use only descaling solutions recommended by Philips.
- Follow the instructions provided with the descaling solution carefully.
- Rinse the machine thoroughly after descaling to remove any residue.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine does not turn on.	No power supply.	Check if the power plug is securely inserted into the wall socket and the machine.
No coffee is dispensed.	Water tank empty; machine not primed; capsule not inserted correctly.	Fill the water tank; prime the machine (see Setup); ensure capsule is correctly placed and lever is closed.
Coffee is cold or lukewarm.	Machine not fully heated; cups not preheated.	Wait for the machine to fully heat up; preheat your cups with hot water.
Water leaks from the machine.	Water tank not correctly positioned; drip tray full.	Ensure the water tank is properly seated; empty the drip tray.
Machine requires descaling.	Mineral buildup from water.	Perform a descaling cycle as per the Maintenance section.

If you encounter issues not listed here, or if the problem persists, please contact Philips customer support.

SPECIFICATIONS

Brand Name	Philips
Model Name	L'OR LM9012/40 (Dynamica Plus)
Model Number	S7194930
Coffee Machine Type	Espresso Coffee Machine (Capsule)

Compatible Coffee Capsules	L'OR Barista
Operating Mode	Fully Automatic
Pressure	19 Bar
Water Tank Capacity	2 Liters
Wattage	1450 Watts
Voltage	230 Volts
Color	Emerald Green
Product Dimensions (D x W x H)	28cm x 25cm x 35cm
Item Weight	4.64 kg
Materials	Plastic
Human Interface Input	Touch Screen
Special Features	More than 24 functions
Manufacturing Year	2023
Dishwasher Safe Components	No

WARRANTY AND SUPPORT

The provided product data indicates "No" for warranty description. For detailed warranty information specific to your region and purchase, please refer to the documentation included with your product or visit the official Philips website. For customer support, technical assistance, or to find authorized service centers, please visit the official Philips support website: www.philips.com/support.

