#### Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- Walker Edison /
- Walker Edison Contemporary Detailed 6-Drawer Solid Wood Dresser (BR60BRX6DCA-T) User Manual

#### Walker Edison BR60BRX6DCA-T

# Walker Edison Contemporary Detailed 6-Drawer Solid Wood Dresser User Manual

Brand: Walker Edison | Model: BR60BRX6DCA-T

#### Introduction

Thank you for choosing the Walker Edison Contemporary Detailed 6-Drawer Solid Wood Dresser. This manual provides essential information for the safe assembly, operation, and maintenance of your new furniture. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

## SAFETY INFORMATION

While specific safety information is not provided in detail, general furniture safety practices should always be followed:

- Always assemble the dresser on a soft, clean surface to prevent damage.
- Ensure all hardware is securely tightened before use. Periodically check and re-tighten as necessary.
- Do not allow children to climb on or play with the dresser.
- Always use the included anti-tip hardware to secure the dresser to a wall. This prevents accidental tipping and serious injury.
- · Do not overload drawers. Distribute weight evenly.

#### PACKAGE CONTENTS

Before beginning assembly, verify that all components are present. If any parts are missing or damaged, please contact customer support.

- Dresser Top Panel
- Side Panels (2)
- Bottom Panel
- Back Panel
- Drawer Fronts (6)
- Drawer Side Panels (12)

- Drawer Back Panels (6)
- Drawer Bottom Panels (6)
- Legs (4-6, depending on design)
- Hardware Pack (screws, dowels, cam locks, drawer slides, anti-tip kit)

#### SETUP AND ASSEMBLY INSTRUCTIONS

Assembly is required for this dresser. It is recommended that two adults perform the assembly. Tools typically required include a Phillips head screwdriver and a hammer.



Image: The assembled Walker Edison 6-Drawer Dresser in Caramel finish, showcasing its contemporary design and six spacious drawers.

## **Step 1: Prepare the Workspace**

Clear a spacious area and lay out all components on a soft, clean surface (e.g., a blanket or carpet) to prevent scratches. Identify all parts and hardware using the provided list.

## **Step 2: Assemble the Main Frame**

- 1. Attach the side panels to the bottom panel using the designated hardware (e.g., dowels and cam locks).
- 2. Secure the top panel to the assembled sides.
- 3. Carefully attach the back panel to the frame, ensuring it is flush and square.



Image: A diagram illustrating the dimensions of the dresser: 32.88 inches high, 59.75 inches wide, and 18.31 inches deep.

## **Step 3: Install Drawer Slides**

Attach the drawer slides to the interior of the dresser frame according to the pre-drilled holes. Ensure they are level and aligned for smooth drawer operation.

## **Step 4: Assemble Drawers**

- 1. Connect the drawer side panels to the drawer front and back panels.
- 2. Slide the drawer bottom panel into the grooves.
- 3. Attach the remaining drawer slide components to the assembled drawer box.



Image: A close-up view of an open drawer, highlighting the solid wood construction and the wooden drawer glides.

## Step 5: Attach Legs

Securely fasten the dresser legs to the bottom panel of the dresser using the provided screws.

## **Step 6: Insert Drawers**

Carefully slide each assembled drawer into its corresponding slot in the dresser frame. Ensure they open and close smoothly.



Image: The dresser with several drawers partially open, demonstrating the smooth operation and storage capacity.

## **Step 7: Install Anti-Tip Hardware**

For safety, attach the anti-tip kit to the back of the dresser and to a wall stud using the provided instructions. This step is crucial to prevent tipping accidents.

#### **OPERATING INSTRUCTIONS**

Your Walker Edison dresser is designed for ease of use and durability.

- **Drawer Operation:** The drawers are equipped with solid wood glides for smooth opening and closing. Pull and push drawers gently and evenly.
- Weight Capacity: Avoid placing excessive weight in drawers or on the dresser top. Distribute items

evenly to prevent strain on the structure and glides.

• Placement: Position the dresser on a level surface to ensure stability and proper drawer alignment.

#### MAINTENANCE

Proper care will help maintain the appearance and longevity of your solid wood dresser.

- **Cleaning:** Wipe with a dry cloth. Avoid abrasive cleaners, harsh chemicals, or excessive moisture, which can damage the wood finish.
- Spills: Blot spills immediately with a clean, dry cloth.
- Sunlight: Avoid prolonged exposure to direct sunlight, which can cause fading or discoloration.
- Humidity: Maintain a consistent humidity level in the room to prevent wood from expanding or contracting, which can lead to cracks or warping.

#### **T**ROUBLESHOOTING

Problem	Possible Cause	Solution
Drawers stick or do not slide smoothly	Misaligned drawer slides, loose hardware, uneven floor	Check and tighten all drawer slide hardware. Ensure the dresser is on a level surface. Apply a small amount of paraffin wax or silicone spray to wooden glides if needed.
Dresser wobbles	Uneven floor, loose leg attachments, loose frame hardware	Adjust leg levelers if present, or place shims under legs. Tighten all frame and leg hardware. Ensure anti-tip kit is properly installed.
Minor scratches or dents	Accidental impact during use	For minor scratches, use a wood repair marker or furniture polish.  For deeper dents, consult a furniture repair specialist.

#### **SPECIFICATIONS**

• Brand: Walker Edison

• Model Name: Contemporary

• Model Number: BR60BRX6DCA-T

Product Dimensions: 17.25"D x 59.75"W x 32.88"H

• Color: Caramel-t

Furniture Finish: CaramelItem Weight: 96 PoundsAssembly Required: Yes

• Material: Solid Pine Wood (responsibly sourced)

• UPC: 840357730164

## WARRANTY INFORMATION

This Walker Edison dresser comes with a **Limited Warranty**. For specific details regarding coverage, duration, and terms, please refer to the warranty documentation included with your purchase or contact Walker Edison customer support directly. Generally, a limited warranty covers manufacturing defects under

normal use for a specified period.

## CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need replacement parts, please contact Walker Edison customer support:

Phone: 1-801-433-3008

Email: service@walkeredison.com

 
Replacement parts are available. Please contact Walker Edison within 30 days of delivery for any issues.

#### Related Documents - BR60BRX6DCA-T



## Walker Edison Bronx 6-Drawer Dresser Assembly Guide

Comprehensive assembly guide for the Walker Edison Bronx 6-Drawer Dresser, featuring estimated assembly time, required tools, safety warnings, detailed step-by-step instructions, and parts lists for a successful setup.



#### 6-Drawer Solid Wood Dresser Assembly Instructions

Detailed assembly guide for the Walker Edison 6-Drawer Solid Wood Dresser, including parts list, hardware, and step-by-step instructions for easy setup.



#### Walker Edison Isla 6 Drawer Solid Wood Dresser Assembly Guide

Detailed assembly instructions and parts list for the Walker Edison Isla 6 Drawer Solid Wood Dresser. This guide helps users efficiently assemble their furniture with clear steps and safety tips.



#### 20" Solid Wood 1 Drawer Nightstand Assembly Instructions

Step-by-step assembly guide for the 20" Solid Wood 1 Drawer Nightstand, including parts list, hardware list, and important safety information. Learn how to assemble your new nightstand efficiently.



## Walker Edison Adair 70" Sloane Adair Solid Wood TV Stand Assembly Instructions

Detailed assembly instructions for the Walker Edison Adair 70" Sloane Adair Solid Wood TV Stand (SKU: W70ADR2D). Includes parts list, hardware list, and step-by-step guidance for easy setup.



## Walker Edison KOAD1D Round Dining Table Assembly Instructions

Step-by-step assembly instructions for the Walker Edison KOAD1D round dining table. Includes parts list, hardware list, and assembly guidelines.