

iJoy SS-KH7C-FS40

iJoy Disney Winnie The Pooh Wireless Bluetooth Speaker Instruction Manual

1. INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your iJoy Disney Winnie The Pooh Wireless Bluetooth Speaker. Please read this manual thoroughly before operating the device and retain it for future reference.

2. WHAT'S IN THE BOX

Carefully unpack your speaker and ensure all items are present:

- iJoy Disney Winnie The Pooh Wireless Bluetooth Speaker
- USB Charging Cable
- Backup AUX Cable
- Owners Manual (this document)

Party however you like!

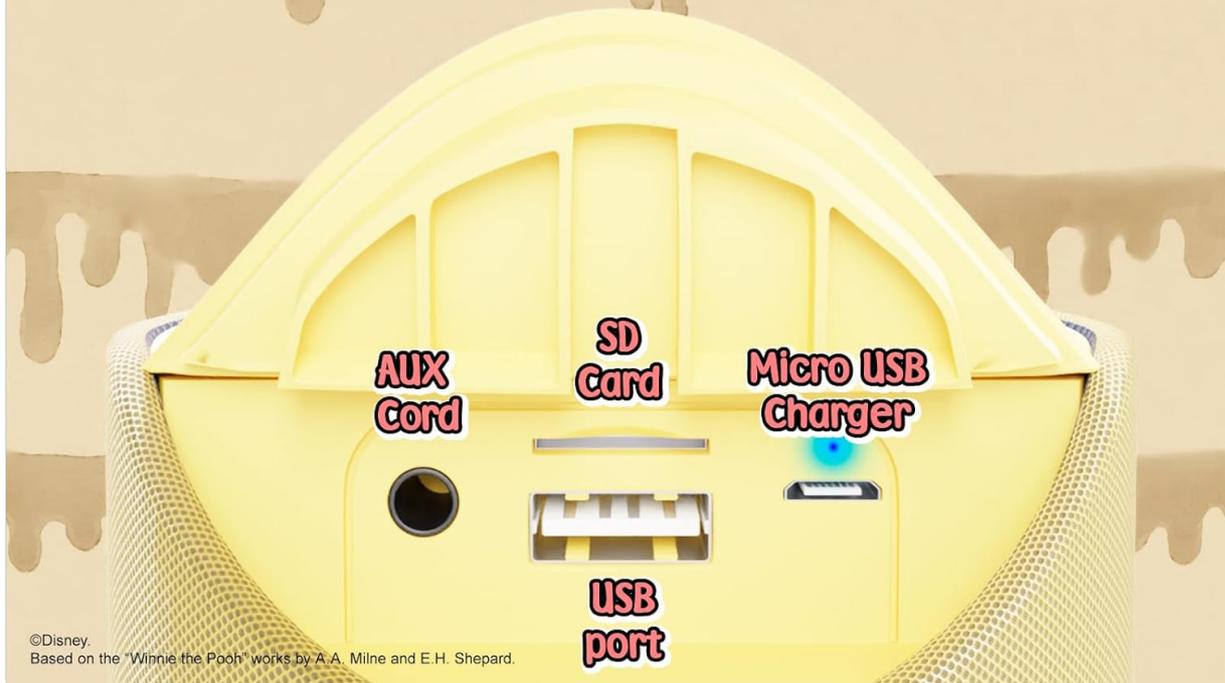


Image: The speaker shown next to its retail packaging, illustrating the product and its box.

3. PRODUCT OVERVIEW

3.1 Control Buttons

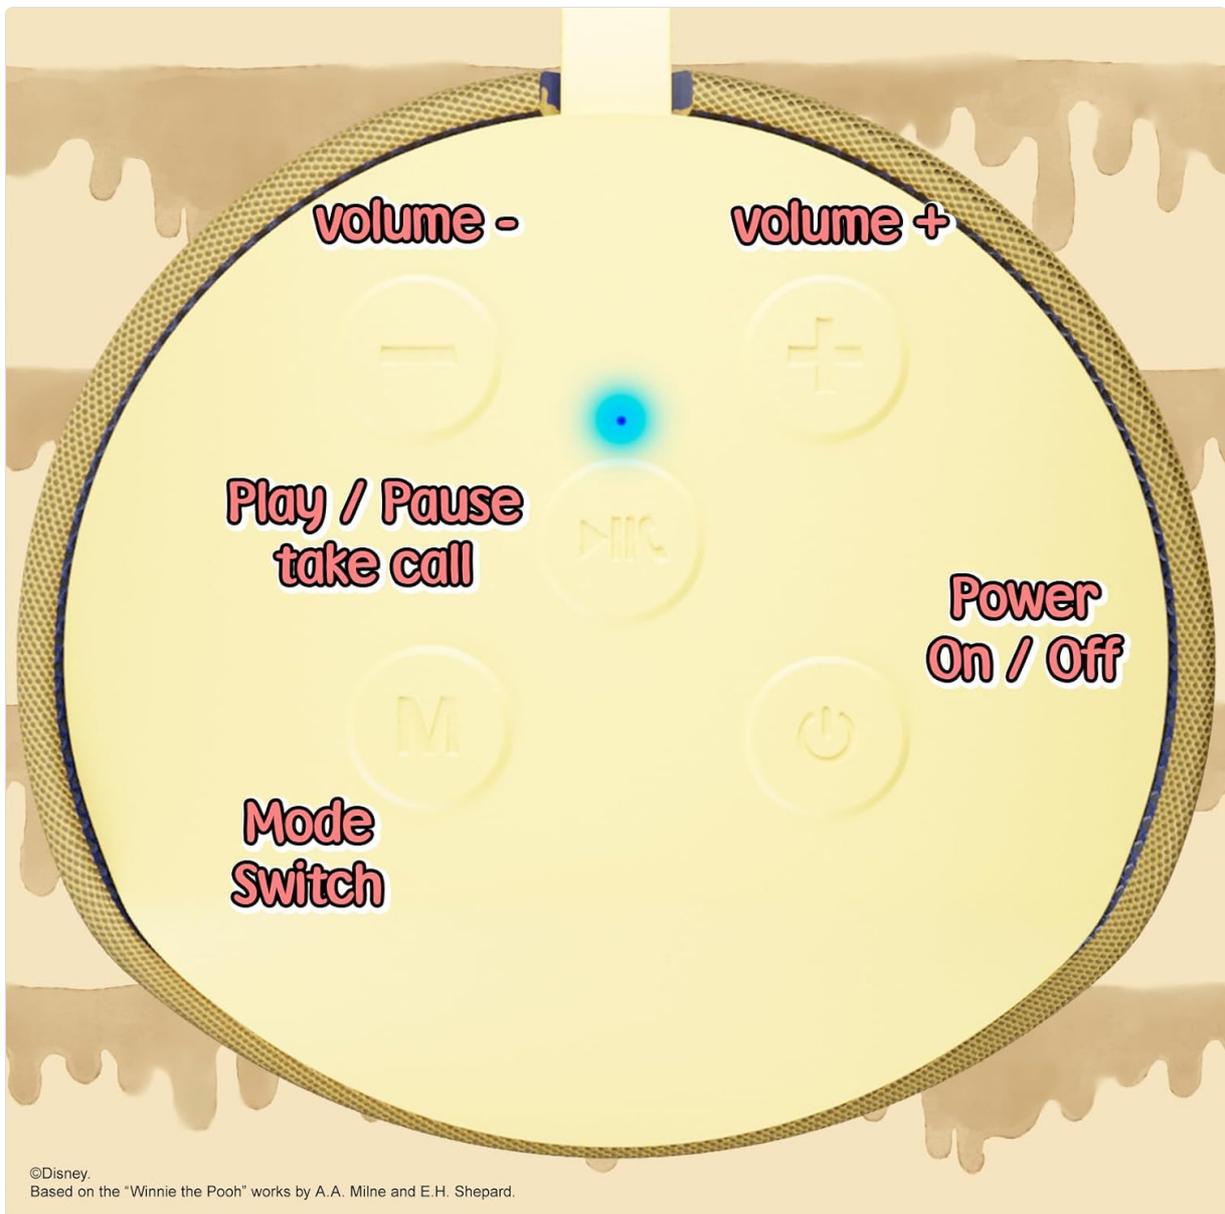


Image: A close-up of the speaker's top panel, displaying the control buttons.

- **Power On/Off Button:** Press and hold to power the speaker on or off.
- **Play/Pause Button:** Press to play or pause audio. Also used to answer or end phone calls.
- **Volume Up (+) Button:** Press to increase volume. Press and hold to skip to the next track.
- **Volume Down (-) Button:** Press to decrease volume. Press and hold to go to the previous track.
- **Mode Switch (M) Button:** Press to switch between Bluetooth, FM Radio, SD Card, and USB modes.

3.2 Ports and Indicators

Take it anywhere

6.3 Inches
Tall

2.9 Inches
Across



©Disney.
Based on the "Winnie the Pooh" works by A.A. Milne and E.H. Shepard.

Image: A detailed view of the speaker's rear panel, highlighting the AUX port, SD card slot, USB port, and Micro USB charging port.

- **AUX Port:** For connecting external audio devices via the provided 3.5mm AUX cable.
- **SD Card Slot:** Insert a microSD card for direct audio playback.
- **USB Port:** Insert a USB flash drive for direct audio playback.
- **Micro USB Charging Port:** Connect the USB charging cable here to charge the speaker.
- **LED Indicator Light:** Indicates charging status and Bluetooth pairing status.

4. SETUP

4.1 Charging the Speaker

1. Connect the Micro USB end of the charging cable to the speaker's Micro USB charging port.
2. Connect the standard USB end of the cable to a USB power adapter (not included) or a computer's USB port.
3. The LED indicator light will illuminate during charging and turn off once fully charged.
4. A full charge typically takes approximately 2 hours.

4.2 Bluetooth Pairing

1. Ensure the speaker is fully charged.
2. Press and hold the Power On/Off button to turn on the speaker. You will hear an audible prompt, and the LED indicator will flash, indicating it's in pairing mode.
3. On your mobile device (smartphone, tablet, etc.), enable Bluetooth.
4. Search for available Bluetooth devices. The speaker will appear as "iJoy Winnie The Pooh Speaker" or similar.
5. Select the speaker from the list to pair. Once successfully paired, you will hear a confirmation sound, and the LED indicator will stop flashing and remain solid.
6. The speaker will automatically reconnect to the last paired device when powered on, if the device's Bluetooth is active and within range.

5. OPERATING INSTRUCTIONS

5.1 Bluetooth Mode

After successful pairing, you can stream audio wirelessly from your device to the speaker. Use your device's controls or the speaker's Play/Pause, Volume Up/Down buttons to manage playback.

5.2 FM Radio Mode

1. Press the Mode (M) button to switch to FM Radio mode.
2. Press the Play/Pause button to automatically scan and save available FM stations.
3. Use the Volume Up (+) and Volume Down (-) buttons (short press) to navigate between saved stations.

5.3 SD Card / USB Playback

1. Insert a microSD card into the SD card slot or a USB flash drive into the USB port.
2. The speaker will automatically switch to the corresponding mode and begin playing audio files. If not, press the Mode (M) button to select the correct mode.
3. Use the speaker's Play/Pause, Volume Up/Down buttons to control playback.

5.4 AUX Mode

1. Connect one end of the provided 3.5mm AUX cable to the speaker's AUX port.
2. Connect the other end to the headphone jack of your audio device.
3. The speaker will automatically switch to AUX mode. If not, press the Mode (M) button.
4. Control playback and volume primarily from your connected audio device.

5.5 Hands-Free Calling

When connected via Bluetooth to a smartphone:

- **Answer Call:** Press the Play/Pause button once.
- **End Call:** Press the Play/Pause button once during a call.
- **Reject Call:** Press and hold the Play/Pause button.

6. MAINTENANCE

- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- The speaker is IPX4 splashproof, meaning it can withstand splashes of water. Do not submerge it in

water.

- Store the speaker in a cool, dry place when not in use.
- Avoid exposing the speaker to extreme temperatures, direct sunlight, or high humidity.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not turn on	Low battery	Charge the speaker fully.
Cannot pair via Bluetooth	Speaker not in pairing mode / Device Bluetooth off / Too far from device	Ensure speaker is in pairing mode (flashing LED). Turn on Bluetooth on your device. Move speaker closer to device (within 30 feet).
No sound	Volume too low / Incorrect mode / Device not playing audio	Increase speaker and device volume. Press 'M' button to select correct mode. Ensure audio is playing on your connected device.
FM radio reception is poor	Weak signal / Interference	Move the speaker to a different location. The AUX cable can act as an antenna; try connecting it.

8. SPECIFICATIONS



Image: The speaker with visual indicators showing its height of 6.3 inches and width of 2.9 inches.

Feature	Detail
Model Number	SS-KH7C-FS40
Connectivity Technology	Bluetooth
Wireless Communication Range	Up to 30 feet (10 meters)
Speaker Type	Tower
Speaker Maximum Output Power	20 Watts
Audio Output Mode	Mono
Battery Capacity	800 Milliamp Hours
Charging Time	Approximately 2 Hours
Playtime	Up to 3 Hours (depending on volume and usage)

Feature	Detail
Water Resistance Level	IPX4 (Splashproof)
Product Dimensions	3"D x 3"W x 6"H (7.62 cm D x 7.62 cm W x 15.24 cm H)
Item Weight	8 Ounces (226.8 grams)
Included Components	Bluetooth Speaker, USB Charging Cable, Backup AUX Cable, Owners Manual
Special Features	Built-in Microphone, LED Indicator Lights, Portable, SD Card Slot, USB Port, FM Radio

9. WARRANTY AND SUPPORT

9.1 Warranty Information

This iJoy Disney Winnie The Pooh Wireless Bluetooth Speaker comes with a 90-day manufacturer's warranty from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

9.2 Customer Support

For technical assistance, warranty claims, or further inquiries, please contact iJoy customer support through their official website or the retailer where the product was purchased. Please have your model number (SS-KH7C-FS4O) and proof of purchase ready.