

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Dehuka](#) /

› DEHUKA Wireless Gaming Controller for Nintendo Switch and PC User Manual

## Dehuka Joystick Gamer B0CTBCL2DS

# DEHUKA Wireless Gaming Controller for Nintendo Switch and PC User Manual

Model: Joystick Gamer B0CTBCL2DS

## 1. INTRODUCTION

Thank you for choosing the DEHUKA Wireless Gaming Controller. This manual provides detailed instructions for setting up, operating, and maintaining your controller, ensuring an optimal gaming experience on your Nintendo Switch, Switch Lite, Switch OLED, or PC.

## 2. PRODUCT OVERVIEW

### 2.1 Key Features

- Precise and ergonomic control for comfortable gaming on Nintendo Switch and PC.
- Wireless Bluetooth or wired USB-C connection for flexibility.
- LED indicator light and turbo functions for enhanced in-game control.
- Immersive experience with dual vibration motors for realistic tactile feedback.
- Compatible with Nintendo Switch, Switch Lite, Switch OLED, and PC.
- Durable ABS and leather design with a modern black and white aesthetic.
- Easy plug-and-play setup.
- Features a wake-up button, six-axis gyroscope, and multi-function buttons.
- Customizable gaming experience with programmable buttons and sensitivity adjustments.
- Integrated headphone jack and speaker for immersive audio.

### 2.2 Package Contents

- DEHUKA Wireless Gaming Controller
- USB-C Charging Cable
- User Manual

## 2.3 Controller Layout

The DEHUKA Wireless Gaming Controller features a standard layout with ergonomic grips, ensuring comfort during extended gaming sessions. Key components include dual analog sticks, a D-pad, action buttons (A, B, X, Y), shoulder buttons (L, R, ZL, ZR), and special function buttons like Turbo, Home, and Screenshot.



Image: Front view of the DEHUKA Wireless Gaming Controller, showcasing its white and black design with teal and green accents on the joysticks and grips. The controller features a D-pad, ABXY buttons, dual analog sticks, and central function buttons.

## DISEÑO ERGONÓMICO




Image: Close-up view highlighting the ergonomic design, macro button, and the R1/R2 shoulder buttons of the DEHUKA controller.

### 3. SETUP INSTRUCTIONS

#### 3.1 Charging the Controller

Before initial use, fully charge the controller. Connect the included USB-C cable to the controller's charging port and the other end to a USB power source (e.g., Nintendo Switch dock, PC, or USB wall adapter). The LED indicator lights will show charging status and turn off or change color when fully charged.

# BATERÍA RECARGABLE

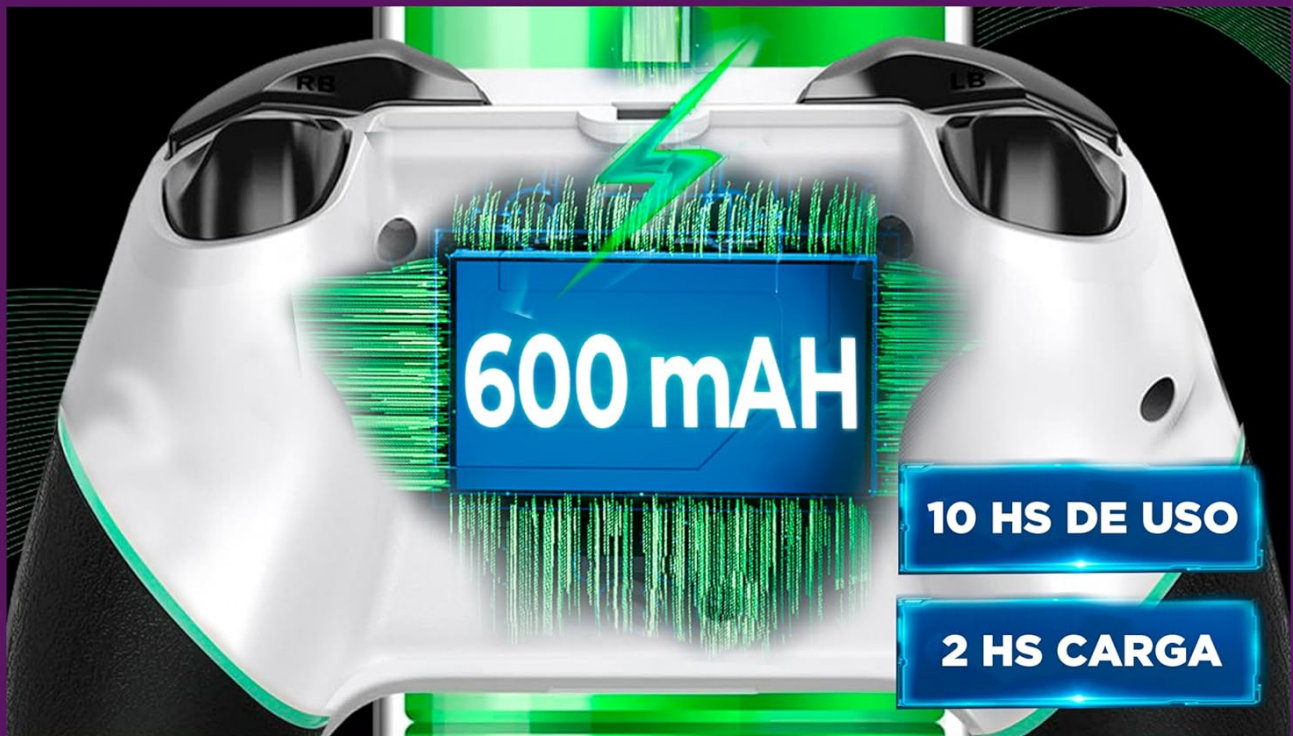

 **DEHUKA**

Image: Illustration showing the controller's internal 600mAh rechargeable battery, indicating approximately 10 hours of use and 2 hours of charging time.

## 3.2 Connecting to Nintendo Switch (Wireless)

1. On your Nintendo Switch console, go to the HOME Menu.
2. Select 'Controllers' > 'Change Grip/Order'.
3. Press and hold the 'Home' button on the DEHUKA controller for a few seconds until the LED indicators start flashing rapidly.
4. Once connected, the LED indicators on the controller will light up solid, and the controller will appear on the Switch screen.

# COMPATIBLE CON SWITCH



Image: A hand holding the DEHUKA controller, playing a game on a Nintendo Switch console, demonstrating its compatibility.

## 3.3 Connecting to PC (Wireless/Wired)

### Wireless Connection (Bluetooth):

1. Ensure your PC has Bluetooth enabled.
2. Go to 'Settings' > 'Devices' > 'Bluetooth & other devices' and select 'Add Bluetooth or other device'.
3. Select 'Bluetooth'.
4. Press and hold the 'Home' button on the DEHUKA controller until the LED indicators flash rapidly.
5. Select the DEHUKA controller from the list of available devices on your PC and follow any on-screen prompts.

### Wired Connection (USB-C):

1. Connect the USB-C cable to the controller and the other end to an available USB port on your PC.
2. The PC should automatically detect and install the necessary drivers. The controller will be ready for use once the installation is complete.

# CONEXIÓN INALÁMBRICA



 **DEHUKA**

Image: Two DEHUKA controllers wirelessly connected to a gaming console, illustrating an 8-meter wireless range.

## 4. OPERATING INSTRUCTIONS

### 4.1 Basic Controls

The controller features standard gaming buttons:

- **Analog Sticks:** For movement and camera control.
- **D-Pad:** For directional input, often used in menus or 2D games.
- **A/B/X/Y Buttons:** Action buttons for in-game commands.
- **L/R/ZL/ZR Buttons:** Shoulder and trigger buttons for various actions.
- **Home Button:** Returns to the console's home menu.
- **Screenshot Button:** Captures a screenshot of your gameplay.
- **Wake-up Button:** Can wake up the connected console from sleep mode.

### 4.2 Turbo Function

The Turbo function allows a button to be pressed repeatedly as long as it is held down, useful for rapid-fire actions. To activate:

1. Press and hold the 'Turbo' button.
2. While holding 'Turbo', press the action button you wish to assign the Turbo function to (e.g., A, B, X, Y, L, R, ZL, ZR).
3. Release both buttons. The assigned button will now have the Turbo function enabled.

To deactivate, repeat the process: hold 'Turbo' and press the assigned action button again.

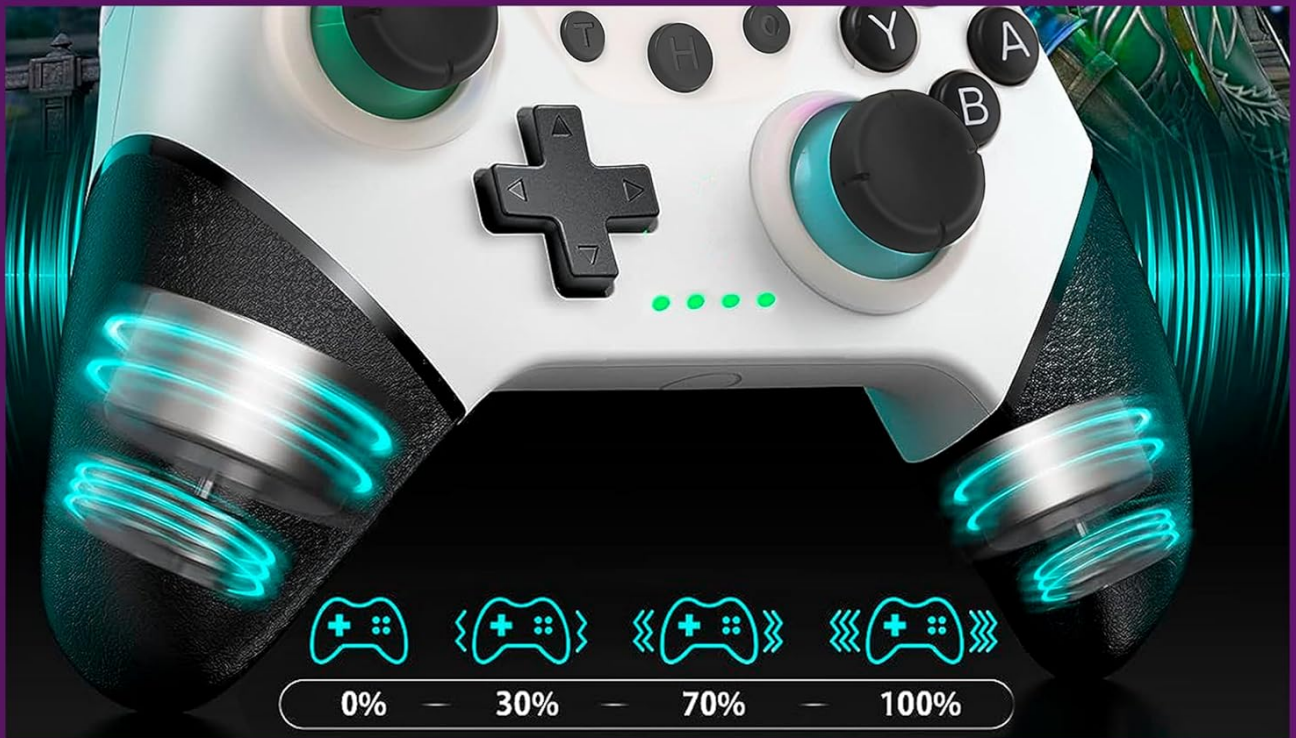


Image: The DEHUKA controller with an overlay highlighting the 'T' (Turbo) button and its effect in a game scene, indicating rapid input.

### 4.3 Vibration Adjustment

The controller features dual vibration motors for realistic feedback. Vibration intensity can often be adjusted through the connected console's settings or, if supported, directly on the controller by specific button combinations (refer to console settings for details).

## VIBRACIÓN DUAL



 **DEHUKA**

Image: Illustration of the controller's dual vibration feature, showing different intensity levels (0%, 30%, 70%, 100%) through visual waves emanating from the grips.

### 4.4 Gyroscope Function

The built-in six-axis gyroscope allows for motion control in compatible games, providing an immersive and intuitive gaming experience. This function is automatically enabled when connected to a compatible system like the Nintendo Switch.

# PALANCA 360°



ERGONÓMICO

 **DEHUKA**

Image: An illustration showing the 360-degree movement capability of the joystick, emphasizing the ergonomic design of the controller, with a racing game in the background.

## 4.5 Programmable Buttons and Sensitivity

The controller supports programmable buttons and sensitivity adjustments to customize your gaming experience. Refer to specific game or console settings for options to remap buttons or fine-tune analog stick sensitivity.

## 4.6 Audio Connection

The integrated headphone jack allows you to connect your headphones for immersive audio directly through the controller, enhancing your gaming experience without disturbing others.

## 5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the controller. Do not use harsh chemicals or abrasive materials.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the controller frequently. Charge it regularly, even if not in use for extended periods.

## 6. TROUBLESHOOTING

- **Controller not connecting:** Ensure the controller is charged. Try re-pairing the controller by following the setup instructions. For PC, check Bluetooth settings or try a wired connection.
- **Input lag or disconnection:** Ensure the controller is within the 8-meter wireless range. Reduce interference from other wireless devices. For PC, try updating Bluetooth drivers.

- **Buttons not responding:** Check if the controller is properly connected. Restart the console/PC and the controller.
- **Vibration not working:** Check game settings and console settings to ensure vibration is enabled.
- **Controller not charging:** Ensure the USB-C cable is securely connected and the power source is functional. Try a different cable or power source.

## 7. SPECIFICATIONS

- **Model:** DEHUKA Joystick Gamer (B0CTBCL2DS)
- **Connectivity:** Bluetooth Wireless, USB-C Wired
- **Wireless Range:** Up to 8 meters
- **Battery:** 600mAh Rechargeable Lithium-ion
- **Charging Time:** Approximately 2 hours
- **Usage Time:** Approximately 10 hours
- **Compatibility:** Nintendo Switch, Switch Lite, Switch OLED, PC
- **Features:** Dual Vibration, Six-axis Gyroscope, Turbo Function, Wake-up Function, Programmable Buttons, Headphone Jack
- **Material:** ABS, Leather



Image: An infographic summarizing key features of the DEHUKA controller, including Turbo, Vibration, Gyroscope, Steam compatibility, 8-meter range, 600mAh battery, versatility, LED indicator, and Plug & Play functionality.

## 8. WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For warranty claims, technical support, or further assistance, please contact DEHUKA customer service through your purchase platform or the official DEHUKA website. Please retain your proof of purchase for warranty validation.

