

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Sharper Image](#) /

› [Sharper Image Mecha Rivals Remote Control Ejecting Battle Robots Instruction Manual](#)

Sharper Image 1242020751

Sharper Image Mecha Rivals Remote Control Ejecting Battle Robots

Model: 1242020751

INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your Sharper Image Mecha Rivals Remote Control Ejecting Battle Robots. Please read this manual thoroughly before use to ensure proper function and safety.



Image: Sharper Image Mecha Rivals Battle Robots in their retail packaging, showing the blue and white robots and their respective controllers.

SAFETY INFORMATION

WARNING:

- May contain small parts not suitable for children under 3 years of age.
- Adult supervision is recommended during play.
- Do not operate robots near stairs, furniture, or other obstacles to prevent damage or injury.
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Remove batteries from robots and remote controls when not in use for extended periods.

PACKAGE CONTENTS

Ensure all items are present before beginning setup:

- 1x Blue Battle Robot (Jib)
- 1x White Battle Robot (Jab)
- 1x Blue Remote Control (for Jib)
- 1x White Remote Control (for Jab)
- 2x Ejecting Pilot Figures



Image: The blue and white battle robots, their respective remote controls, and two small pilot figures.

SETUP

1. Battery Installation

Batteries required (not included): Refer to the product packaging for specific battery requirements for each robot and remote control unit. Typically, each robot and remote control requires AA batteries.

1. Locate the battery compartment on the underside of each robot and on the back of each remote control.
2. Using a small screwdriver (not included), open the battery compartment cover.
3. Insert the required batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

2. Pilot Installation

Place the small pilot figures into the designated ejector seats on top of each robot. Ensure they are seated securely.

OPERATING INSTRUCTIONS

1. Powering On

Turn on each robot and its corresponding remote control using the ON/OFF switches. The robots and remotes will automatically pair via infrared technology.



Image: Close-up of the blue robot, highlighting its light-up target and sound effects, and the wireless infrared control feature.

2. Basic Controls (Refer to Remote Control Layout)

- **Left Joystick:** Controls forward and backward movement.
- **Right Joystick:** Controls turning left and right.
- **Left Punch Button:** Initiates a left arm punch.
- **Right Punch Button:** Initiates a right arm punch.

3. Battle Modes

The Mecha Rivals offer two primary modes of play:

- **Versus Mode (Two Players):** Each player controls one robot. The objective is to hit the opponent's chest plate twice. The first robot to have its pilot ejected twice loses the round.
- **Solo Mode (Single Player):** Practice your skills against the AI-controlled robot.



Image: Close-up of the white robot, illustrating the "Dual Modes" for play and the "Ejector Seats" feature where the pilot launches upon impact.

4. Winning a Battle

To win a battle, successfully land two punches on your opponent's chest plate. Each successful hit will trigger lights and sounds, and the second hit will cause the opponent's pilot to eject, signifying victory.



Image: The blue and white robots engaged in battle, with their respective remote controls shown in the foreground.

MAINTENANCE

- **Cleaning:** Wipe robots and remote controls with a dry, soft cloth. Do not use water or cleaning solutions.
- **Storage:** Store the robots and remote controls in a cool, dry place away from direct sunlight when not in use. Remove batteries for long-term storage.
- **Battery Replacement:** Replace batteries when performance diminishes.

TROUBLESHOOTING

Problem	Solution
Robot not responding to remote.	<p>Ensure both robot and remote are powered ON.</p> <p>Check battery levels in both robot and remote; replace if low.</p> <p>Ensure there are no obstructions between the remote and robot's infrared sensors.</p> <p>Try re-pairing by turning both devices off and then on again.</p>

Problem	Solution
Robot moves slowly or erratically.	Replace batteries in the robot. Ensure the play surface is smooth and clear of debris.
Pilot not ejecting after hits.	Ensure the pilot figure is correctly seated in the ejector seat. Verify that the hits are directly on the chest plate target. Check battery levels.

SPECIFICATIONS

Feature	Detail
Model Number	1242020751
Brand	Sharper Image
Product Type	Remote Control Ejecting Battle Robots
Recommended Age	8 - 16 years (Manufacturer recommended minimum age: 96 months)
Material	Plastic
Control Technology	Infrared Wireless Control
Features	Lights, Sounds, Ejector Seats, Dual Play Modes (Versus/Solo)
Batteries Required	Yes (AA batteries, not included. Refer to packaging for exact quantity per unit.)
Assembly Required	No
Robot Height	Approximately 7.5 inches (based on image PT03)
Pilot Height	Approximately 3 inches (based on image PT03)

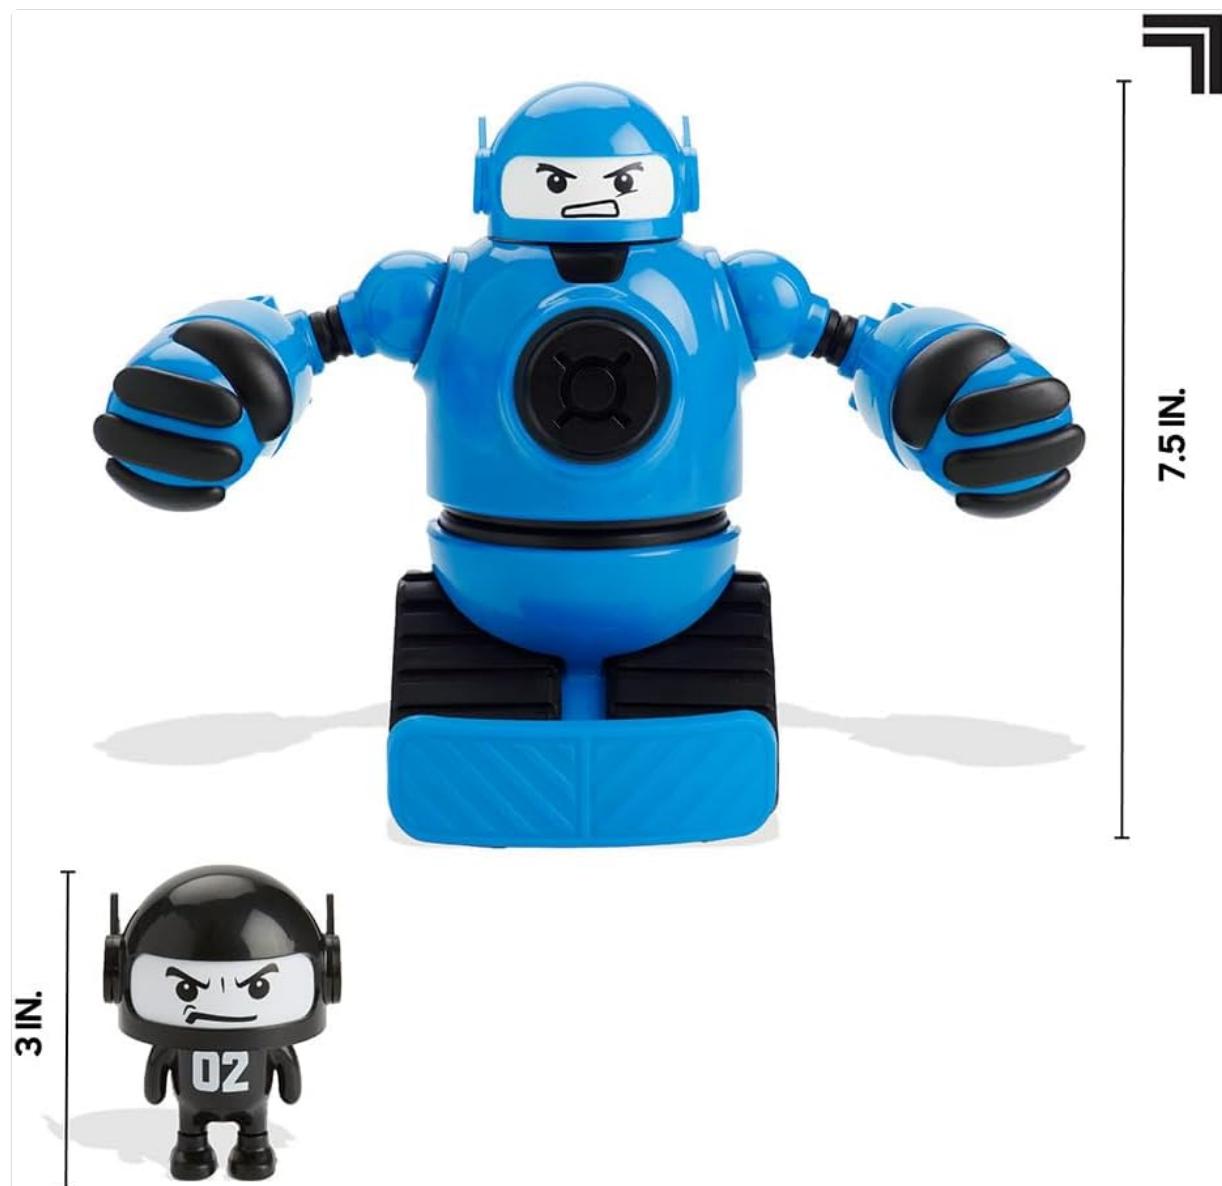


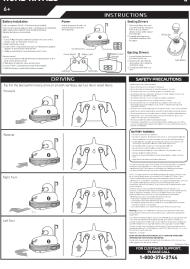
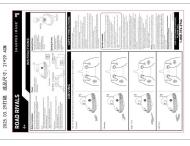
 
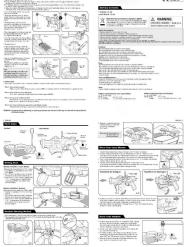
Image: A blue robot and a small pilot figure, with their approximate heights indicated as 7.5 inches and 3 inches respectively.

WARRANTY AND SUPPORT

Specific warranty information and direct customer support contact details are not provided in the product data. For warranty claims or technical assistance, please refer to the product packaging or contact Sharper Image customer service directly through their official website or the retailer where the product was purchased.

Related Documents - 1242020751

 SHARPER IMAGE Large Boxing Robots (Set of 2)	<u>Sharper Image Large Boxing Robots (Set of 2) Owner's Manual</u> This owner's manual provides instructions for setting up, operating, and troubleshooting the Sharper Image Large Boxing Robots (Set of 2), Item No. 204458. Learn how to control the robots, understand the game's objective, and manage battery replacements. Includes warranty and customer service information.
--	--

	<p>Road Rivals Remote Control Bumper Cars - Sharper Image Instructions</p> <p>Complete instructions and safety guidelines for operating the Sharper Image Road Rivals remote control bumper cars (Model 1012348). Learn about battery installation, driving controls, and safety precautions.</p>
	<p>Road Rivals RC Bumper Cars User Manual</p> <p>Instructions and safety precautions for operating Road Rivals RC Bumper Cars by Sharper Image. Learn about battery installation, driving controls, and important safety warnings.</p>
	<p>Sharper Image 12V Cruiser Motorcycle Ride-On: Assembly & Operation Manual</p> <p>Comprehensive assembly instructions, safety guidelines, operating procedures, and troubleshooting tips for the Sharper Image 12V Cruiser Motorcycle Ride-On (SKU: FR3838).</p>
	<p>Infrared Laser Tag Toy - Instruction Manual Sharper Image 206611</p> <p>Get started with your Sharper Image Infrared Laser Tag set (Item No. 206611). This comprehensive manual covers game rules, setup, battery installation, headset wearing, and blaster operation for ages 8 and up.</p>
	<p>Road Rivals Bumper Cars: Instructions and Safety Guide</p> <p>Comprehensive instructions for setting up and operating Road Rivals bumper cars by Sharper Image, including battery installation, driving controls, and essential safety precautions.</p>