

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [onerbl](#) /

› [onerbl 26.5V AC/DC Adapter User Manual for Hompany H18 Cordless Stick Vacuum Cleaner](#)

onerbl H18

onerbl 26.5V AC/DC Adapter User Manual

For Hompany H18 Cordless Stick Vacuum Cleaner

1. INTRODUCTION

Thank you for choosing the onerbl 26.5V AC/DC Adapter. This power supply is designed to provide reliable and efficient charging for your Hompany H18 Cordless Stick Vacuum Cleaner. Please read this manual carefully before use to ensure proper operation and safety.

2. IMPORTANT SAFETY INFORMATION

To prevent electric shock, fire, or damage to the product, please observe the following safety precautions:

- Use the adapter only with compatible devices, specifically the Hompany H18 Cordless Stick Vacuum Cleaner.
- Do not expose the adapter to water, rain, or excessive moisture.
- Avoid dropping or subjecting the adapter to strong impacts.
- Do not disassemble, modify, or attempt to repair the adapter. Refer servicing to qualified personnel.
- Ensure the power outlet voltage matches the adapter's input specifications (100-240V AC).
- Unplug the adapter from the power outlet when not in use or during electrical storms.
- Keep the adapter away from heat sources and direct sunlight.
- Do not operate the adapter with a damaged cord or plug.

3. PRODUCT OVERVIEW

The onerbl 26.5V AC/DC Adapter is a compact and efficient power solution. It features built-in protection mechanisms to safeguard your device and the adapter itself.

3.1 Adapter Components

The adapter consists of a main power brick with an integrated AC plug and an output cable with a DC connector.



Image 3.1: Front view of the onerbl 26.5V AC/DC Adapter, showing the main unit, integrated AC plug, and DC output cable.



Image 3.2: Front and side views of the adapter, illustrating its compact design.

3.2 Key Features

- **Universal Input:** Supports AC 100-240V, 50/60Hz for worldwide compatibility.
- **Output:** Provides stable 26.5V DC power.
- **Safety Protections:** Includes over voltage protection and over heat protection.
- **Quality Construction:** Tested units ensuring great working condition.

4. SETUP INSTRUCTIONS

Follow these steps to correctly set up and connect your onerbl AC/DC Adapter:

1. **Verify Compatibility:** Ensure your device is the Hompany H18 Cordless Stick Vacuum Cleaner and requires a 26.5V DC input.
2. **Connect to Device:** Insert the DC output connector of the adapter firmly into the charging port of your Hompany H18 vacuum cleaner.
3. **Connect to Power Outlet:** Plug the AC input plug of the adapter into a standard wall power outlet (100-240V AC).
4. **Confirm Connection:** Ensure both connections are secure. The vacuum cleaner's charging indicator (if

present) should activate, indicating it is receiving power.



Image 4.1: The adapter connected to a power strip, demonstrating a typical setup.

5. OPERATING INSTRUCTIONS

Once connected, the adapter will automatically begin supplying power to your Hompany H18 vacuum cleaner. No further user interaction is required for basic operation.

- The adapter is designed for continuous operation during charging.
- Monitor your vacuum cleaner's charging indicator to determine charging status.
- Disconnect the adapter from the power outlet and the vacuum cleaner once charging is complete or if the vacuum cleaner is not in use for an extended period.

6. MAINTENANCE

Proper care ensures the longevity and safe operation of your adapter:

- **Cleaning:** Disconnect the adapter from all power sources before cleaning. Use a soft, dry cloth to wipe the exterior. Do not use liquid cleaners or solvents.
- **Storage:** Store the adapter in a cool, dry place away from direct sunlight and extreme temperatures.

Avoid tightly winding the cable to prevent damage.

- **Inspection:** Periodically inspect the adapter's cable and plug for any signs of damage, such as cuts, fraying, or bent pins. If damage is found, discontinue use immediately.

7. TROUBLESHOOTING

If you encounter issues with your onerbl AC/DC Adapter, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device not charging	Adapter not properly plugged in; power outlet not active; device charging port issue; adapter malfunction.	Ensure adapter is securely plugged into both the wall outlet and the device. Test the outlet with another device. Check the device's charging port for debris or damage. If issues persist, the adapter may be faulty.
Adapter feels hot	Normal operation heat; excessive load; poor ventilation.	A slight warmth is normal during operation. Ensure the adapter is in a well-ventilated area and not covered. If it becomes excessively hot to touch, disconnect immediately and cease use.
Visible damage to cable/plug	Physical stress or wear.	Discontinue use immediately to prevent electrical hazards. Replace the adapter.

8. SPECIFICATIONS

Technical details for the onerbl 26.5V AC/DC Adapter:

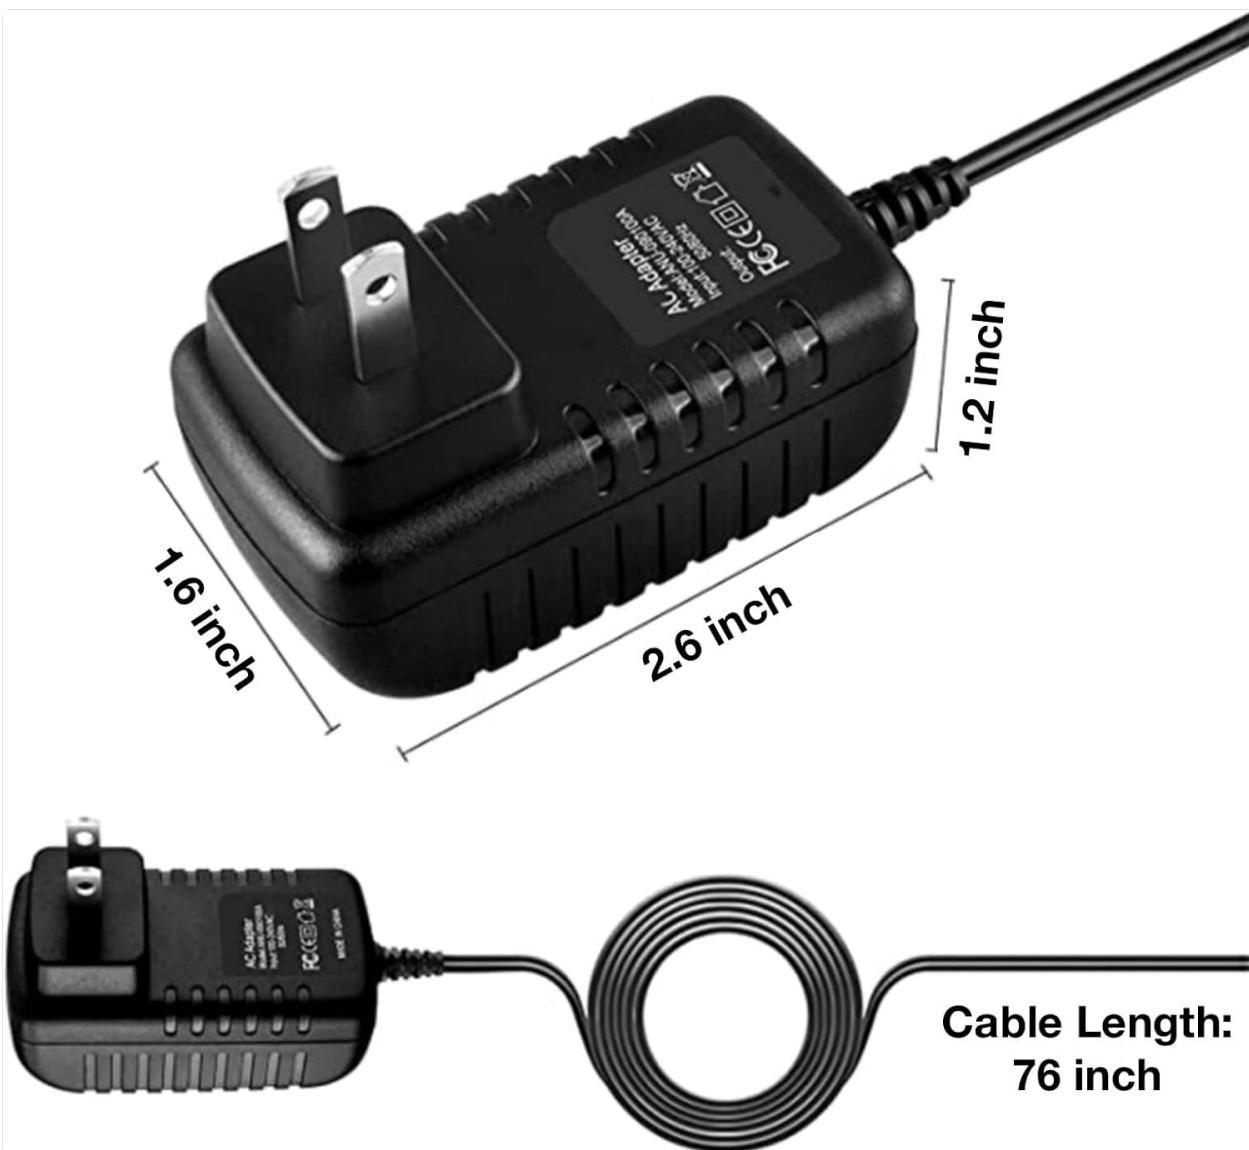


Image 8.1: Physical dimensions of the adapter (2.6 inch length, 1.6 inch width, 1.2 inch height) and cable length (76 inch).

Feature	Detail
Model Compatibility	Hompany H18 Cordless Stick Vacuum Cleaner
Input Voltage	AC 100-240V, 50/60Hz
Output Voltage	DC 26.5V
Cable Length	Approximately 76 inches (6.3 feet)
Protection Features	Over Voltage Protection, Over Heat Protection

9. WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support, please refer to the product packaging or contact the retailer from whom the product was purchased. Keep your purchase receipt as proof of purchase.

