



Manuals.plus /

› HOMEKANE /

› HOMEKANE Handheld Vacuum Cleaner User Manual

HOMEKANE GV08-4

HOMEKANE Handheld Vacuum Cleaner User Manual

Model: GV08-4

INTRODUCTION

Thank you for choosing the HOMEKANE Handheld Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new device. Please read it thoroughly before first use and retain it for future reference.



The HOMEKANE Handheld Vacuum Cleaner, designed for powerful and portable cleaning.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your HOMEKANE Handheld Vacuum Cleaner:

- Main Vacuum Unit
- Dust Cup (550ml capacity)
- HEPA Filter
- Brush Nozzle
- Flat Nozzle

- Extension Hose
- Charging Cable



Detailed view of the vacuum's components, including the switch, dust cup, HEPA filter, and air vents.

3 IN 1 MULTIFUNCTIONAL ACCESSORIES

Removing garbage from various corners



Brush Nozzle



Flat Nozzle



Extension Hose

The three versatile attachments: brush nozzle, flat nozzle, and extension hose, for various cleaning tasks.

SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Initial Charge:** Before first use, fully charge the vacuum cleaner. Connect the charging cable to the vacuum and a suitable power source. The charging time is approximately 3 hours.
3. **Attach Accessories:** Select the appropriate nozzle (brush, flat, or extension hose) for your cleaning needs and firmly attach it to the vacuum's suction port.

560G

LIGHTWEIGHT & WIRELESS



The lightweight and wireless design allows for easy maneuverability during cleaning.

OPERATING INSTRUCTIONS

1. **Power On/Off:** Locate the power switch on the main unit. Press it to turn the vacuum cleaner on. Press it again to turn it off.
2. **Cleaning:** Direct the nozzle towards the area to be cleaned. The 9500Pa powerful suction will effectively pick up dust, debris, and pet hair.
3. **Using Attachments:**
 - **Brush Nozzle:** Ideal for carpets, upholstery, and keyboards to dislodge and collect embedded dirt.
 - **Flat Nozzle:** Perfect for narrow gaps, crevices, and corners in your car or home.
 - **Extension Hose:** Provides extended reach for hard-to-access areas, such as under seats or behind furniture.
4. **Battery Life:** The upgraded 3x2000mAh rechargeable batteries provide a long runtime for extended cleaning sessions.

Homekane

Handheld Vacuum Cleaner Cordless



9500PA Powerful Suction



Washable HEPA Filter



Ergonomic Handle



69dB Low Noise



25-30Min Run Time



Durable Material



The vacuum's compact design makes it suitable for cleaning vehicle interiors.

Multiple Accessories




Extension Hose
For some hard-to-reach places



Flat Nozzle
For sofas, crevices and corners



Brush Nozzle
For pet hair, mats and keyboards

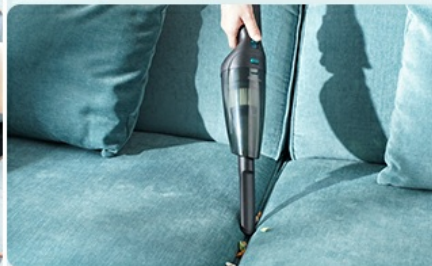

Demonstration of the vacuum's versatility with different attachments for various surfaces and tight spaces.

Note: No official product videos from the seller were available for embedding.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

1. Emptying the Dust Cup:

- Press the dust cup release button to detach the dust cup from the main unit.
- Empty the collected debris into a waste bin.

2. Cleaning the HEPA Filter and Dust Cup:

- Remove the HEPA filter from the dust cup.
- Rinse both the dust cup and the HEPA filter under running water until clean.
- Allow the filter and dust cup to air-dry completely before reassembling. Do not use a dryer or direct heat.

WASHABLE DUST CUP & HEPA FILTER



The dust cup and HEPA filter are designed for easy washing and reuse, ensuring consistent suction.



Visual steps for removing, emptying, cleaning, and air-drying the dust cup and filter.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is depleted.	Charge the vacuum cleaner fully.
Reduced suction power.	Dust cup is full or filter is clogged.	Empty the dust cup and clean the HEPA filter. Ensure filter is completely dry before reinserting.
Unusual noise during operation.	Obstruction in the nozzle or hose.	Turn off the vacuum and check for any blockages in the nozzle, extension hose, or suction inlet. Remove any obstructions carefully.
Vacuum stops unexpectedly.	Overheating due to prolonged use or blockage.	Turn off the vacuum and allow it to cool down for at least 30 minutes. Check for and clear any blockages.

SPECIFICATIONS

- **Brand:** HOMEKANE
- **Model Name:** Handheld Vacuum GV08-4
- **Special Feature:** Lightweight, Portable, Washable Filter
- **Filter Type:** HEPA Filter
- **Included Components:** Dusting Brush (and other accessories mentioned)
- **Is Cordless?:** Yes
- **Capacity:** 0.55 Liters
- **Wattage:** 150 watts
- **Charging Time:** 3 Hours
- **Recommended Uses For Product:** Carpet, Hard Floor
- **Form Factor:** Handheld
- **Color:** Black 4
- **Product Dimensions:** 13.39"L x 3.15"W x 3.54"H
- **Battery Description:** Lithium-Ion (3x2000mAh rechargeable batteries)
- **Noise Level:** 69 dB
- **Item Weight:** 1.2 pounds
- **Suction Power:** 9500Pa

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact HOMEKANE customer service through the retailer's platform where the product was purchased. Keep your purchase receipt as proof of purchase.



The HOMEKANE Handheld Vacuum Cleaner helps maintain a clean and comfortable living environment.