



Manuals.plus /

› WEWARM /

› WEWARM Infrared Heater for Indoor 1500W with UVC Air Purification User Manual

## WEWARM HT1268

# WEWARM Infrared Heater User Manual

Model: HT1268

For Indoor 1500W with UVC Air Purification, 3 Mode, 4 Infrared Elements, Thermostat and Remote Control

## INTRODUCTION

This user manual provides important information for the safe and efficient operation of your WEWARM Infrared Heater. Please read all instructions carefully before using the appliance and retain for future reference.

The WEWARM Infrared Heater is designed to provide supplemental heat for indoor spaces, featuring advanced UVC air purification technology for a cleaner environment. Its portable design, multiple heating modes, and safety features make it an ideal solution for various rooms.

## KEY FEATURES

- **Space Heater:** Portable heater with 3 heating modes (750W/1500W/ECO). The ECO mode maintains a consistent temperature at 68 degrees Fahrenheit for energy efficiency.
- **Air Purification:** Features UVC air purification technology to help improve air quality, creating a clean and healthy environment.
- **Electric Heater:** Powerful 1500W infrared quartz heat elements provide rapid heating and a steady stream of warm air.
- **Safety Features:** Equipped with tip-over protection (shuts off when knocked over), overheat protection, and a cool-touch exterior cabinet. TUV certified for safety.
- **Compact Size:** Dimensions of 13.6 in x 11.4 in x 14.4 inch. Designed with front air intake, requiring no space between the heater's back and the wall.
- **User-Friendly Controls:** Precise temperature display on the panel and convenient remote control. Includes a built-in handle for easy portability.

## SETUP

Unpack the heater carefully and remove all packaging materials. Place the heater on a firm, level surface. Ensure there is adequate clearance around the heater for proper airflow. Do not block the air intake or exhaust vents.

Plug the heater directly into a 120V AC, 15-amp (or higher) grounded wall outlet. Do not use extension cords, power strips, or surge protectors with this appliance, as they may pose a fire risk.



Figure 1: WEWARM Infrared Heater and its remote control. The heater features a digital display and control panel on the top front.

## OPERATING INSTRUCTIONS

### Control Panel and Remote Control

The heater can be operated using the control panel on the unit or the included remote control. Ensure the remote control has 2 AAA batteries (not included).

- **Power On/Off:** Press the power button ( ) on the control panel or remote to turn the unit on or off. The green light indicates it's on.
- **Temperature Setting:** Use the up (▲) and down (▼) arrows to adjust the desired temperature from 50°F to 90°F. The display will show the current room temperature when the temperature button is pressed.
- **Mode Selection:** Cycle through the 750W (Low), 1500W (High), and ECO modes using the mode button. ECO mode maintains 68°F.
- **Timer Function:** Press the timer button to set an automatic shut-off time, from 1 to 12 hours.
- **Child Lock:** Activate the child lock feature by pressing the lock button to prevent accidental changes to settings.

# Thermostat Control System

4 energy-efficient modes



Figure 2: Close-up of the control panel showing temperature settings and mode options (HI 1500W, Lo 750W, ECO, FAN Only).

# Run Quietly, Sleep in Your Mind



Figure 3: The heater is designed for quiet operation (45 dB) and includes a 12-hour timer, making it suitable for use in bedrooms.

## SAFETY INFORMATION

Your safety is paramount. This heater is equipped with several safety features. Always follow these guidelines:

- **Tip-Over Protection:** The heater will automatically shut off if it is accidentally knocked over. Place on a stable, flat surface.
- **Overheat Protection:** If the heater's internal components reach a certain temperature, the unit will automatically shut off to prevent overheating.
- **Cool-Touch Exterior:** The exterior cabinet remains cool to the touch during operation, reducing the risk of burns. However, the heating elements behind the grille will be hot.
- **Child Safety Lock:** Use the child lock feature to prevent children from changing settings or turning the unit off/on.
- **Clearance:** Maintain at least 3 feet (0.9 meters) of clearance from combustible materials such as furniture, pillows, bedding, papers, clothes, and curtains.
- **Ventilation:** Do not block air openings. Ensure proper ventilation to prevent overheating.
- **Supervision:** Always supervise children and pets when the heater is in operation.



Figure 4: Overview of the heater's multi-safety protections, ensuring safe operation in various environments.

## MAINTENANCE

Always unplug the heater from the power outlet and allow it to cool down completely before performing any maintenance or cleaning.

- **Cleaning:** Use a soft, damp cloth to wipe the exterior surfaces of the heater. Do not use abrasive cleaners or solvents.
- **Air Filter:** Regularly check and clean the air filter (if applicable, consult product diagram for location) to maintain optimal air purification performance.
- **Storage:** When not in use, store the heater in a cool, dry place. It is recommended to store it in its original packaging to protect it from dust and damage.

# UVC Air Purification



Figure 5: The UVC Air Purification system helps maintain continuous fresh air. Regular cleaning of the filter is recommended for optimal performance.

## TROUBLESHOOTING

If your heater is not operating correctly, please refer to the following common issues before contacting customer support:

Problem	Possible Cause	Solution
Heater does not turn on.	Not plugged in; Power switch off; Overheat protection activated; Tip-over switch activated.	Ensure plug is firmly in outlet; Turn power switch on; Unplug and allow to cool for 30 mins; Place on a flat, stable surface.
No heat output.	Temperature setting too low; ECO mode active.	Increase desired temperature; Switch to High (1500W) mode.
Heater makes unusual noise.	Dust buildup in fan; Loose internal component.	Clean fan and vents; Contact customer support if noise persists.

## SPECIFICATIONS

Feature	Detail
Brand	WEWARM
Model Number	HT1268
Heat Output	1500 Watts
Heating Modes	750W (Low), 1500W (High), ECO
Voltage	120 Volts (AC)
Product Dimensions	11.4"D x 13.6"W x 14.4"H
Special Features	Overheat and Tip-Over Protection, Thermostat, UVC Air Purification, Remote Control, 12H Timer
Room Type	Bedroom, Home Office, Study Room
Heating Coverage	150 square feet



Figure 6: The compact size of the WEWARM heater, ideal for various home placements.

## **WARRANTY & SUPPORT**

---

For warranty information or technical support, please refer to the product packaging or contact WEWARM customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.

For further assistance, visit the official WEWARM website or contact their support team through the contact information provided with your product.