

Ubon BT-315

Ubon BT-50 Multifunction Touch Control Wireless Earbuds User Manual

Model: BT-315

[Introduction](#)[What's in the
Box](#)[Specifications](#)[Setup](#)[Operation](#)[Maintenance](#)[Warranty &](#)[Troubleshooting](#)[Support](#)

1. INTRODUCTION

The Ubon BT-50 Multifunction Touch Control Wireless Earbuds (Model BT-315) are designed to provide a seamless and immersive audio experience. Featuring Bluetooth v5.3 connectivity, intuitive touch controls, and a comfortable sporty design, these earbuds are suitable for various activities and active lifestyles. This manual provides instructions for setup, operation, maintenance, and troubleshooting to ensure optimal performance of your device.

Product Overview Video

Your browser does not support the video tag.

This video provides a brief overview of the Ubon Wireless Touch Earbuds, highlighting key features, battery life, design, and device compatibility.

2. WHAT'S IN THE BOX

Please check the package contents upon unboxing:

- Ubon BT-50 Wireless Earbuds (Left and Right)
- Charging Case
- Charging Cable
- User Manual



Image: Ubon BT-315 Truly Wireless Earbuds and their charging case, showcasing the product's design.

3. SPECIFICATIONS

Model Name	BT-315
Bluetooth Version	5.3
Ear Placement	In Ear
Form Factor	In Ear
Playtime	Up to 25 Hours (with charging case)
Standby Time	Up to 250 Hours
Charging Interface	Lightning
Control Type	Touch, Volume Control
Frequency Range	20 Hz - 20,000 Hz
Audio Driver Type	Dynamic Driver
Material	Acrylonitrile Butadiene Styrene (ABS)
Weight	93 Grams
Water Resistance	Not Water Resistant



Image: The Ubon BT-50 Earbuds and charging case, highlighting the 25 hours playtime and 250 hours standby time.

4. SETUP

4.1 Initial Charging

Before first use, fully charge the earbuds and the charging case. Connect the provided charging cable to the charging case and a compatible USB power source. The indicator lights on the case will show the charging status. Once fully charged, the indicator lights will change or turn off.

- Insert the earbuds into the charging case correctly.
- Close the charging case lid.
- Connect the Lightning charging cable to the case and a power adapter.
- Allow approximately 1-2 hours for a full charge.

4.2 Powering On/Off

- **Power On:** Open the charging case, and the earbuds will automatically power on. Alternatively, long-press the touch area on both earbuds for a few seconds.
- **Power Off:** Place the earbuds back into the charging case and close the lid. They will automatically disconnect and power off. Alternatively, long-press the touch area on both earbuds for a few seconds until you hear a power-off prompt.

4.3 Bluetooth Pairing

Follow these steps to pair your Ubon BT-50 Earbuds with your device:

1. Ensure the earbuds are charged and powered on.
2. Open the charging case. The earbuds will enter pairing mode, indicated by a flashing LED light (refer to the specific light pattern in your product's quick start guide if available).
3. On your smartphone or Bluetooth-enabled device, go to the Bluetooth settings.

- 4. Search for available devices and select "Ubon BT-50" (or similar name) from the list.
- 5. Once connected, you will hear a confirmation tone, and the LED indicator on the earbuds will stop flashing.
- 6. The earbuds will automatically reconnect to the last paired device when taken out of the case, if Bluetooth is enabled on the device.



Image: Ubon BT-50 Wireless Earbuds, highlighting their Bluetooth Version 5.3 for seamless connectivity.

5. OPERATING INSTRUCTIONS

5.1 Touch Controls

The Ubon BT-50 Earbuds feature intuitive touch controls on each earbud. The functions may vary slightly depending on the specific model and firmware, but generally include:

Action	Function
Single Tap (Left/Right)	Play/Pause Music, Answer/End Call
Double Tap (Right Earbud)	Next Track
Double Tap (Left Earbud)	Previous Track
Triple Tap (Right Earbud)	Volume Up
Triple Tap (Left Earbud)	Volume Down
Long Press (2-3 seconds)	Activate Voice Assistant (Google Assistant) / Reject Call

5.2 Calling Functions

- **Answer Call:** Single tap either earbud.
- **End Call:** Single tap either earbud during a call.

- **Reject Call:** Long press either earbud for 2-3 seconds.

5.3 Voice Assistant

To activate your device's voice assistant (e.g., Google Assistant), long-press the touch area on either earbud for approximately 2-3 seconds until you hear a prompt.



Image: Ubon BT-50 Earbuds, illustrating their immersive sound quality and rocking bass capabilities.



Image: Ubon BT-50 Earbuds connected to a smartphone, demonstrating wide compatibility with Android and iOS devices.

6. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your earbuds.

- **Cleaning:** Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth. Do not use abrasive cleaners, alcohol, or chemical solvents.
- **Storage:** When not in use, store the earbuds in their charging case to protect them from dust and damage.
- **Avoid Water:** These earbuds are not water-resistant. Avoid exposure to water, sweat, or high humidity to prevent damage.
- **Temperature:** Do not expose the earbuds to extreme temperatures (hot or cold).

7. TROUBLESHOOTING

If you encounter issues with your Ubon BT-50 Earbuds, try the following solutions:

Problem	Solution
Earbuds not pairing	◦ Ensure earbuds are charged and out of the case. ◦ Turn off and on Bluetooth on your device. ◦ Forget "Ubon BT-50" from your device's Bluetooth list and try pairing again. ◦ Ensure no other Bluetooth devices are interfering.
Only one earbud working	◦ Place both earbuds back into the charging case, close the lid, and then take them out again. ◦ Ensure both earbuds are charged. ◦ Try resetting the earbuds (refer to product-specific reset instructions if available, usually involves long-pressing both earbuds while in the case or out).
No sound or low volume	◦ Increase volume on both your device and the earbuds. ◦ Ensure earbuds are properly connected to your device. ◦ Check if the audio output is set to the earbuds on your device.
Charging case not charging	◦ Check the charging cable and power adapter for damage. ◦ Ensure the charging cable is securely connected. ◦ Try a different charging cable or power source.

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the product packaging or the official Ubon website. You may also contact the manufacturer directly:

- **Manufacturer:** UBON PVT.LTD
- **Contact Email:** support@ubon.in

Please retain your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question