

Manuals.plus /

› Bestway /

› Bestway Space Station Exploration Kids Inflatable Playhouse User Manual Model 52632E

## Bestway 52632E

# Bestway Space Station Exploration Kids Inflatable Playhouse User Manual

Model: 52632E

Brand: Bestway

## 1. SAFETY INFORMATION

---

**WARNING! USE ONLY UNDER COMPETENT SUPERVISION. KEEP AWAY FROM FIRE AND FLAME.**

- Always supervise children when they are using the inflatable playhouse.
- Ensure the playhouse is placed on a soft, level surface, free from sharp objects.
- Do not set up near open flames, heaters, or other heat sources.
- Keep pets away from the playhouse to prevent damage.
- Do not allow children to climb on the walls or roof of the playhouse.
- Only use the included play balls with the playhouse.
- Recommended for ages 24 months to 5 years.

## 2. PACKAGE CONTENTS

---

Verify that all items listed below are present in the package:

- 1 x Inflatable Playhouse
- 6 x Play Balls
- 1 x Repair Patch



Image 2.1: The product packaging box, showing the inflatable playhouse, 6 play balls, and key features.

### 3. SETUP INSTRUCTIONS

#### 3.1 Unpacking and Preparation

1. Carefully remove the playhouse and accessories from the packaging.
2. Unfold the playhouse completely and lay it flat on a clean, level surface. Ensure there are no sharp objects underneath that could puncture the material.

#### 3.2 Inflation

3. Locate the inflation valves on the playhouse.

4. Use a hand or foot air pump (not included) to inflate each section of the playhouse. Do not over-inflate. The playhouse should be firm but not rigid.
5. Ensure all valves are securely closed after inflation to prevent air leakage.



Image 3.1: The Bestway Space Station Exploration Kids Inflatable Playhouse fully inflated and ready for use, showcasing its unique design.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 General Play

- Children can enter and exit the playhouse through the designated openings.
- Encourage imaginative play within the space station theme.
- Ensure the play area around the playhouse is clear to prevent accidents.



Image 4.1: A child playing inside the inflatable space station playhouse while an adult supervises, demonstrating safe interaction.

## 4.2 Ball Sorting Game

- The playhouse features a ball sorting game on one of its side walls.
- Use the 6 included play balls to engage with this feature.
- This activity helps develop gross motor skills and hand-eye coordination.



Image 4.2: A detailed view of the ball sorting game integrated into the side wall of the inflatable playhouse, with colorful play balls nearby.



Image 4.3: A child happily playing inside the Bestway Space Station Exploration Kids Inflatable Playhouse, highlighting the interior space and design.

## 5. MAINTENANCE

---

### 5.1 Cleaning

- To clean the playhouse, wipe surfaces with a damp cloth and mild soap.
- Rinse thoroughly with clean water and allow to air dry completely before deflating or storing.
- Do not use harsh chemicals or abrasive cleaners.

### 5.2 Storage

- Deflate the playhouse completely.
- Fold it neatly to prevent creases and damage.

- Store in a cool, dry place, away from direct sunlight and extreme temperatures.

### 5.3 Repair

- In case of a small puncture, use the included repair patch.
- Clean and dry the damaged area thoroughly.
- Peel off the backing from the repair patch and firmly press it over the puncture.
- Allow several hours for the patch to adhere before re-inflating.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Playhouse deflates quickly.	Valve not properly closed; small puncture.	Ensure all valves are securely closed. Check for punctures and use the repair patch if necessary.
Playhouse does not inflate fully.	Insufficient air pump; valve obstruction.	Ensure the air pump is functioning correctly and has sufficient power. Check valves for any obstructions.
Material appears stretched or damaged.	Over-inflation; sharp object contact.	Do not over-inflate. Inspect the area for damage and use the repair patch for small tears. For significant damage, replacement may be necessary.

## 7. SPECIFICATIONS

- **Model Number:** 52632E
- **Product Dimensions (Inflated):** Approximately 49 in. x 41 in. x 46 in. (1.25 m x 1.05 m x 1.17 m)
- **Product Dimensions (Packaged):** 4.72 x 12.99 x 11.81 inches
- **Item Weight:** 6.36 pounds
- **Recommended Age:** 24 months - 5 years
- **Manufacturer:** BESTWAY (HONG KONG) INTERNATIONAL LIMITED
- **Contents:** 1 Playhouse, 6 Play Balls, 1 Repair Patch

## 8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Bestway website or contact their

customer service directly. Warranty terms and conditions may vary by region and retailer.

Keep your purchase receipt as proof of purchase for any warranty claims.