

## GOODSCITY GC-171

# GOODSCITY GC-171 Portable USB Rechargeable Blender User Manual

Model: GC-171

## INTRODUCTION

Thank you for choosing the GOODSCITY GC-171 Portable USB Rechargeable Blender. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new blender. Please read it thoroughly before first use and keep it for future reference.

The GC-171 is designed for preparing smoothies, juices, protein shakes, and other blended beverages. Its compact, lightweight, and USB-rechargeable design makes it suitable for use at home, in the office, at the gym, or while traveling.

## IMPORTANT SAFETY PRECAUTIONS

- Read all instructions before using the appliance.
- Keep the blender out of reach of children.
- Do not immerse the motor base in water or any other liquid. Clean only with a damp cloth.
- Ensure the jar is properly installed and sealed onto the base before operation. The blender features a safety sensor that prevents operation if not assembled correctly.
- Avoid touching moving parts. Keep hands and utensils out of the blending jar while operating to prevent injury.
- Do not blend hot liquids, as pressure buildup can cause injury.
- Do not overfill the blending jar.
- Use only the charging cable provided or a compatible Type-C charger.
- Unplug the blender when not in use, before assembling or disassembling parts, and before cleaning.
- Do not operate the blender with a damaged cord or plug, or after the appliance malfunctions or has been

dropped or damaged in any manner.

## PRODUCT COMPONENTS

The GOODSCITY GC-171 blender consists of the following main parts:

- Blender Motor Base (contains motor, battery, and controls)
- Blending Jar (450ml capacity)
- Lid with integrated handle
- USB Type-C Charging Cable



Image: Overview of the Goodscity GC-171 Portable Blender, showing its main parts.

## SETUP AND CHARGING

### Initial Charge

Before first use, fully charge the blender. Connect the provided USB Type-C charging cable to the charging port on the motor base and plug the other end into a compatible USB power source (e.g., car charger, power bank, laptop, or wall adapter).

# CHARGING WITH *Safety*



**TYPE-C CHARGER**

 **3000MAH**

**VERSATILE CHARGING**



**CAR  
CHARGING**



**POWER  
BANK**



**LAPTOP**



**CHARGING  
PLUG**

## **SAFETY** *Sensor*

**IF THE JUG IS NOT PROPERLY  
INSTALLED OR SEPARATED  
FROM THE BASE, THE BLENDER  
WON'T WORK, AND THE RED  
LIGHT WILL FLASH FIVE TIMES.**



*Image: The blender connected to a USB-C charger, illustrating versatile charging options.*

A full charge typically takes a few hours. The indicator light will show charging status (e.g., red for charging, blue/green for fully charged, refer to specific light indicators if available in product details, otherwise keep general).

## **Assembly**

Ensure the blending jar is securely twisted onto the motor base. The blender features a safety sensor that prevents operation if the jug is not properly installed or separated from the base. If not assembled correctly, the red light will flash five times.

## **OPERATING INSTRUCTIONS**


### **Preparing Ingredients**

1. Cut desired fruits or vegetables into small pieces (approximately 1.5-2 cm). Remove any hard skins or seeds.



2. Pour water, milk, or other liquid into the container. Ensure the total volume does not exceed the maximum fill line.

# HOW TO USE?

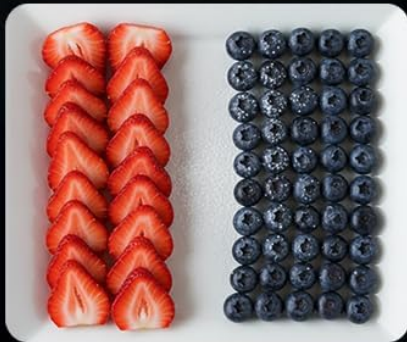

## STEP 1

Cut desired fruit/ vegetable into small pieces. Remove skin & seeds if any (around 1.5-2 cm)



## STEP 2

Pour water or milk into the container



## STEP 3

Incline the juicer to angle of 45° and then turn on the juice



## STEP 4

Shake the blender 5-8 times for about 30-40 seconds for fine & smooth blending

*Image: Step-by-step guide on how to prepare ingredients and fill the blender jar.*

## Blending

1. After adding ingredients and liquid, securely attach the lid.
2. Incline the blender to an angle of approximately 45 degrees. This helps prevent ingredients from getting stuck and ensures better blending.
3. Press and hold the power switch for 2 seconds to start blending. The 6 sharp stainless steel blades will activate.
4. Shake the blender gently 5-8 times during the blending cycle for 30-40 seconds to achieve a fine and smooth consistency.
5. The blender is designed to prepare your desired juice and smoothies in approximately 30 seconds.
6. To stop blending, press the power switch once.

The GC-171 is versatile and can be used for smoothies, icy drinks, milkshakes, salsa, pesto, and protein shakes.

# BLEND MORE THAN JUST JUICE



Smoothies



Icy Drinks



Milkshakes



Salsa



Pesto



Protein Shakes



**BPA Free**

*Image: Examples of various beverages and food items that can be prepared with the blender.*

## CARE AND MAINTENANCE

### Cleaning

The blender features a quick self-cleaning function:

1. After use, add water to the blending jar, filling it approximately 2/3 full.
2. Securely seal the lid.
3. Long press the power switch for 2 seconds to start a cleaning cycle. Allow it to blend for 45 seconds.
4. Pour out the water and rinse the jar.

# QUICK *Self* CLEANING



**FILL JAR 2/3 WITH WATER,  
SEAL TIGHTLY. BLEND FOR 45 SECS.**

*Pour out water.*

*Image: Illustration of the quick self-cleaning method for the blender jar.*

**Important:** Do not wash the blender motor base under running water or immerse it. Wipe the motor base with a damp cloth only. The blending jar and lid are dishwasher safe.



# HOW TO CLEAN ?



Just fill the jar with water &  
**Blend it. Then drain it**



Dont wash the  
**blender base under water**

Image: Visual guide on how to clean the blender, emphasizing not to wash the motor base under water.

## Storage

Store the blender in a cool, dry place when not in use. Ensure it is clean and dry before storing.

## TROUBLESHOOTING

| Problem                 | Possible Cause                                                                     | Solution                                                                                                                                                                                                                               |
|-------------------------|------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Blender does not start. | Jar not properly installed.<br>Low battery.<br>Power button not pressed correctly. | Ensure the jar is securely twisted onto the motor base. The red light will flash five times if not properly installed.<br>Charge the blender using the USB Type-C cable.<br>Press and hold the power switch for 2 seconds to activate. |

| Problem                                | Possible Cause                 | Solution                                                                           |
|----------------------------------------|--------------------------------|------------------------------------------------------------------------------------|
| Ingredients are not blending smoothly. | Too little liquid.             | Add more liquid.                                                                   |
|                                        | Ingredients are too large.     | Cut ingredients into smaller pieces (1.5-2 cm).                                    |
|                                        | Overfilling the jar.           | Do not exceed the maximum fill line.<br>Gently shake the blender during operation. |
| Blender stops unexpectedly.            | Overload protection activated. | Reduce the amount of ingredients or add more liquid.                               |
|                                        | Low battery.                   | Charge the blender.                                                                |

## SPECIFICATIONS

| Feature                | Detail                                                                             |
|------------------------|------------------------------------------------------------------------------------|
| Model                  | GC-171                                                                             |
| Brand                  | GOODSCITY                                                                          |
| Capacity               | 450 Milliliters                                                                    |
| Blade Material         | 6-edge Stainless Steel                                                             |
| Motor Speed            | 16500 RPM                                                                          |
| Battery Capacity       | 3000mAh                                                                            |
| Power Source           | Battery Powered (USB Type-C rechargeable)                                          |
| Voltage                | 7.4V (Motor), 220 Volts (Input compatibility for charger)                          |
| Dimensions (D x W x H) | 25D x 8W x 8H centimetres                                                          |
| Item Weight            | 750 Grams                                                                          |
| Material Type Free     | BPA Free                                                                           |
| Dishwasher Safe        | Yes (Jar and Lid only)                                                             |
| Special Features       | Auto Shut Off, Ice Crushing capability, High speed, Portable design, Safety Sensor |



# PERFECT BLENDS, HONEST CLAIMS



True capacity,  
**No misleading**



**6-edge  
SS blade for**  
silky smoothness

*Image: Visual representation of the blender's 450ml capacity and the 6-edge stainless steel blade design.*

## WARRANTY INFORMATION

GOODSCITY provides a **12-month service warranty** on manufacturing defects. This warranty is valid outside Goodscity India and guarantees on-time service with free pick-up and drop-off to the customer's address for eligible manufacturing defects.

Please retain your proof of purchase for warranty claims.

## CUSTOMER SUPPORT

For any inquiries, assistance, or warranty claims, please contact GOODSCITY customer service. Support is available 365 days a year.

- **Customer Care:** 8908901290
- **Email:** [help@goodscity.in](mailto:help@goodscity.in)

- Additional contact options may include WhatsApp, Instagram, or the official website.

Manufacturer: DB BRANDS PVT LTD, PUNE.

