

OMNIHIL OMNI0126024117

OMNIHIL Wall Charger and USB-C Cable Instruction Manual

Model: OMNI0126024117

1. PRODUCT OVERVIEW

This manual provides instructions for the OMNIHIL Wall Charger and USB-C to USB-C Cable, designed for efficient charging of compatible electronic devices, including the Energizer MAX 20,000mAh Power Bank Model UE20044. This product is a third-party accessory, not an OEM part.



Image 1.1: The OMNIHIL Wall Charger and USB-C to USB-C Cable, shown with its packaging.

Key Features:

- **High Speed 3.0 USB Cable:** Ensures fast data transfer and charging capabilities.
- **Comprehensive Protection:** Features Over Voltage output Protection (OVP), Over Current output Protection (OCP), and Short Circuit output Protection (SCP) to safeguard your devices.
- **Durable Design:** Built for reliability and long-term use.

2. SETUP INSTRUCTIONS

Follow these steps to set up your OMNIHIL Wall Charger and USB-C Cable for use.

1. **Unpack Components:** Carefully remove the wall charger and USB-C to USB-C cable from their packaging.
2. **Inspect for Damage:** Before use, visually inspect both the charger and the cable for any signs of physical damage. Do not use if damaged.
3. **Connect Cable to Charger:** Insert one end of the USB-C to USB-C cable into the USB-C port on the OMNIHIL Wall Charger. Ensure a firm connection.



Image 2.1: The OMNIHIL Wall Charger with the USB-C cable connected to its port.

4. **Connect to Power Bank/Device:** Insert the other end of the USB-C to USB-C cable into the charging port of your compatible device, such as the Energizer MAX 20,000mAh Power Bank (Model UE20044).
5. **Plug into Wall Outlet:** Insert the prongs of the OMNIHIL Wall Charger into a standard AC wall outlet

(100 Volts AC).



Image 2.2: The OMNIHIL Wall Charger displaying its electrical prongs for wall outlet connection.

6. **Verify Charging:** Confirm that your device indicates it is charging.

3. OPERATING INSTRUCTIONS

The OMNIHIL Wall Charger and USB-C Cable are designed for straightforward operation.

- **Charging:** Once properly connected to a power source and your device, the charger will automatically begin providing power.
- **Compatibility:** This charger and cable are compatible with a wide range of electronic devices that

utilize USB-C for charging, including the Energizer MAX 20,000mAh Power Bank (Model UE20044).

- **Safety Features:** The built-in OVP, OCP, and SCP protections ensure safe charging by preventing over-voltage, over-current, and short-circuit conditions.



Image 3.1: A close-up view of the USB-C port on the OMNIHIL Wall Charger.

4. MAINTENANCE

Proper care and maintenance will extend the lifespan of your OMNIHIL Wall Charger and USB-C Cable.

- **Cleaning:** Disconnect the charger from the power outlet and your device before cleaning. Use a soft,

dry cloth to wipe the surfaces. Do not use liquid cleaners or abrasive materials.

- **Storage:** Store the charger and cable in a cool, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Avoid bending or twisting the cable excessively, especially near the connectors, to prevent internal wire damage. Do not pull the cable to disconnect; always grasp the plug.

5. TROUBLESHOOTING

If you encounter issues with your OMNIHIL Wall Charger and USB-C Cable, refer to the following common solutions.

Problem	Possible Cause	Solution
Device not charging.	<ul style="list-style-type: none">• Loose connection.• Faulty wall outlet.• Damaged cable or charger.• Incompatible device.	<ul style="list-style-type: none">• Ensure all connections are secure.• Try a different wall outlet.• Inspect cable and charger for damage. Replace if necessary.• Verify your device supports USB-C charging.
Slow charging.	<ul style="list-style-type: none">• Device drawing more power than supplied.• Background apps consuming power.• Cable or charger issue.	<ul style="list-style-type: none">• Close unnecessary applications on your device.• Ensure the cable is a High Speed 3.0 USB Cable.• Try a different compatible cable or charger to isolate the issue.
Charger or cable feels hot.	<ul style="list-style-type: none">• Normal operation (slight warmth).• Overload or short circuit.	<ul style="list-style-type: none">• A slight warmth during charging is normal.• If it becomes excessively hot, disconnect immediately and cease use. Contact support.

6. SPECIFICATIONS

Technical specifications for the OMNIHIL Wall Charger and USB-C Cable.

Brand: OMNIHIL

Model Number: OMNI0126024117

Product Dimensions: 96 x 2 x 3 inches (Cable length is approximately 9.8ft based on A+ content image, charger dimensions are compact)

Item Weight: 5 ounces

Connector Type: USB-C

Compatible Devices: Electronic Devices (specifically compatible with Energizer MAX 20,000mAh Power Bank Model UE20044)

Input Voltage: 100 Volts (AC)

Power Source: Corded Electric

Color: White

Special Feature: All products are tested to exceed/meet standard specification



Image 6.1: The OMNIHIL Wall Charger's label, detailing model, input, and output specifications.

7. WARRANTY AND SUPPORT

OMNIHIL provides support and warranty for this product.

- **Warranty:** This product comes with a **5 Year Free Warranty**. Please retain your proof of purchase for warranty claims.
- **Support:** For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact OMNIHIL customer support. Refer to the seller information on your purchase platform for contact details.

- **Manufacturer:** Zhongshan Master Light Source Electronic

© 2024 OMNIHIL. All rights reserved.

Documents - OMNIHIL – OMNI0126024117

no relevant documents