

Raycon RBE726-24E-BLU

Raycon Everyday Earbuds (2024 Edition) User Manual

Model: RBE726-24E-BLU

INTRODUCTION

Welcome to the user manual for your Raycon Everyday Earbuds (2024 Edition). These true wireless in-ear buds are designed for comfort and superior sound, featuring Active Noise Cancellation, Multipoint Technology, and up to 32 hours of playtime with the charging case. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your earbuds to ensure the best possible experience.

WHAT'S IN THE BOX

- Everyday Earbuds
- Wireless Charging Case
- Eartips (various sizes)
- User Manual

PRODUCT OVERVIEW



The Raycon Everyday Earbuds in Royal Blue, shown with their compact charging case. The earbuds feature an ergonomic design for comfortable wear, and the case provides portable charging.

The Raycon Everyday Earbuds consist of two individual earbuds (left and right) and a portable charging case. The earbuds are designed to fit snugly in your ear, providing both comfort and optimal sound delivery. The charging case protects the earbuds and recharges them on the go.

SETUP

1. Charging the Earbuds and Case

The earbuds provide 8 hours of playtime on a single charge, with the charging case extending total battery life to 32 hours.

1. Place both earbuds into the charging case.
2. Connect the charging case to a power source using the provided USB-C cable. The LED indicator on the case will show charging status.
3. Allow the earbuds and case to fully charge before first use. A full charge provides up to 8 hours of playtime for the earbuds and up to 3 additional charges from the case.

2. Pairing with Your Device

1. Open the charging case. The earbuds will automatically enter pairing mode.
2. On your device (smartphone, tablet, laptop), go to Bluetooth settings.
3. Select "Raycon Everyday Earbuds" from the list of available devices.
4. Once connected, you will hear an audible confirmation.

OPERATING INSTRUCTIONS

Touch Controls





TOUCH CONTROLS

Effortlessly control tracks,
volume, and answer calls.

Effortlessly control tracks, volume, and answer calls using the intuitive touch controls on the earbuds.

Action	Control
Play/Pause	Single tap on either earbud
Next Track	Double tap right earbud
Previous Track	Double tap left earbud
Volume Up	Triple tap right earbud
Volume Down	Triple tap left earbud
Answer/End Call	Single tap on either earbud
Reject Call	Press and hold either earbud for 2 seconds

Action	Control
Activate Voice Assistant	Press and hold either earbud for 3 seconds
Toggle ANC/Awareness Mode	Press and hold both earbuds for 2 seconds

Active Noise Cancellation (ANC)



Active Noise Cancellation blocks out unwanted external noises, allowing for focused listening.

The Everyday Earbuds feature Active Noise Cancellation to minimize ambient sounds, providing a more immersive listening experience. To activate or deactivate ANC, use the touch control as described above. Awareness Mode allows you to hear your surroundings while still enjoying your audio.

Multipoint Technology

TO DO:

- Complete project report
- Buy groceries
- Schedule dentist appointment
- Call mom
- Go for run
- Water plants

MULTIPOINT CONNECTION

Harmonize your audio across multiple devices.

Multipoint technology allows the earbuds to connect to two devices simultaneously, enabling seamless audio switching.

Multipoint Technology allows your earbuds to be connected to two devices simultaneously (e.g., a smartphone and a laptop). This enables seamless switching between audio sources without needing to manually disconnect and reconnect. Ensure both devices are paired with the earbuds. The earbuds will intelligently switch audio based on which device is actively playing sound or receiving a call.

IP66 Weatherproof Rating



IP66 WEATHERPROOF

Dust and water resistant,
these earbuds are built
for all lifestyles.



The IP66 rating ensures the earbuds are resistant to dust and powerful water jets, making them suitable for various environments.

The Everyday Earbuds are rated IP66 for water and dust resistance. This means they are protected against dust ingress and powerful water jets from any direction. They are suitable for workouts and outdoor activities but should not be submerged in water.

CARE AND MAINTENANCE

- **Cleaning:** Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth. Do not use harsh

chemicals or abrasive materials.

- **Eartips:** Remove and clean the eartips periodically with mild soap and water. Ensure they are completely dry before reattaching them to the earbuds.
- **Storage:** When not in use, always store the earbuds in their charging case to protect them and keep them charged.
- **Avoid Extreme Conditions:** Do not expose the earbuds or case to extreme temperatures, humidity, or direct sunlight for prolonged periods.

TROUBLESHOOTING

Problem	Solution
Earbuds not pairing	Ensure earbuds are charged. Place them back in the case, close, then reopen to re-enter pairing mode. Forget the device on your phone's Bluetooth settings and try pairing again.
Only one earbud working	Ensure both earbuds are charged. Place both earbuds back in the case, close the lid for 5 seconds, then open. This often re-syncs them.
Low volume or poor sound quality	Check earbud fit and try different eartip sizes. Clean any debris from the earbud nozzles. Ensure your device's volume is turned up.
Charging issues	Ensure the charging cable is securely connected to both the case and power source. Clean charging contacts on earbuds and inside the case. Try a different charging cable or power adapter.
Bluetooth connection drops	Ensure you are within the Bluetooth range (33 feet/10 meters). Avoid obstacles between the earbuds and your device. Reduce interference from other wireless devices.

SPECIFICATIONS

Feature	Detail
Model Name	The Everyday Earbuds (2023)
Model Number	RBE726-24E-BLU
Connectivity Technology	Wireless (Bluetooth 5.0)
Noise Control	Active Noise Cancellation, Awareness Mode
Playtime (Earbuds)	Up to 8 Hours

Feature	Detail
Total Playtime with Case	Up to 32 Hours
Charging Time (Fast Charge)	1.5 hours of earbud battery from 10 minutes of case charging
Water Resistance Level	IP66 (Waterproof & Dustproof)
Bluetooth Range	33 Feet (10 meters)
Audio Driver Type	Balanced Armature Driver
Frequency Range	20 Hz - 20,000 Hz
Impedance	16 Ohm
Control Method	Touch
Item Weight	5 ounces
Product Dimensions	1 x 1 x 1 inches

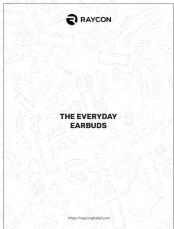 
SUPPORT AND WARRANTY

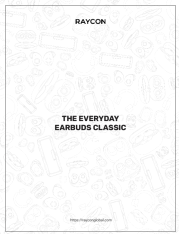 
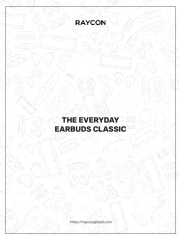 
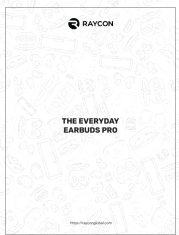 
For product support, frequently asked questions, and the latest information, please visit the official Raycon website. You can find contact information for customer service there.

Raycon products typically come with a limited warranty. Please refer to the warranty information provided with your purchase or on the official Raycon website for details regarding coverage and terms.

Online Support: www.rayconglobal.com

Related Documents

	<p>Raycon Everyday Earbuds: User Manual and Features</p> <p>Comprehensive guide to Raycon Everyday Earbuds, covering features, setup, troubleshooting, safety, and specifications. Learn about Active Noise Cancellation, Multipoint connectivity, and battery life.</p>
---	--

	<p>Raycon Everyday Earbuds Classic User Manual</p> <p>Comprehensive user manual for the Raycon Everyday Earbuds Classic, covering features, setup, troubleshooting, and safety information.</p>
	<p>Raycon Everyday Earbuds Classic User Manual: Features, Setup, and Troubleshooting</p> <p>Comprehensive user guide for the Raycon Everyday Earbuds Classic. Discover features like Active Noise Cancellation, Multipoint Connectivity, detailed setup instructions, charging information, fit guidance, troubleshooting tips, safety guidelines, and product specifications.</p>
	<p>Raycon Everyday Earbuds Pro User Manual and Features</p> <p>Comprehensive guide to Raycon Everyday Earbuds Pro, covering features, setup, troubleshooting, safety, and specifications. Learn about ANC, Multipoint, and more.</p>