

[Manuals.plus](#) /

› [Skullcandy](#) /

› Skullcandy EcoBuds Wireless Earbuds User Manual

Skullcandy S2EOW-Q764

Skullcandy EcoBuds Wireless Earbuds User Manual

Model: S2EOW-Q764

INTRODUCTION

Welcome to the Skullcandy EcoBuds user manual. These wireless earbuds are designed with sustainability in mind, featuring recycled plastics and a unique battery-free charging dock. This manual will guide you through the setup, operation, and maintenance of your EcoBuds to ensure optimal performance and longevity.



Image: Skullcandy EcoBuds in Glacier color, showcasing the earbuds and their charging case.

WHAT'S IN THE BOX

- Skullcandy EcoBuds Wireless Earbuds
- User Manual (this document)
- Eartips (various sizes for optimal fit)

SETUP

1. Initial Charging

Your EcoBuds feature a battery-free charging dock that charges directly from your phone or any USB-C power source. The integrated USB-C cable is designed for convenience.

1. Locate the integrated USB-C charging cable on the EcoBuds charging dock.
2. Connect the USB-C cable to your smartphone's USB-C port or a compatible USB-C power adapter.
3. Ensure the earbuds are properly seated in the charging dock. The indicator lights on the earbuds will show charging status.

A quick 10-minute charge provides up to 2 hours of listening time. A full charge offers up to 8 hours of playtime.



Image: Charging the EcoBuds directly from a smartphone using the integrated USB-C cable.



Image: Top view of the EcoBuds seated in their charging case.

2. Bluetooth Pairing

To pair your EcoBuds with a new device:

1. Remove both earbuds from the charging dock. They will automatically enter pairing mode.
2. On your device (smartphone, tablet, computer), go to the Bluetooth settings.
3. Select "Skullcandy EcoBuds" from the list of available devices.
4. Once connected, you will hear an audible confirmation.

3. Fitting Your Earbuds

Proper fit is crucial for sound quality and comfort. Experiment with the included eartips to find the size that creates a secure seal in your ear canal.

- Gently insert the earbud into your ear.

- Rotate it slightly until it feels snug and comfortable.
- The Skullcandy logo should be visible and facing forward.

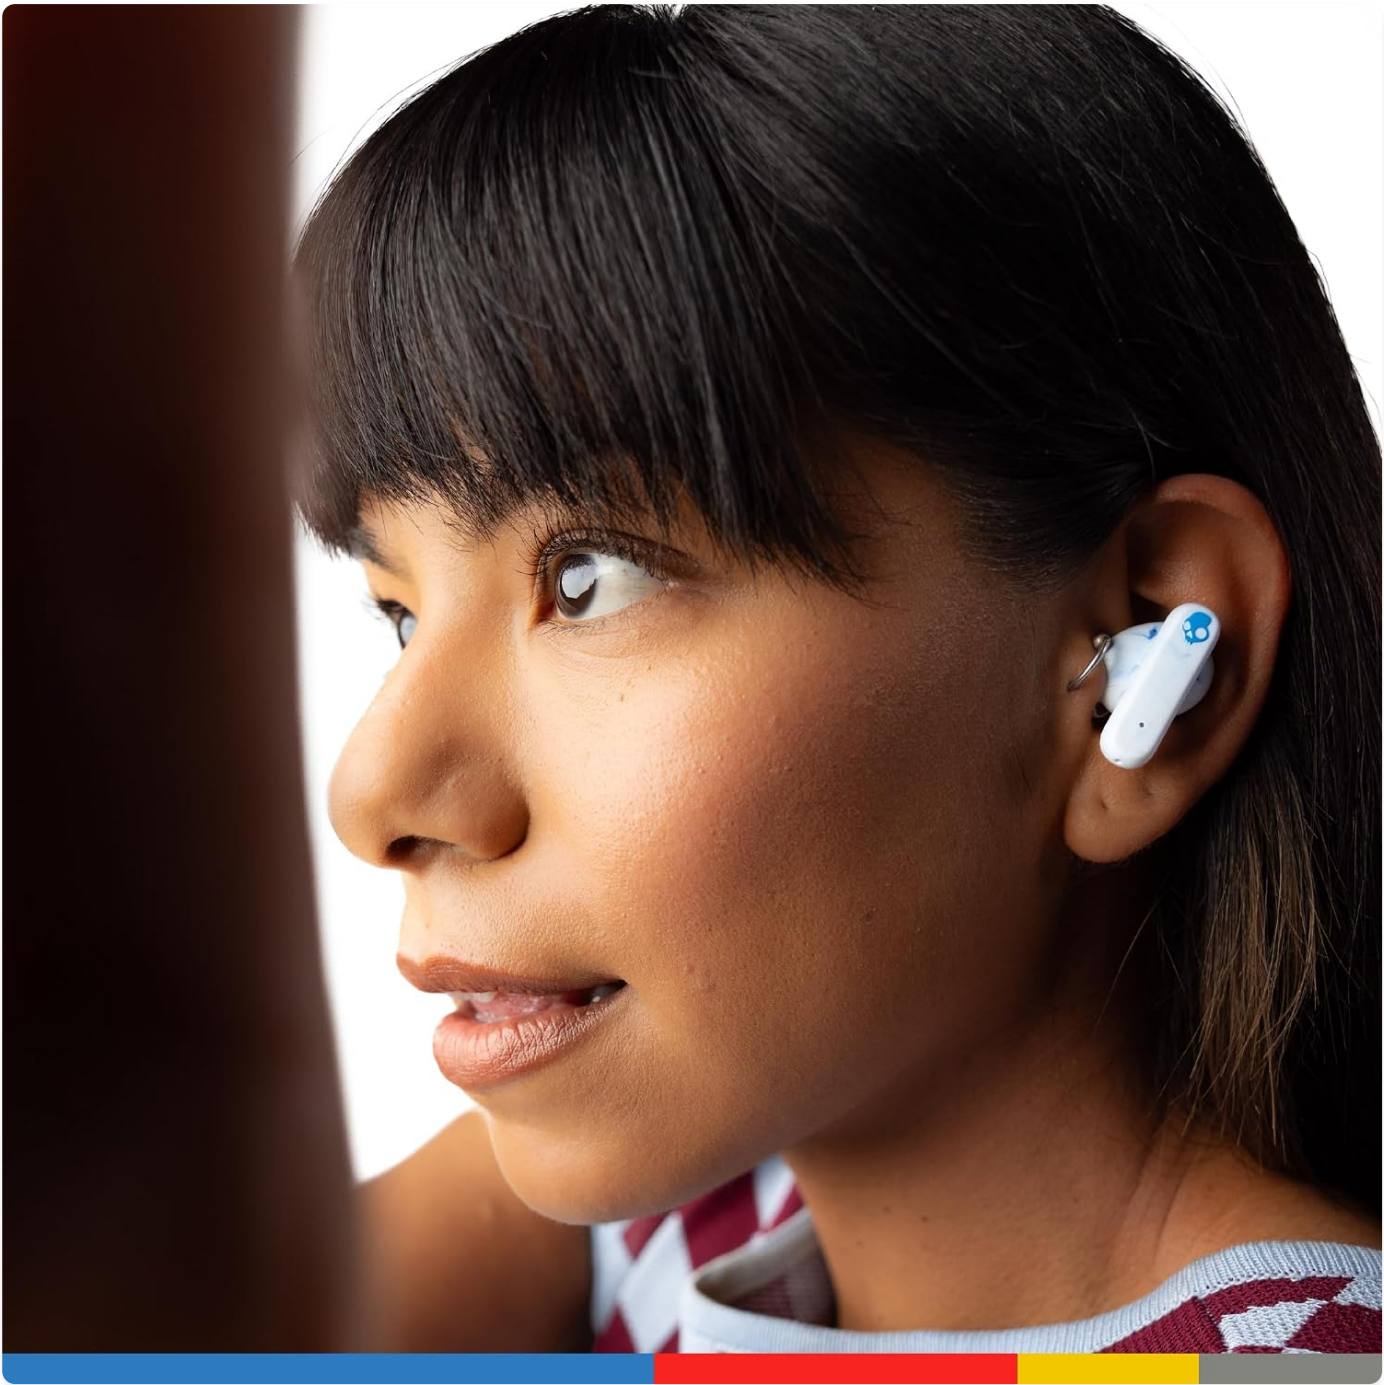


Image: Proper placement of the EcoBud in the ear for optimal fit and sound.

OPERATING INSTRUCTIONS

Touch Controls

Your EcoBuds feature intuitive touch controls on each earbud. The controls are sensitive, requiring only a light tap.

Action	Left Earbud	Right Earbud
Play/Pause	Single Tap	Single Tap

Action	Left Earbud	Right Earbud
Track Forward	Double Tap	Double Tap
Track Back	Triple Tap	Triple Tap
Answer/End Call	Single Tap	Single Tap
Reject Call	Press and Hold (2s)	Press and Hold (2s)
Activate Voice Assistant	Press and Hold (2s)	Press and Hold (2s)

Preset EQ Modes

EcoBuds offer 3 preset EQ modes to optimize your audio experience:

- **Music Mode:** Balanced sound for general listening.
- **Bass Boost Mode:** Enhanced bass for genres like hip-hop and electronic music.
- **Podcast Mode:** Optimized for clear vocals, ideal for podcasts and audiobooks.

To cycle through EQ modes, press and hold both earbuds simultaneously for 3 seconds. You will hear an audible confirmation for each mode change.

ECOBUDS™



8 HOURS BATTERY



**SWEAT & WATER
RESISTANT**



 
**BATTERY-FREE
CHARGING DOCK**



**RAPID CHARGE
(10 MIN = 2 HRS)**



**REVERSE CHARGE
FROM PHONE (USB-C)**



3 PRESET EQ MODES

Image: Key features of Skullcandy EcoBuds, including battery life and EQ modes.

MAINTENANCE

Cleaning Your EcoBuds

Regular cleaning helps maintain sound quality and hygiene.

- Use a soft, dry, lint-free cloth to wipe the earbuds and charging dock.
- For eartips, remove them from the earbuds and clean with mild soap and water. Ensure they are completely dry before reattaching.
- Gently remove any earwax or debris from the speaker mesh using a small, soft brush or cotton swab. Avoid using sharp objects.



Image: Handling the EcoBuds for cleaning or storage.

Storage

When not in use, store your EcoBuds in their charging dock to protect them from dust and damage. Keep them in a cool, dry place away from extreme temperatures.



Image: EcoBuds designed for durability, suitable for various environments.

TROUBLESHOOTING

No Audio / Connection Issues

- Ensure both earbuds are charged.
- Verify Bluetooth is enabled on your device and EcoBuds are selected.
- Try unpairing and re-pairing the EcoBuds from your device's Bluetooth settings.
- If only one earbud is playing, place both earbuds back in the charging dock for 5 seconds, then remove them to re-sync.

Charging Problems

- Ensure the USB-C cable is securely connected to both the charging dock and the power source.
- Check if the power source (phone, adapter) is providing power.
- Clean the charging contacts on both the earbuds and the dock with a dry cotton swab.

Controls Not Responding

- Ensure your fingers are clean and dry when using touch controls.
- Try resetting the earbuds by placing them in the charging dock and then removing them.

SPECIFICATIONS

Feature	Detail
Model Name	EcoBuds
Model Number	S2EOW-Q764
Connectivity Technology	Wireless (Bluetooth 5.2)
Battery Life	Up to 8 Hours (earbuds)
Rapid Charge	10 min charge = 2 hours playtime
Charging Method	Integrated USB-C cable (battery-free dock)
Water Resistance Level	Water Resistant (IPX4)
Frequency Range	20Hz - 20KHz
Material	65% Recycled Plastic (earbuds & dock)
Color	Glacier
Item Weight	1.13 ounces

WARRANTY AND SUPPORT

Your Skullcandy EcoBuds come with a 1-year US warranty. For warranty claims, technical support, or additional information, please visit the official Skullcandy support website or contact their customer service.

Official Skullcandy Website: www.skullcandy.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question