

[Q & A](#) | [Deep Search](#) | [Upload](#)

› **LunchEAZE** /

LunchEAZE LunchEAZE_Core

INSTRUCTION MANUAL

The LunchEAZE Core is a cordless, self-heating electric lunch box designed to provide hot meals anywhere, anytime. It features automatic scheduled heating, a rechargeable battery, and is made with food-grade, BPA-free materials. This manual provides essential information for the safe and effective use of your LunchEAZE Core.



Figure 1: LunchEAZE Core Cordless Electric Lunch Box, showcasing its compact design and control panel.

SAFETY INFORMATION

- Read all instructions before use.
- Do not immerse the main unit in water or other liquids.
- Ensure the charging port is dry before connecting the charger.
- Keep out of reach of children.
- Use only the provided charger and battery.
- Do not attempt to disassemble or repair the unit yourself. Contact customer support for assistance.
- Exercise caution when handling heated food containers as contents will be hot.
- Do not use if the unit or charger is damaged.

WHAT'S INCLUDED

Your LunchEAZE Core package includes the following components:

- 1x LunchEAZE Core Base Unit
- 1x Stainless Steel Meal Container with Lid
- 1x Battery Charger
- 1x Battery (pre-installed inside the unit)



Figure 2: The LunchEAZE Core unit shown alongside its stainless steel meal container.

SETUP

Initial Charging

Before first use, fully charge your LunchEAZE Core. The battery is pre-installed. Connect the provided charger to the unit's charging port and plug it into a standard electrical outlet. The display will indicate charging status. A full charge typically takes several hours.

Preparing the Meal Container

Wash the stainless steel meal container and its lid with warm, soapy water before initial use. Ensure it is completely dry before placing food inside and inserting it into the LunchEAZE Core unit.

OPERATING INSTRUCTIONS

Placing Food

Place your desired meal into the stainless steel container. Secure the lid tightly to prevent spills and ensure efficient heating. Insert the filled container into the LunchEAZE Core base unit.

Setting the Heating Schedule

The LunchEAZE Core features automatic heating. To set your mealtime:

1. Press the power button to turn on the unit.
2. Use the up and down arrow buttons to adjust the desired eating time. The display shows 'Hours until meal'.
3. Once the time is set, the unit will automatically begin heating approximately 2 hours before your set mealtime to ensure your food is hot and ready.



Figure 3: Adjusting the 'Hours until meal' setting on the LunchEAZE Core's display.

Temperature Control

The LunchEAZE Core heats food to temperatures between 170°F and 220°F. The unit automatically regulates the

temperature to ensure food is thoroughly heated without overcooking.



Figure 4: The LunchEAZE Core display showing the heating temperature.

Food Compatibility

The LunchEAZE Core is compatible with both fresh and frozen meals. For best results with frozen meals, allow extra heating time or set the mealtime further in advance.

MAINTENANCE

Cleaning

The stainless steel meal container and its lid are designed for easy cleaning. They should be hand washed only with warm, soapy water. Do not place them in a dishwasher.

The main LunchEAZE Core unit should be wiped clean with a damp cloth. Do not submerge the main unit in water or rinse it under a tap.

Storage

Store the LunchEAZE Core in a cool, dry place when not in use. Ensure the unit is clean and dry before storage.

TROUBLESHOOTING

Unit Not Heating or Turning On

- Ensure the unit is fully charged. Connect the charger and check the charging indicator.
- Verify that the mealtime is correctly set and sufficient time has been allowed for the automatic heating cycle (approximately 2 hours before the set time).
- If the unit displays erratic behavior or flashing lights, try resetting it by holding the power button for 10 seconds or

until the display clears, then restart.

Food Not Hot Enough

- Check that the meal container lid is securely fastened.
- Ensure the container is properly seated within the main unit.
- For frozen meals, allow additional heating time.
- Verify that the battery has sufficient charge for the entire heating cycle.

Short Battery Life

- Ensure the unit is fully charged before each use.
- Battery performance can be affected by extreme temperatures. Use the unit within recommended environmental conditions.
- If battery life significantly degrades over time, contact customer support for potential battery replacement.


If you encounter issues not covered here, please contact LunchEAZE customer support for further assistance.

SPECIFICATIONS

Brand	LunchEAZE
Model Number	LunchEAZE_Core
Color	Almond Tan
Material	BPA Free, Polypropylene, Stainless Steel
Capacity	940 Milliliters
Item Weight	2.6 Pounds
Product Dimensions	5.75"L x 7.25"W x 4.5"H
Power Source	Battery Powered (1 Lithium Ion battery required)
Heating Temperature Range	170°F to 220°F
Care Instructions	Hand Wash Only (meal container)


WARRANTY AND SUPPORT

Specific warranty details are not provided in this manual. For information regarding warranty coverage, product support, or to purchase replacement parts, please visit the official LunchEAZE website or contact their customer service directly.

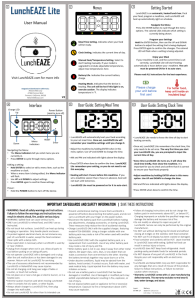

[LunchEAZE Lite Heated Lunch Box User Manual](#)

User manual for the LunchEAZE Lite, an automatic, heated lunch box designed to heat food on schedule. Provides instructions on setup, operation, safety, troubleshooting, and maintenance.

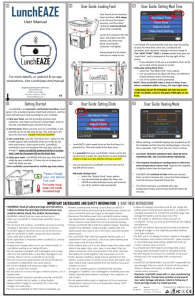

[LunchEAZE User Manual: Your Guide to the Heated Lunchbox](#)

Discover how to use your LunchEAZE heated lunchbox with this comprehensive user manual. Learn about setup, operation, heating modes, safety precautions, troubleshooting, and mobile app features for convenient, hot meals on the go.



[LunchEAZE Affiliate Program Guide](#)

Discover the LunchEAZE affiliate program, detailing product features, content creation tips, earning potential, and support resources for promoting the innovative self-heating lunchbox.