

[manuals.plus](#) /

- › [TELESIN](#) /
- › [TELESIN Magnetic Selfie Light for Phone - Instruction Manual](#)

## TELESIN Oth-AB403

# TELESIN Magnetic Selfie Light for Phone - Instruction Manual

Model: Oth-AB403

## 1. PRODUCT OVERVIEW

The TELESIN Magnetic Selfie Light is a versatile and portable lighting solution designed to enhance your photos and videos. Featuring strong magnetic attachment, three adjustable light modes, and a 180° flip design, it is compatible with MagSafe-enabled iPhones and other smartphones using the included magnetic ring.



Figure 1: TELESIN Magnetic Selfie Light in use and folded.

## 2. PACKAGE CONTENTS

Verify that all items are present in your package:

- Magnetic Selfie Light ×1
- Magnetic Ring ×1
- Charging Cable ×1
- User Manual ×1

## 3. SETUP

### 3.1 Charging the Device

Before first use, fully charge the Magnetic Selfie Light using the provided charging cable. Connect the USB-C end of the cable to the light and the USB-A end to a compatible power source (e.g., wall adapter, computer USB port).

### 3.2 Attaching to Your Phone

The selfie light offers two methods for attachment:

- 1. For MagSafe-compatible Phones (iPhone 12 series and newer):** Simply align the magnetic light with the MagSafe area on the back of your phone or MagSafe-compatible case. The strong magnets will securely attach the light.
- 2. For Other Smartphones:** Use the included adhesive magnetic ring. Peel off the protective film from the magnetic ring and carefully center it on the back of your phone or phone case. Press firmly for a few seconds to ensure a secure bond. Once the ring is attached, you can magnetically attach the selfie light to it.



Figure 2: Magnetic ring attachment for non-MagSafe phones.

Your browser does not support the video tag.

Video 1: Demonstrates the magnetic attachment and 180° flip function of the TELESIN Magnetic Selfie Light.

## 4. OPERATING INSTRUCTIONS

### 4.1 Power On/Off

Locate the power button on the device. Press and hold the power button for 2-3 seconds to turn the light on or off.

### 4.2 Adjusting Brightness and Color Temperature

The selfie light features adjustable brightness and three color temperature modes:

- **Brightness Adjustment:** While the light is on, short press the power button to cycle through brightness levels from 0% to 100%.
- **Color Temperature Modes:** The light offers three distinct color temperatures:
  - **Cold Light (9000K):** Provides a bright, cool white light.
  - **Soft Light (4500K):** Offers a balanced, neutral white light.
  - **Warm Light (2500K):** Delivers a soft, warm yellow light.

To switch between color temperatures, double-press the power button.



Figure 3: Available color temperature modes.

#### 4.3 180° Flip Design

The light features a 180° flip mechanism, allowing you to direct the light forward for your main camera or flip it towards you for selfies and video calls using the front camera. Gently pivot the light to adjust its angle as needed.

## 180°Flexible Flip looks great for selfies and regular shots



Figure 4: 180° flip design for versatile lighting.

## 5. MAINTENANCE

### 5.1 Cleaning

Wipe the surface of the selfie light with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners, as these may damage the device.

### 5.2 Storage

Store the device in a cool, dry place away from direct sunlight and extreme temperatures. When not in use for extended periods, ensure the battery is partially charged (around 50%) to prolong its lifespan.

### 5.3 Battery Care

The device contains a built-in Lithium Ion battery. Avoid fully discharging the battery frequently. Recharge the device when the battery level is low to maintain optimal battery health.

## 6. TROUBLESHOOTING

### 6.1 Light Not Turning On

- Ensure the device is charged. Connect it to a power source using the charging cable.
- Press and hold the power button for 2-3 seconds. A short press may only adjust brightness if already on.

### 6.2 Light Not Charging

- Check if the charging cable is securely connected to both the light and the power source.
- Try a different USB port or power adapter.
- Ensure the charging cable is not damaged.

## 6.3 Weak Magnetic Attachment

- For MagSafe-compatible phones, ensure there is no thick case interfering with the magnetic connection.
- If using the adhesive magnetic ring, ensure it is properly centered and securely attached to your phone or case. Clean the surface before applying the ring.

## 6.4 Brightness or Color Temperature Issues

- Short press the power button to adjust brightness.
- Double-press the power button to cycle through color temperature modes.
- If issues persist, try fully charging the device.

## 7. SPECIFICATIONS

Model Number	Oth-AB403
Package Dimensions	4.09 x 3.66 x 0.71 inches
Item Weight	2.88 ounces
Battery Type	1 Lithium Ion battery (included)
Connectivity Technology	USB
Color Temperatures	2500K - 9000K (3 modes)
Brightness Adjustment	0% to 100%

## 8. WARRANTY AND SUPPORT

### 8.1 Warranty Information

This product comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package or visit the official TELESIN website for detailed warranty terms and conditions.

### 8.2 Customer Support

For technical assistance, troubleshooting, or product inquiries, please visit the official TELESIN website or contact their customer support team through the contact information provided on their website.

© 2024 TELESIN. All rights reserved.