

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Outsunny](#) /

> [Outsunny 48.5" Garden Bench \(Model 84G-206V00BU\) Instruction Manual](#)

Outsunny 84G-206V00BU

Outsunny 48.5" Garden Bench Instruction Manual

Model: 84G-206V00BU

1. PRODUCT OVERVIEW

The Outsunny 48.5" Garden Bench is a two-seater outdoor patio bench designed for comfort and durability. Constructed with a lightweight aluminum frame and a slatted seat, it is suitable for various outdoor settings such as lawns, parks, decks, and patios. Its design promotes airflow and allows for quick drainage after rain.



Image 1.1: The Outsunny 48.5" Garden Bench, showcasing its design and suitability for outdoor environments.

2. SAFETY INFORMATION

Please read and understand all safety instructions before assembly and use.

- **Weight Capacity:** Do not exceed the maximum weight capacity of 528 lbs (240 kg). Overloading the bench can cause damage or injury.
- **Stable Placement:** Ensure the bench is placed on a flat, stable, and level surface to prevent tipping.
- **Regular Inspection:** Periodically check all bolts and connections to ensure they remain tight. Retighten as necessary.
- **Children:** Supervise children when they are near or using the bench.
- **Moving the Bench:** When moving the bench, lift it rather than dragging to prevent damage to the legs or frame.

3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly. If any parts are missing or damaged, contact customer support.

- Bench Frame Components (legs, seat, backrest)
- Hardware Pack (bolts, washers, nuts, Allen wrench)
- Assembly Instructions Manual

4. ASSEMBLY INSTRUCTIONS

Assembly of the Outsunny Garden Bench is designed to be straightforward. All necessary hardware and a detailed manual are included to guide you through each step.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Identify Parts:** Refer to the included parts list in your manual to identify each component.
3. **Attach Legs:** Securely attach the legs to the seat frame using the provided bolts and an Allen wrench. Do not fully tighten bolts until all components are loosely assembled.
4. **Connect Backrest:** Attach the backrest to the seat and leg assembly. Ensure all holes align correctly.
5. **Final Tightening:** Once all parts are in place and aligned, gradually tighten all bolts evenly until secure. Do not overtighten.
6. **Stability Check:** Gently shake the bench to ensure it is stable and all connections are firm.



Image 4.1: Detail of the aluminum frame, highlighting its construction and anti-rust/anti-corrosion properties.

PRODUCT DETAILS



Slat Design

Backrest



Image 4.2: Detail of the slatted design on the seat and backrest, which aids in breathability and drainage.

5. OPERATING INSTRUCTIONS

The Outsunny Garden Bench is designed for comfortable outdoor seating.

- **Placement:** Position the bench in your desired outdoor area, ensuring it is on a flat and stable surface.
- **Usage:** The bench comfortably accommodates two individuals. Sit gently on the bench.
- **Relocation:** If you need to move the bench, lift it by the frame rather than dragging it to prevent damage.



Image 5.1: The Outsunny Garden Bench providing comfortable seating for two people in a patio environment.

6. MAINTENANCE

Proper care will extend the life and appearance of your Outsunny Garden Bench.

- **Cleaning:** Wipe clean with a damp cloth. For stubborn dirt, use a mild soap solution and rinse thoroughly. Avoid harsh chemicals or abrasive cleaners.
- **Drying:** Ensure the bench is completely dry after cleaning or rain to prevent water spots.
- **Winter Storage:** During harsh weather conditions or prolonged periods of non-use, consider storing the bench indoors or covering it with a protective cover to prolong its lifespan.
- **Frame Care:** The aluminum frame is powder-coated for protection against rust and corrosion. Avoid scratching the coating.

7. TROUBLESHOOTING

If you encounter any issues with your Outsunny Garden Bench, refer to these common solutions:

- **Bench is Wobbly:** Check all assembly bolts and ensure they are securely tightened. Make sure the bench is on a level surface.

- **Difficulty Assembling:** Review the assembly instructions carefully. Ensure all parts are oriented correctly before tightening bolts. Do not force parts together.
- **Surface Scratches:** Minor scratches on the aluminum frame can be touched up with appropriate outdoor-grade paint if desired.

For further assistance, please contact Outsunny customer support.

8. SPECIFICATIONS

Feature	Specification
Model Number	84G-206V00BU
Overall Dimensions (D x W x H)	26.5" x 48.5" x 31" (67.3 cm x 123.2 cm x 78.7 cm)
Seat Dimensions (W x D)	48.5" x 15.75" (123.2 cm x 40 cm)
Seat Height	17" (43.2 cm)
Material	Aluminum
Frame Material	Aluminum (Powder Coated)
Color	Blue
Item Weight	19 lbs (8.6 kg)
Maximum Weight Capacity	528 lbs (240 kg)
Seating Capacity	2 people
Assembly Required	Yes



Image 8.1: Dimensional diagram of the Outsunny Garden Bench, illustrating key measurements.

9. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the documentation included with your purchase or visit the official Outsunny website. If you have any questions regarding assembly, missing parts, or product functionality, please contact the manufacturer directly.

Manufacturer: Aosom LLC