

manuals.plus /

› [FightBox](#) /

› [FightBox F1-PC All Button Leverless Arcade Fight Stick Game Controller User Manual](#)

FightBox F1-PC

FightBox F1-PC All Button Leverless Arcade Fight Stick Game Controller User Manual

INTRODUCTION

This manual provides essential information for the setup, operation, maintenance, and troubleshooting of your FightBox F1-PC All Button Leverless Arcade Fight Stick Game Controller. This device is designed for precision gaming and is compatible with PC, PlayStation 3 (PS3), and Nintendo Switch systems.



Image: The FightBox F1-PC All Button Leverless Arcade Fight Stick, showcasing its compact design and button layout.

SETUP INSTRUCTIONS

Unpacking

Carefully remove the FightBox F1-PC controller from its packaging. Ensure all components are present and undamaged. Retain the packaging for future storage or transport.

Connecting to Your Device

The FightBox F1-PC connects via a standard USB Type-B cable. Connect one end of the USB cable to the port on the back of the controller and the other end to an available USB port on your PC, PS3, or Nintendo Switch.



Image: Top view of the FightBox F1-PC controller, showing the button layout.



Image: Side view of the FightBox F1-PC controller, highlighting its slim profile.



Image: Bottom view of the FightBox F1-PC controller, showing the non-slip feet.

PC Version Buttons



The HOME button is used to switch between PC360 mode [default] and other modes
The MODE button is used to switch between the cross keys and the left/right stick

Image: FightBox F1-PC controller with dimensions (35cm x 20cm x 4cm) and weight (1.5 KG) indicated.

OPERATING INSTRUCTIONS

Button Layout and Functions

The FightBox F1-PC features an all-button leverless layout, optimized for precise and rapid input. The primary action buttons are arranged for ergonomic use in fighting games.



Image: FightBox F1-PC button layout for PC version, indicating HOME, MODE, R3, L3, START, SELECT, and action buttons (X, Y, A, B, R1, R2, L1, L2).

- **HOME Button:** Used to switch between PC360 mode (default) and other compatible modes.
- **MODE Button:** Used to switch between the cross keys (D-pad) and the left/right stick inputs.
- **START/SELECT Buttons:** Standard game control functions.
- **R3/L3 Buttons:** Additional control functions, typically for specific game actions.

SOCD Modes

The FightBox F1-PC supports multiple Simultaneous Opposing Cardinal Directions (SOCD) modes, which are crucial for competitive play in leverless controllers. These modes determine how conflicting directional inputs are resolved.

- **Up Priority SOCD Mode (Default):** When Up and Down are pressed simultaneously, Up input is prioritized.
- **Neutral (CAPCOM) SOCD Mode:** When opposing directions are pressed simultaneously (e.g., Left and Right, or Up and Down), the input results in a neutral state.
- **Last Win SOCD Mode:** The last directional input pressed takes precedence over the opposing direction.

SOCD Modes Resolution Table

Inputs	Up Priority	Neutral (CAPCOM)	Last Win
Left + Right	Neutral	Neutral	Right
Right + Left	Neutral	Neutral	Left
Up + Down	Up	Neutral	Down
Down + Up	Up	Neutral	Up

Table: This table illustrates how simultaneous opposing directional inputs are resolved under different SOCD modes.

Product Overview Video



Video: An official overview of the FightBox F1-PC All Button Leverless Arcade Game Controller, demonstrating its features and basic operation.

MAINTENANCE

Cleaning

To maintain the appearance and functionality of your controller, regularly wipe the surface with a soft, dry cloth. For stubborn marks, a slightly damp cloth can be used, followed by immediate drying. Avoid using harsh chemicals or abrasive cleaners.

Storage

Store the controller in a cool, dry place away from direct sunlight and extreme temperatures. When not in use for extended periods, disconnect it from your device and consider storing it in its original packaging or a protective case to prevent dust accumulation and accidental damage.

TROUBLESHOOTING

Common Issues and Solutions

- **Controller Not Recognized:**
 - Ensure the USB cable is securely connected to both the controller and your device.
 - Try connecting to a different USB port.
 - Restart your PC or console.
 - For PC, ensure necessary drivers are installed (usually plug-and-play for PC360 mode).
- **Inputs Not Responding:**
 - Verify the controller is in the correct mode for your system (e.g., PC360 mode for PC).
 - Check game settings to ensure the controller is selected as the input device.
 - Test buttons using a controller testing utility on PC.
- **Input Lag:**
 - Ensure you are using a high-quality USB cable.
 - Connect directly to your device's USB port, avoiding USB hubs if possible.

- Close any unnecessary background applications on your PC.

SPECIFICATIONS

Feature	Detail
Model	F1-PC
Compatibility	PC, PlayStation 3 (PS3), Nintendo Switch
Dimensions	13.78 x 7.87 x 1.57 inches (35 x 20 x 4 cm)
Item Weight	4.29 pounds (1.95 kg)
Input Type	All Button Leverless
SOCD Support	Up Priority, Neutral (CAPCOM), Last Win
Connectivity	USB Type-B
Manufacturer	FightBox
Date First Available	January 25, 2024

WARRANTY AND SUPPORT

Specific warranty details are not provided within this manual. Please refer to the product packaging, the point of purchase, or the official FightBox website for comprehensive warranty information.

For technical support, product inquiries, or service requests, please contact FightBox customer support through their official channels. Contact information can typically be found on the manufacturer's website or included documentation.