

[Manuals.plus](#) /

> [VINGLI](#) /

> VINGLI Heavy Duty 5FT Wicker Hanging Porch Swing Instruction Manual

VINGLI VL-G56000654

VINGLI Heavy Duty 5FT Wicker Hanging Porch Swing Instruction Manual

Model: VL-G56000654

Brand: VINGLI

INTRODUCTION

Thank you for choosing the VINGLI Heavy Duty Wicker Hanging Porch Swing. This manual provides essential information for the safe assembly, operation, and maintenance of your new porch swing. Please read all instructions carefully before use and retain this manual for future reference.

Safety Information

- Ensure all components are securely fastened before each use.
- Do not exceed the maximum weight capacity of 800 lbs.
- Always supervise children when they are using the swing.
- Regularly inspect chains and connections for wear or damage.
- Remove cushions during heavy rain or adverse weather conditions to prolong their lifespan.

PRODUCT OVERVIEW

The VINGLI Heavy Duty Wicker Hanging Porch Swing is designed for outdoor use, offering comfort and durability. It features a robust metal frame wrapped in all-weather PE rattan, complete with comfortable cushions.

Key Features:

- **High Weight Capacity:** Supports up to 800 lbs.
- **Upgraded Chains:** Features loop lock design for enhanced safety and adjustable tilt angles.
- **Cushions Included:** Extra soft sponge cushions with zippered covers for easy cleaning.
- **All-Weather PE Material:** Durable rattan construction resistant to rain and sunlight.
- **Extra Comfort:** Provides superior comfort compared to swings made from metal or wood alone.

Dimensions:

- Product Dimensions: 22.4"D x 63.19"W x 19.29"H
- Seat Depth: 22.4 inches
- Item Weight: 17.2 pounds



Image: Detailed dimensions of the VINGLI 5FT Wicker Hanging Porch Swing, indicating a length of 63.2 inches and a weight capacity of 800 lbs.

SETUP AND ASSEMBLY

Assembly is required for this product. Please follow these general steps. Refer to the included assembly instructions for detailed diagrams and specific hardware. It is recommended to have two people for assembly.

Required Tools (Not Included):

- Wrench (for tightening bolts)
- Screwdriver (if applicable)
- Mounting hardware (e.g., lag eyebolts for beam/tree installation, not included with swing)

Assembly Steps:

1. **Unpack Components:** Carefully remove all parts from the packaging. Verify that all components listed in the

packing list are present.

2. **Assemble Frame:** Connect the base and side frames according to the provided diagrams. Ensure all bolts are finger-tightened initially.
3. **Attach Backrest:** Secure the backrest to the assembled frame.
4. **Secure All Connections:** Once the main structure is formed, fully tighten all bolts and screws. Do not overtighten.
5. **Attach Chains:** Connect the hanging chains to the designated points on the swing frame using the provided hooks/carabiners. Ensure the loop lock mechanism is correctly engaged for security.
6. **Install Cushions:** Place the seat cushion and back pillows onto the swing.
7. **Mount the Swing:** Securely hang the swing from a sturdy support structure (e.g., a porch beam, a swing stand, or a tree branch) using appropriate mounting hardware (not included). Ensure the support structure can safely bear the swing's weight plus the maximum user weight.
8. **Adjust Height:** Use the adjustable chain length to set the desired swing height.



Image: The VINGLI Wicker Hanging Porch Swing fully assembled with cushions and chains, ready for installation.

OPERATING INSTRUCTIONS

Using your VINGLI Porch Swing is straightforward, but always prioritize safety.

General Use:

- Gently sit on the swing, ensuring even weight distribution.
- Initiate swinging with a gentle push. Avoid excessive force or sudden movements.
- Do not stand on the swing or use it as a ladder.
- Ensure adequate clearance around the swing to prevent collisions with walls, furniture, or other objects.

Adjusting Swing Height/Angle:

The chains feature a loop lock design for easy adjustment. To change the height or tilt angle:

1. Ensure no one is on the swing.
2. Carefully unhook the carabiner from the current chain link.
3. Move the carabiner to a different link on the chain to achieve the desired height or angle.
4. Securely re-engage the carabiner. Double-check that both sides are adjusted evenly for balanced swinging.



Image: Close-up view of the adjustable chain and gourd clasp design, highlighting the secure connection points for adjusting the swing's height and tilt.

MAINTENANCE

Proper maintenance will extend the life and appearance of your VINGLI Porch Swing.

Cushion Care:

- The cushions feature a zippered design, allowing covers to be removed for cleaning.
- Machine wash covers in cold water on a gentle cycle with mild detergent. Air dry only; do not tumble dry.
- For minor spills, spot clean with a damp cloth and mild soap.
- Store cushions indoors during prolonged periods of non-use or inclement weather to prevent fading and mildew.

PE Rattan and Frame Care:

- Wipe down the PE rattan and metal frame with a soft, damp cloth and mild soap. Rinse thoroughly with clean water.
- Avoid using harsh chemicals or abrasive cleaners, as these can damage the finish.
- The PE rattan is all-weather resistant, but regular cleaning helps maintain its appearance.
- Periodically check all bolts and connections to ensure they remain tight. Tighten if necessary.

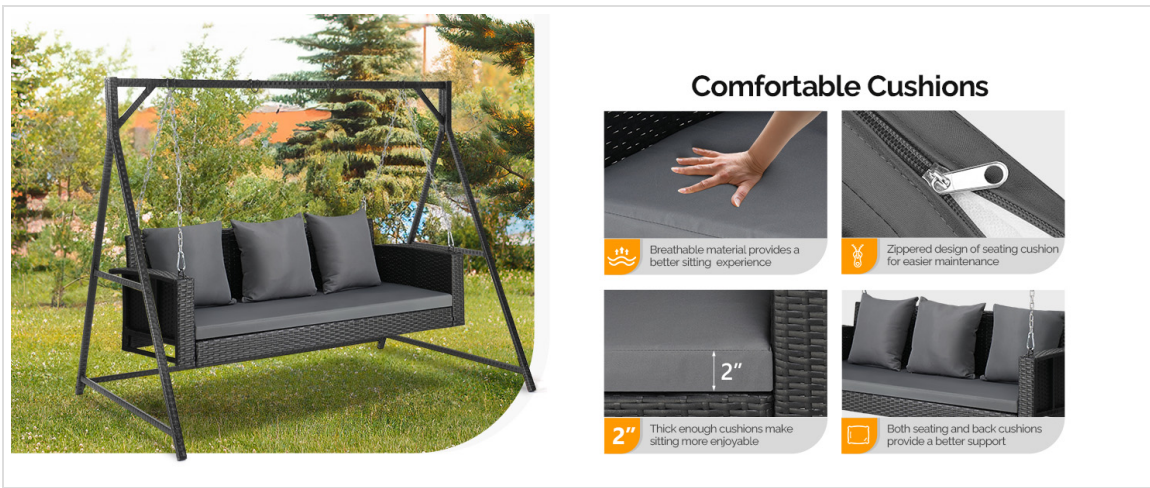


Image: Detail of the cushion's zippered design, illustrating the ease of removing covers for cleaning, and highlighting the breathable material for comfort.



Image: The VINGLI Wicker Hanging Porch Swing shown in both sunny and rainy environments, emphasizing its durable PE rattan construction that is resistant to various weather conditions.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Swing feels unstable or wobbly.	Loose connections or uneven hanging.	Check all bolts and connections, tighten if necessary. Ensure the swing is hung evenly from a stable support structure.
Cushions appear dirty or stained.	Exposure to dirt, dust, or spills.	Remove cushion covers and machine wash as per care instructions. Spot clean minor stains.
Difficulty adjusting swing height.	Carabiner not fully disengaged or engaged.	Ensure the carabiner is fully open before attempting to move it to a different chain link. Confirm it is securely closed after adjustment.
Rattan appears dull or faded.	Accumulation of dirt or prolonged sun exposure.	Clean the rattan with mild soap and water. While weather-resistant, prolonged direct sun exposure can cause minor fading over time. Consider a cover for extended periods.

SPECIFICATIONS

Feature	Detail
Brand	VINGLI
Model Number	VL-G56000654
Color	Black
Product Dimensions	22.4"D x 63.19"W x 19.29"H
Frame Material	Metal
Finish Type	Unfinished
Seat Depth	22.4 inches
Assembly Required	Yes
Item Weight	17.2 pounds
Maximum Weight Capacity	800 lbs

WARRANTY AND SUPPORT

For specific warranty details, please refer to the documentation included with your purchase or contact VINGLI customer support directly. Keep your purchase receipt as proof of purchase.

Customer Support:

If you encounter any issues or have questions regarding your VINGLI Heavy Duty Wicker Hanging Porch Swing, please contact VINGLI customer service through their official website or the retailer where the product was purchased.
