

VINGLI VL-G56000656

VINGLI 2.2 FT 1-Person Rattan Porch Swing Instruction Manual

Model: VL-G56000656

1. INTRODUCTION

Thank you for choosing the VINGLI 2.2 FT 1-Person Rattan Porch Swing. This manual provides essential information for the safe assembly, operation, and maintenance of your new outdoor swing. Please read these instructions carefully before use and retain them for future reference.

2. SAFETY INFORMATION

- **Weight Capacity:** This swing is designed to support a maximum weight of 440 lbs (200 kg). Do not exceed this limit to prevent injury or damage.
- **Proper Installation:** Ensure the swing is securely installed to a sturdy support structure capable of holding the swing's weight plus the maximum user weight. Use appropriate hardware and follow all assembly instructions.
- **Adjustable Chains:** The chains are adjustable. Ensure all chain links are properly secured and locked before use. Regularly inspect chains for wear or damage.
- **Weather Precautions:** While the PE rattan is all-weather resistant, it is recommended to remove cushions during heavy rain or extreme weather conditions to prolong their lifespan.
- **Supervision:** Children should be supervised while using the swing.
- **Regular Inspection:** Periodically check all bolts, nuts, and connections to ensure they are tight and secure.

3. PACKAGE CONTENTS

Before assembly, verify that all components are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Rattan Swing Bench Frame
- Seat Cushion (2-inch thick)
- Back Cushions (6-inch thick)
- Adjustable Hanging Chains with Gourd Clasps
- Assembly Hardware (bolts, nuts, washers, Allen wrench)

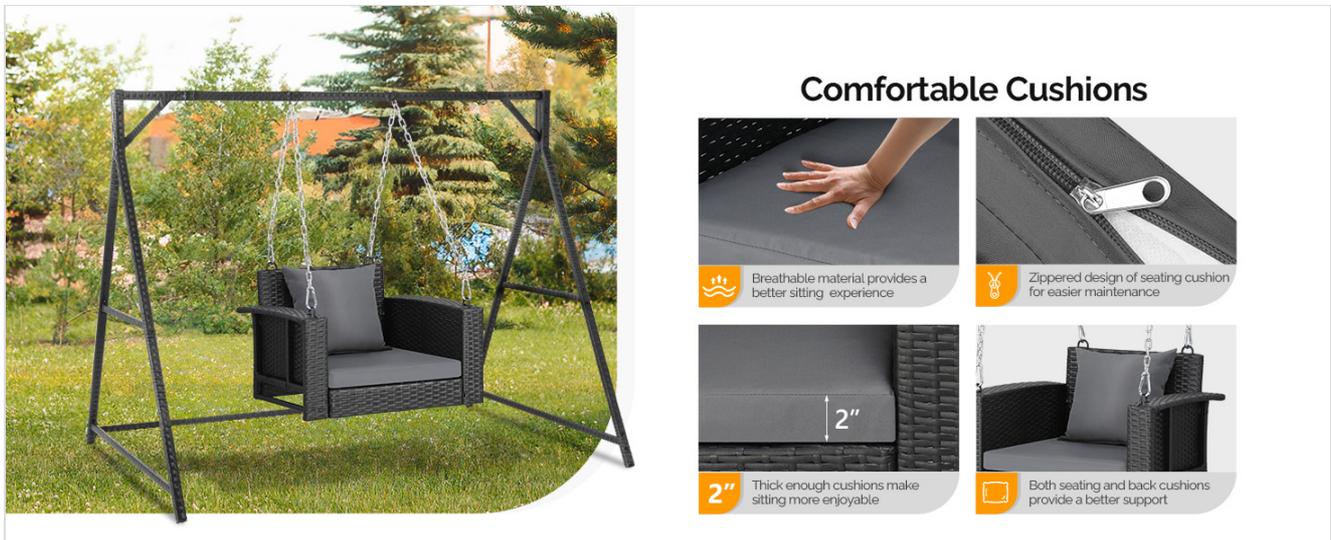


Figure 3.1: Reinforced Comfort with 2-inch seat cushion and 6-inch back cushions.

4. ASSEMBLY AND SETUP

Assembly is required. It is recommended to have two people for easier and safer assembly.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Assemble Frame:** Follow the detailed diagrams in the included assembly guide to connect the frame components using the provided hardware. Ensure all bolts are tightened securely.
3. **Attach Chains:** Securely attach the adjustable hanging chains to the designated points on the swing frame using the gourd clasps.
4. **Hang the Swing:** Attach the other end of the chains to your chosen sturdy support structure (e.g., a porch beam, a swing stand, or a tree branch with appropriate hanging hardware, not included). Ensure the support can safely bear the swing's weight and occupants.
5. **Adjust Height:** The gourd clasp design allows for easy adjustment of the swing's tilt angle and height. Adjust to a comfortable and safe level.
6. **Place Cushions:** Position the seat and back cushions onto the swing.



Figure 4.1: Adjustable and Secure Chains with Gourd Clasps.

5. OPERATING INSTRUCTIONS

Once assembled and securely installed, your VINGLI Rattan Porch Swing is ready for use. Enjoy its comfortable design and gentle motion.

- **Seating:** The swing is designed for 1 person. Sit centrally on the seat cushion with your back against the back cushions for optimal comfort and stability.
- **Gentle Motion:** Initiate swinging with a gentle push. Avoid excessive force or sudden movements that could destabilize the swing or its support structure.
- **Relaxation:** The extra soft sponge cushions provide enhanced comfort, making it ideal for relaxing in your garden, yard, or porch.



Figure 5.1: VINGLI Rattan Porch Swing in use under a porch.



Figure 5.2: Ideal for 1-Person Use or Small Spaces.

6. MAINTENANCE

Proper maintenance will ensure the longevity and appearance of your VINGLI Rattan Porch Swing.

- **Cushion Care:** The cushions feature a zippered design, allowing for easy removal of covers for cleaning. Hand wash or machine wash on a gentle cycle with mild detergent. Air dry thoroughly.
- **Rattan Cleaning:** The PE rattan material is designed for all-weather use. Clean the rattan frame with a soft cloth, mild soap, and water. Rinse thoroughly and allow to air dry. Avoid harsh chemicals or abrasive cleaners.
- **Weather Protection:** Although the rattan is weather-resistant, it is advisable to store cushions indoors during prolonged periods of non-use or severe weather.
- **Chain Inspection:** Periodically check the hanging chains for any signs of rust, wear, or damage. Replace if necessary.

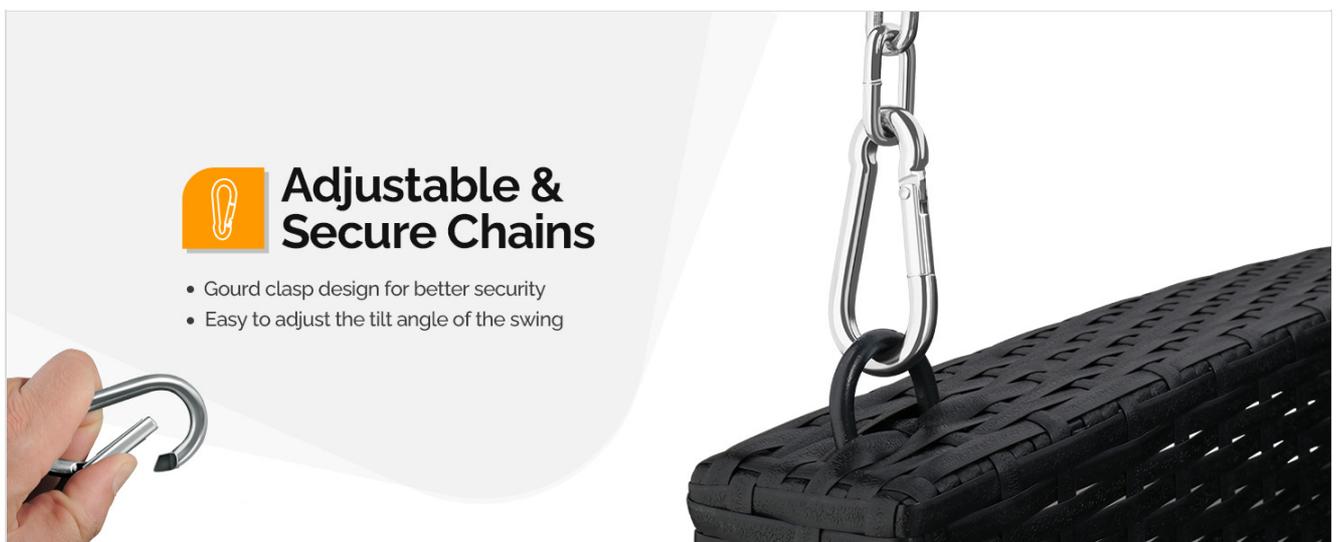


Figure 6.1: Detachable zippered cushion design for easy cleaning.

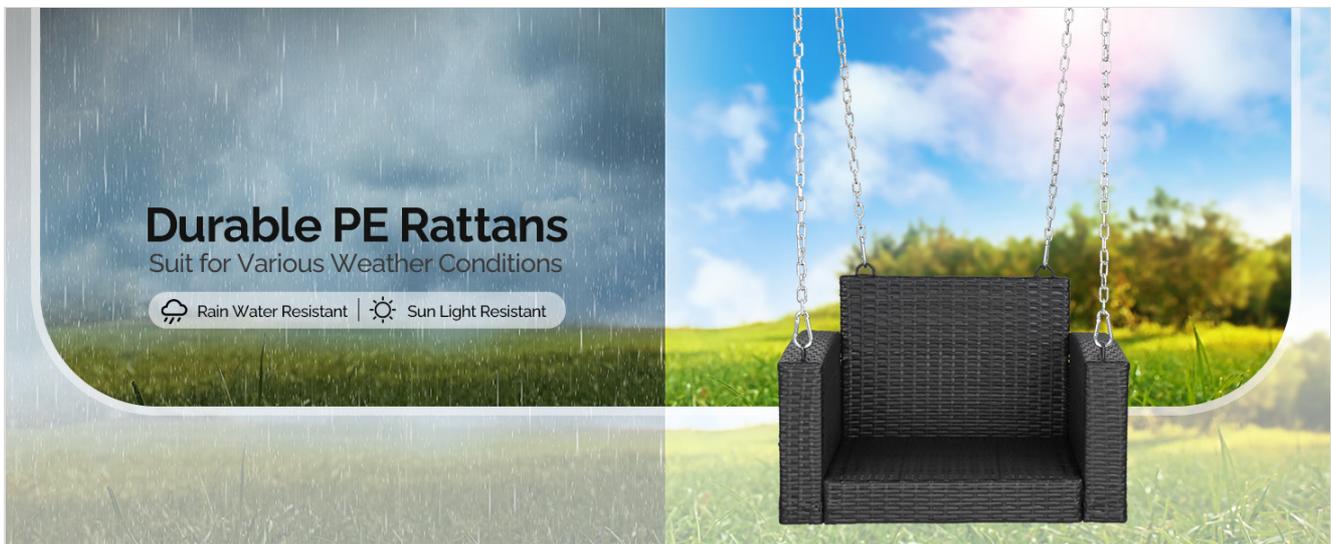


Figure 6.2: All-Weather Resistant PE Rattan.

7. TROUBLESHOOTING

If you encounter any issues with your VINGLI Rattan Porch Swing, please refer to the following common solutions:

- **Swing feels unstable:** Ensure all assembly bolts are securely tightened. Verify that the hanging chains are evenly adjusted and securely attached to a stable support structure.
- **Chains are too long/short:** Use the gourd clasps to adjust the chain length to achieve the desired height and swing angle.
- **Cushions appear dirty:** Remove the cushion covers using the zipper and follow the cleaning instructions in the Maintenance section.
- **Rattan appears damaged:** For minor damage, small repairs may be possible with appropriate rattan repair kits. For significant damage, contact customer support.

8. SPECIFICATIONS

Feature	Specification
Brand	VINGLI
Model Number	VL-G56000656
Color	Black
Product Dimensions	21.7"D x 26.4"W x 19.1"H
Frame Material	Rattan
Seat Depth	21.7 inches
Assembly Required	Yes
Item Weight	22.9 pounds
Maximum Weight Capacity	440 LBS
UPC	810158423411



Figure 8.1: Product Dimensions and Weight Capacity.

9. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the documentation included with your purchase or contact VINGLI customer service directly. Keep your purchase receipt as proof of purchase.