

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Koolatron](#) /

› [Kenmore Upright Convertible Refrigerator/Freezer User Manual](#)

## Koolatron KKUF14-W

# User Manual

Kenmore Upright Convertible Refrigerator/Freezer Model KKUF14-W

## 1. INTRODUCTION

---

This manual provides essential information for the safe and efficient operation of your Kenmore Upright Convertible Refrigerator/Freezer, Model KKUF14-W. Please read it thoroughly before installation, use, or maintenance.

### Important Safety Information

Always follow basic safety precautions to reduce the risk of fire, electric shock, or injury when using this appliance.

- Ensure the appliance is properly grounded.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Keep ventilation openings clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

## 2. SETUP AND INSTALLATION

---

### Unpacking

Carefully remove all packaging materials, including foam and adhesive tape. Inspect the appliance for any shipping damage. Report any damage to your retailer immediately.

### Placement

Place the appliance on a flat, stable surface strong enough to support its weight when fully loaded. Ensure adequate air circulation around the unit. Avoid direct sunlight or heat sources.



Image: The Kenmore Upright Convertible Refrigerator/Freezer positioned in a kitchen, demonstrating suitable placement with adequate surrounding space.

## Leveling

Adjust the leveling feet at the bottom of the appliance to ensure it is stable and level. A level appliance operates more efficiently and prevents the door from swinging open or closed unintentionally.

## Power Connection

Connect the appliance to a dedicated 115 Volt, 60 Hz, 15 Amp grounded electrical outlet. Do not use extension cords or adapter plugs.

## 3. OPERATING INSTRUCTIONS

---

### Control Panel

Your appliance features an external digital control panel for easy temperature management and mode selection.

# FEATURES



**ENERGY STAR  
CERTIFIED**



**QUICK FREEZE  
MODE**



**LED INTERIOR  
LIGHT**



**FROST FREE  
DESIGN**



**REMOVABLE  
SHELVES**



Image: A detailed view of the external digital control panel, showing the LED display, temperature controls, and mode selection buttons.

- **Clear LED Display:** Shows the current temperature.
- **High Temp. Alarm:** Alerts if the internal temperature rises above safe levels.
- **Door Open Alert:** Notifies if the door is left ajar.
- **One-Touch Controls:** For adjusting temperature and switching modes.

## Temperature Settings

Use the up and down arrows on the control panel to set your desired temperature. Allow several hours for the appliance to reach the set temperature after initial power-on or temperature adjustment.

## Convertible Mode

This appliance can function as either a freezer or a refrigerator. Use the "Freezer/Fridge" button on the control panel to

switch between modes.



## GARAGE-READY IN FREEZER MODE



Image: A visual representation of the appliance's convertible functionality, showing its interior configured for freezer use (10 to -11°F / -12 to -24°C) and refrigerator use (35 to 46°F / 2 to 8°C).

- **Freezer Mode:** Operates at temperatures from 10°F to -11°F (-12°C to -24°C).
- **Refrigerator Mode:** Operates at temperatures from 35°F to 46°F (2°C to 8°C).

### Quick Freeze Feature

Activate the Quick Freeze function for rapid cooling of newly added items. This feature temporarily lowers the temperature to freeze food faster, preserving freshness and quality.

## 4. KEY FEATURES

- **14 Cu. Ft. (390L) Capacity:** Provides ample storage space with versatile interior organization, including 4 door compartments and 4 removable/repositionable shelves.

- **Total No-Frost Design:** The auto defrost function prevents ice buildup, eliminating the need for manual defrosting and maintaining optimal operating conditions.
- **Garage-Ready:** Designed with premium insulation and sealing technology, this unit maintains consistent operation even in varying garage temperatures.



Image: The Kenmore Upright Convertible Refrigerator/Freezer placed in a garage, highlighting its "garage-ready" capability in freezer mode.

- **Energy Saving:** This appliance is designed for energy efficiency, helping to reduce electricity consumption. It is Energy Star certified.



Image: The Kenmore Upright Convertible Refrigerator/Freezer displayed alongside the Energy Star certification logo, emphasizing its energy efficiency.

- **LED Interior Lighting:** Bright LED lights illuminate the interior, making it easy to find items.



Image: An interior shot of the appliance, highlighting the bright LED lighting that illuminates the storage space.

- **Reversible Door:** The door can be configured to open from either the left or right side to suit your space requirements.

## 5. MAINTENANCE AND CARE

---

### Cleaning the Interior

Clean the interior regularly with a solution of mild soap and warm water. Wipe dry with a soft cloth. Do not use abrasive cleaners or harsh chemicals.

### Cleaning the Exterior

Wipe the exterior surfaces with a soft cloth dampened with mild detergent and water. For stainless steel models (if applicable), use a stainless steel cleaner. Dry thoroughly.

### Power Outage

In case of a power outage, keep the door closed to maintain the internal temperature for as long as possible. Avoid opening the door unnecessarily.

### Vacation Care

For short vacations, leave the appliance operating normally. For long vacations, consider emptying the appliance, unplugging it, cleaning it thoroughly, and leaving the door slightly ajar to prevent odors.

## 6. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Appliance does not operate	No power; power cord unplugged; circuit breaker tripped.	Check power supply; ensure cord is securely plugged in; reset circuit breaker.
Temperature is not cold enough	Door not closed properly; excessive door openings; warm food added; temperature setting too high.	Ensure door is sealed; reduce door openings; allow warm food to cool before storing; lower temperature setting.
Excessive noise	Appliance not level; objects vibrating against the unit; normal operating sounds.	Adjust leveling feet; ensure nothing is touching the appliance; some sounds (e.g., refrigerant flow) are normal.
Door does not close completely	Appliance not level; gasket dirty or damaged; food packages obstructing.	Level the appliance; clean or replace gasket; rearrange food items.

## 7. SPECIFICATIONS

---

Attribute	Detail
Model Number	KKUF14-W
Brand	Koolatron
Capacity	14 Cubic Feet (390 Liters)
Dimensions (D x W x H)	75.01 x 71.12 x 157 cm (29.53 x 28 x 62.81 inches)
Weight	61.69 kg
Voltage	115 Volts
Defrost System	Frost Free
Energy Rating	Energy Star Certified (BEE Star Rating: 5 Star)
Special Features	Convertible Refrigerator/Freezer, Garage Ready, Reversible Door, LED Interior Lighting, Digital Control Panel

## 8. WARRANTY AND SUPPORT

---

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Koolatron website. Keep your purchase receipt as proof of purchase for any warranty claims.

If you experience any issues not covered in the troubleshooting section, please contact Koolatron customer service for assistance.



