



[Manuals.plus](#) /

› [Wusdayer](#) /

› Wusdayer Wireless Earbuds BX30 User Manual

Wusdayer BX30

Wusdayer Wireless Earbuds BX30 User Manual

Model: BX30 | Brand: Wusdayer

INTRODUCTION

Thank you for choosing the Wusdayer Wireless Earbuds BX30. These sport headphones are designed to provide a high-fidelity audio experience with secure earhooks, extended battery life, and IPX7 waterproofing, making them ideal for workouts, running, and daily use. This manual will guide you through the setup, operation, and maintenance of your new earbuds.

WHAT'S IN THE BOX

- Wireless Earbuds (Left and Right)
- Charging Case
- USB-C Charging Cable
- User Manual
- Eartips (Multiple Sizes: S, M, L)



Image: Wusdayer Wireless Earbuds BX30 in their charging case, showcasing the earbuds and the digital battery display on the case.

SETUP

1. Initial Charging

Before first use, fully charge the charging case and earbuds. The charging case has a 600 mAh capacity and takes approximately 2.5 hours to fully charge. It can provide up to 5 full charges for the earbuds, offering a total playback time of up to 120 hours.

- Connect the provided USB-C charging cable to the charging port on the case and to a compatible USB power source.
- The digital LED display on the charging case will show the battery percentage of the case and individual charging status for each earbud.
- Ensure both earbuds are properly seated in the charging case. The earbuds will show a charging indicator.

80 Hrs Long Playtime

Individual LED Battery Display



Image: The charging case displaying its battery percentage and individual earbud charging status. The case is charged via a USB-C port.

2. Pairing with Your Device (Bluetooth 5.3)

The Wusdayer BX30 earbuds feature one-step automatic pairing for convenience.

1. Open the charging case. The earbuds will automatically enter pairing mode.
2. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "BX30" from the list of available devices to connect.
4. Once connected, you will hear a confirmation tone, and the earbuds will be ready for use.
5. For subsequent uses, the earbuds will automatically connect to the last paired device when removed from the case.

One-Step Pairing

The earbuds will be paired automatically after open charging case



Image: Illustration showing the one-step pairing process where the earbuds automatically connect to a smartphone upon opening the charging case.

Your browser does not support the video tag.

Video: A demonstration of the Wusdayer Sports Earbuds, highlighting their features and ease of use, including the secure fit and sound quality.

3. Wearing the Earbuds

The BX30 earbuds are designed with flexible earhooks for a secure and comfortable fit, especially during physical activity.

- Identify the Left (L) and Right (R) earbuds.
- Gently place the earbud into your ear canal and adjust the earhook over the top of your ear until it feels secure and comfortable.
- Experiment with the different eartip sizes provided to find the best fit for optimal sound quality and comfort.

Designed for Sports

Take out and put on, boost energy and burn calorie



Flexible Earhooks



Image: A person wearing the Wusdayer earbuds with earhooks while running, demonstrating their secure fit for sports activities. Different eartip sizes are also shown.

OPERATING INSTRUCTIONS

Audio Playback and Call Control

The earbuds feature intuitive physical buttons for easy control of your music and calls.

- **Play/Pause:** Single tap either earbud.
- **Next Song:** Double tap the right earbud.
- **Previous Song:** Double tap the left earbud.
- **Volume Up:** Press and hold the right earbud.
- **Volume Down:** Press and hold the left earbud.
- **Answer Call:** Single tap either earbud during an incoming call.
- **Hang Up Call:** Single tap either earbud during an active call.
- **Reject Call:** Press and hold either earbud for 2 seconds during an incoming call.

- **Voice Assistant (Siri/Google Assistant):** Triple tap either earbud.

DUAL AUDIO CONTROLS



Play/Pause



VoiceAssistant



Previous song



Next song



Answer call



Hang Up



Volume up



Volume down

Image: A visual guide to the dual audio controls on the earbuds, illustrating functions like play/pause, volume adjustment, track skipping, voice assistant activation, and call management.

Your browser does not support the video tag.

Video: A short video demonstrating the features of the BX30 Wireless Earbuds, including their design and functionality.

Sound Quality and Features

- **HiFi Sound Quality:** Experience clear, rich audio with precise notes and powerful bass.
- **IPX7 Waterproof:** The earbuds are rated IPX7 waterproof, making them resistant to sweat and splashes, suitable for intense workouts and outdoor activities.
- **Extended Playback:** Enjoy up to 12 hours of continuous playback on a single earbud charge. The charging case extends this to a total of 120 hours.

HiFi Stereo Sound



Crystal-clear HD stereo sound and calls quality



Image: Close-up of an earbud highlighting its HiFi Stereo Sound capabilities, promising crystal-clear HD stereo sound and call quality.

MAINTENANCE

To ensure the longevity and optimal performance of your Wusdayer BX30 earbuds, follow these maintenance guidelines:

- **Cleaning:** Regularly clean the earbuds and charging contacts with a soft, dry, lint-free cloth. Remove any earwax or debris from the eartips and speaker mesh.
- **Storage:** When not in use, store the earbuds in their charging case to protect them and keep them charged.
- **Water Exposure:** While IPX7 waterproof, avoid prolonged submersion in water. After exposure to sweat or water, ensure the earbuds and charging case are completely dry before placing them back in the case to prevent corrosion.
- **Battery Care:** Avoid fully draining the battery frequently. Charge the case regularly, even if not in constant use, to maintain battery health.

TROUBLESHOOTING

If you encounter any issues with your earbuds, refer to the following common solutions:

Problem	Possible Solution
Earbuds not pairing	<p>Ensure earbuds are fully charged.</p> <p>Turn off Bluetooth on your device and turn it back on.</p> <p>Forget "BX30" from your device's Bluetooth list and re-pair.</p> <p>Place earbuds back in the case, close it, wait a few seconds, then open again.</p>
No sound or low volume	<p>Check device volume and earbud volume.</p> <p>Ensure earbuds are properly connected to your device.</p> <p>Clean eartips and speaker mesh for any obstructions.</p>
Earbuds not charging	<p>Ensure charging cable is securely connected.</p> <p>Check if the charging case has sufficient battery.</p> <p>Clean the charging contacts on both earbuds and the case.</p>
Intermittent connection	<p>Ensure your device is within the Bluetooth range (approx. 10 meters).</p> <p>Avoid strong electromagnetic interference.</p> <p>Try re-pairing the earbuds.</p>

SPECIFICATIONS

Feature	Detail
Model Name	BX30
Connectivity Technology	Wireless
Wireless Communication Technology	Bluetooth
Bluetooth Version	5.3
Water Resistance Level	IPX7 Waterproof
Battery Life (Single Earbud)	12 Hours
Carrying Case Battery Average Life	120 Hours
Carrying Case Battery Capacity	600 Milliamp Hours
Carrying Case Battery Charging Time	2.5 Hours
Control Type	Button Control
Ear Placement	In Ear / Over Ear (with earhooks)
Audio Driver Type	Dynamic Driver
Frequency Range	20 Hz - 20,000 Hz
Material	Plastic
Item Weight	4 ounces
Manufacturer	Wusdayer

WARRANTY AND SUPPORT

For warranty information, technical support, or any inquiries regarding your Wusdayer Wireless Earbuds BX30, please refer to the contact information provided on the product packaging or visit the official Wusdayer website. Keep your purchase receipt for warranty claims.

© 2024 Wusdayer. All rights reserved.