

[Manuals.plus](#) /

> [Infinix](#) /

> Infinix Hot 40i X6528 128+4 GB RAM Smart Phone, Gold User Manual

## Infinix 4894947012747

# Infinix Hot 40i X6528 User Manual

Model: Hot 40i X6528 | Brand: Infinix

## PRODUCT OVERVIEW

The Infinix Hot 40i X6528 is a sophisticated and high-performance smartphone, meticulously crafted for seamless operation and elegant aesthetics. It features 128 GB of internal storage and 4 GB of RAM, providing ample space for applications, media, and smooth multitasking. The device boasts a vibrant 6.6-inch HD+ display, delivering an immersive visual experience ideal for streaming and gaming. A robust 5000mAh battery ensures extended usage, minimizing the need for frequent recharging. Equipped with dual rear cameras, including a 13 MP primary lens, the Hot 40i captures high-quality photos and videos effortlessly. Its refined gold finish adds a touch of luxury to your daily technology.



Front and rear view of the Infinix Hot 40i X6528 smartphone in gold. The front displays a vibrant screen, while the rear showcases the camera module and the Infinix branding.

## SETUP GUIDE

### Unboxing

1. Carefully open the product packaging.
2. Remove the Infinix Hot 40i X6528 smartphone and all accessories, including the charger, USB cable, and

SIM ejector tool.

3. Inspect all components for any signs of damage.

## SIM Card and Storage Installation

1. Locate the SIM card tray on the side of the device.
2. Insert the SIM ejector tool into the small hole next to the tray and gently push until the tray pops out.
3. Place your Nano-SIM card(s) and/or microSD card (if applicable) into the designated slots on the tray, ensuring correct orientation.
4. Carefully reinsert the tray into the phone until it clicks into place.

## Initial Charging

1. Connect the USB cable to the charging adapter.
2. Plug the charging adapter into a power outlet.
3. Connect the USB cable to the charging port on your Infinix Hot 40i X6528.
4. Allow the device to charge until the battery indicator shows a full charge before first use.

## OPERATING INSTRUCTIONS

### Power On/Off

To power on, press and hold the Power button until the Infinix logo appears. To power off, press and hold the Power button, then select 'Power off' from the options on the screen.

### Basic Navigation

- **Home Screen:** Swipe left or right to navigate between home screens.
- **App Drawer:** Swipe up from the bottom of the screen to access all installed applications.
- **Notifications & Quick Settings:** Swipe down from the top of the screen to view notifications and access quick settings toggles.
- **Recent Apps:** Tap the square navigation button (or swipe up and hold from the bottom if using gestures) to view recently used applications.

### Making Calls

1. Open the 'Phone' application.
2. Enter the phone number using the dial pad or select a contact from your contacts list.
3. Tap the call button to initiate the call.

### Using the Camera

1. Open the 'Camera' application.
2. Select your desired mode (e.g., Photo, Video, Portrait).
3. Tap the shutter button to capture a photo or start/stop recording a video.

### Display Settings

- Adjust brightness: Go to Settings > Display > Brightness level.
- Change wallpaper: Go to Settings > Wallpaper & style.
- Set screen timeout: Go to Settings > Display > Screen timeout.

## MAINTENANCE AND CARE

### Cleaning Your Device

- Use a soft, lint-free cloth to wipe the screen and body of the phone.
- Avoid using harsh chemicals, abrasive cleaners, or aerosol sprays.
- Do not expose the device to excessive moisture.

### Battery Care

- Avoid extreme temperatures, both hot and cold, as they can degrade battery performance.
- Use only the original charger and cable provided with the device.
- Do not leave the phone charging for extended periods after it reaches 100%.

### Software Updates

Regularly check for and install software updates to ensure optimal performance, security, and access to new features. Go to Settings > System > System update.

## TROUBLESHOOTING COMMON ISSUES

Problem	Solution
Device not powering on	Ensure the battery is charged. Press and hold the Power button for at least 10-15 seconds to force a restart.
Poor battery life	Reduce screen brightness, close unused apps, disable unnecessary background processes, and limit location services.
Connectivity issues (Wi-Fi/Bluetooth)	Toggle Wi-Fi/Bluetooth off and on. Restart the device. Forget and reconnect to the network/device.
Apps crashing or freezing	Clear the app's cache and data (Settings > Apps > [App Name] > Storage). Update the app. If the issue persists, uninstall and reinstall the app.
Slow performance	Clear unnecessary files and cache. Uninstall unused apps. Restart the device regularly.

## TECHNICAL SPECIFICATIONS

Feature	Specification
Operating System	Android 13.0
RAM	4 GB
Internal Storage	128 GB
Screen Size	6.56 Inches
Resolution	1280 x 720
Battery Capacity	5000 mAh
Connectivity	Bluetooth, Wi-Fi, USB
Color	Gold
Item Weight	360 g
Product Dimensions	15.5 x 10.6 x 6.2 cm

## WARRANTY INFORMATION

This Infinix Hot 40i X6528 smartphone comes with a standard manufacturer's warranty, covering defects in materials and workmanship under normal use. The warranty period typically begins from the date of purchase. Please retain your proof of purchase for warranty claims. For specific terms, conditions, and duration of your warranty, refer to the warranty card included in your product packaging or visit the official Infinix support website.

## CUSTOMER SUPPORT

For further assistance, technical support, or service inquiries regarding your Infinix Hot 40i X6528, please contact Infinix customer support. You can typically find contact details, including phone numbers and email addresses, on the official Infinix website or in the support section of your device's settings. Please have your product model number and serial number ready when contacting support.