#### Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- SofaBaton /
- > SofaBaton X1S Universal Remote Control User Manual

#### SofaBaton X1S

## SofaBaton X1S Universal Remote Control User Manual

Model: X1S

### INTRODUCTION

The SofaBaton X1S is an advanced universal remote control system designed to simplify your home entertainment experience. It combines a sleek remote with a powerful hub, allowing you to control up to 60 IR, Bluetooth, and WiFi devices from a single interface. With its comprehensive code library, customizable activities, and voice control integration, the X1S aims to provide seamless control over your devices.



The SofaBaton X1S universal remote and its accompanying hub, designed for centralized control of various home entertainment devices.



The X1S Hub provides stronger and more stable 360-degree control with an extended IR transmission range, ensuring reliable communication with your devices.



The SofaBaton X1S is an all-in-one smart remote control, compatible with over 6,000 brands and 500,000+ home entertainment devices, including TVs, projectors, AV receivers, DVDs, speakers, and game consoles, supporting IR, Bluetooth, and WiFi.

### **SETUP GUIDE**

## **Package Contents**

- SofaBaton X1S Universal Remote
- SofaBaton X1S Hub
- · 2 x IR Blasters
- USB-C Charging Cable
- · Power Adapter

### **Initial Setup**

1. Charge the Remote: Connect the SofaBaton X1S remote to a power source using the provided USB-C cable. A full

charge ensures optimal performance. The remote's battery can last for up to 45 days on a single charge.

- 2. Position the Hub: Place the SofaBaton X1S Hub in a central location within your entertainment area, ensuring it has a clear line of sight to your IR-controlled devices if possible. The hub offers 360-degree control. If devices are hidden in cabinets, use the included IR blasters by plugging them into the hub and positioning them near the devices.
- 3. **Download the App:** Search for "SofaBaton" in your smartphone's app store (available on iOS and Android) and install the application.
- 4. **Pair the Remote and Hub:** Follow the on-screen instructions in the SofaBaton app to pair your remote and hub. This process typically involves creating an account and detecting the devices.
- 5. **Add Devices:** Use the app to add your home entertainment devices (TV, sound system, cable box, etc.). The app's comprehensive database supports over 6,000 brands and 500,000 device models. For IR devices, enter the specific brand and model. For Bluetooth devices, select "Via Bluetooth" and pair with the original remote. For WiFi devices, currently Roku, Sonos, and Philips Hue are supported.
- 6. **Configure Activities:** Create custom "Activities" within the app. An activity allows you to execute multiple commands with a single press, such as turning on your TV, soundbar, and cable box, and switching to the correct inputs for "Watch TV."



The SofaBaton app provides customizable settings and a user-friendly interface for managing your remote and devices.



The X1S hub ensures a stable connection and includes two IR blasters to control devices hidden behind cabinets or walls, preventing signal blind spots.

## **Setup Videos**

#### Your browser does not support the video tag.

This video demonstrates how to configure power settings for your devices using the SofaBaton X1S Universal Remote Control.

#### Your browser does not support the video tag.

This video provides instructions on source configuration for the SofaBaton X1S Universal Remote Control.

## **OPERATION**

#### **Custom One-Click Activities**

The X1S allows you to create custom activities that perform a sequence of commands with a single button press. For example, an "Watch TV" activity can automatically turn on your TV, cable box, and audio receiver, then switch to the correct HDMI input and channel.

- To activate an activity, simply press the scroll wheel button on the remote and select your desired activity from the LCD screen.
- Activities can be customized to include delays, specific startup orders, and even macro commands for quick access to favorite channels or menu options.



Effortlessly switch to your desired scene by pressing the scroll wheel button, eliminating the need to manually operate each device.




The remote supports custom one-click activities for various entertainment scenarios, such as watching TV, enjoying music, playing games, or watching movies.

#### **Remote Features**

- **Backlit Buttons:** The X1S remote features backlit tactile buttons for excellent visibility and convenience in low-light environments.
- Raise to Wake: The LCD screen automatically lights up when you pick up the remote, ensuring effortless visibility and control
- **Comfortable Grip:** Designed with comfortable materials and a reasonable button layout for easy, one-handed operation.



The "Raise to Wake" feature automatically illuminates the remote's screen when picked up.

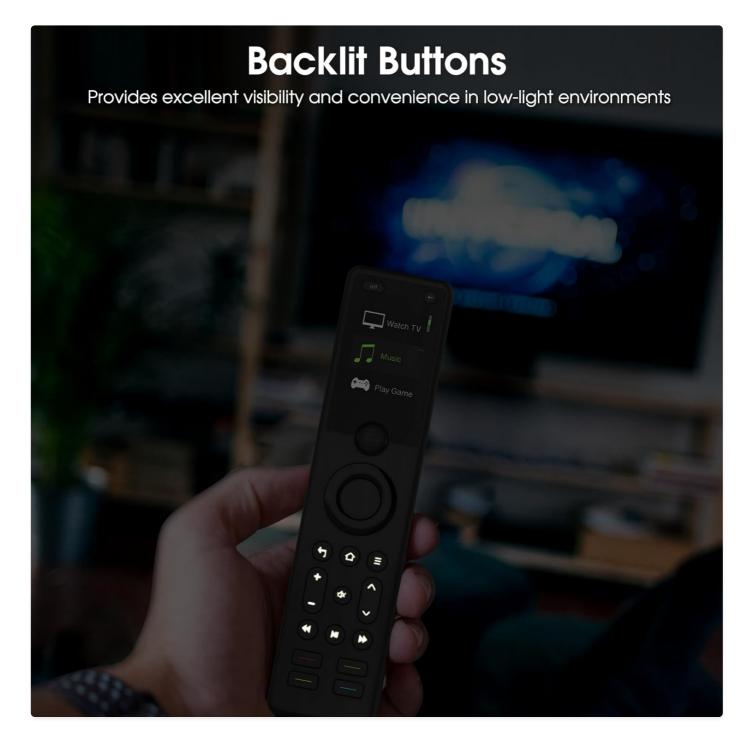

The backlit buttons provide excellent visibility and convenience, especially in low-light environments.

## **Voice Control Integration**

The SofaBaton X1S supports hands-free voice control through integration with Amazon Alexa and Google Assistant. You can manage your home entertainment with simple voice commands.

- Link your SofaBaton account with your Alexa or Google Assistant app.
- Once linked, you can use commands like "Alexa, Watch TV" or "Hey Google, Listen to Music" to trigger your custom activities.



Enjoy hands-free control by integrating your SofaBaton X1S with Google Assistant or Amazon Alexa.



The SofaBaton X1S supports hands-free control, allowing you to use voice commands like "Alexa, watch TV" to manage your entertainment system.

## **MAINTENANCE**

### **Battery Information**

The SofaBaton X1S remote is equipped with a long-lasting Lithium Polymer battery. It can last up to 45 days on a single charge, reducing the need for frequent recharging.

- Charge the remote using the provided USB-C cable.
- · Avoid exposing the remote or hub to extreme temperatures or direct sunlight for prolonged periods.

### Cleaning

To clean your SofaBaton X1S remote and hub, use a soft, dry, lint-free cloth. Do not use abrasive cleaners, solvents, or aerosol sprays, as these may damage the surfaces or internal components.


## **TROUBLESHOOTING**

If you encounter issues with your SofaBaton X1S, refer to the following common problems and solutions:

| Problem |
|---------|
|---------|

| Problem   | Solution  |
|---|---|
| Remote not responding / Devices not turning on. | <ul> <li>Ensure the remote is charged.</li> <li>Check if the hub is powered on and connected.</li> <li>Verify that the IR blasters (if used) are correctly positioned and not obstructed.</li> <li>In the app, re-test the device commands or activity sequence. Adjust delays if necessary.</li> <li>Ensure the correct input is selected for the activity.</li> </ul> |

 Use the "Find my remote" feature in the SofaBaton app. This will activate a loud beeping sound from the remote for 30 seconds to help you locate it.

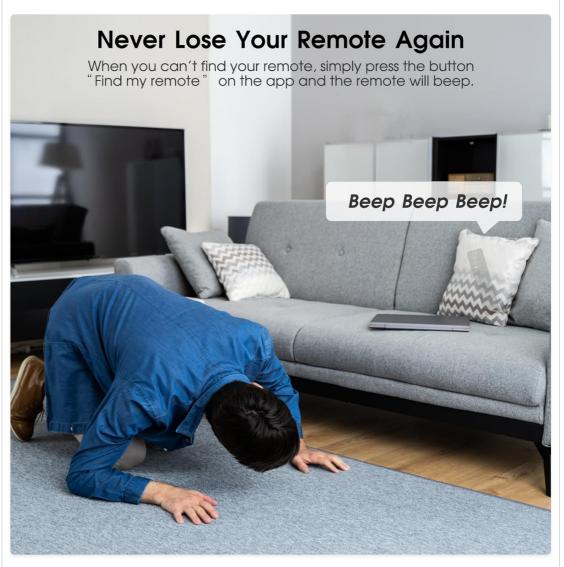

Cannot find the remote.

Never lose your remote again; simply press "Find my remote" in the app, and the remote will beep.

| Problem  | Solution   |
|--|--|
|  |  |
| Device not responding to commands after setup. | <ul> <li>Some official command lists may not be fully accurate. Check for user-uploaded command lists within the SofaBaton app for your specific device model.</li> <li>Try the "Learn" function in the app to teach the X1S commands directly from your original remote.</li> </ul>                 |
| Voice control not working.                     | <ul> <li>Ensure your SofaBaton account is correctly linked to your Alexa or Google Assistant app.</li> <li>Verify that your smart speaker (Alexa/Google Home) is online and functioning correctly.</li> <li>Check the voice commands configured for your activities in the SofaBaton app.</li> </ul> |

# **S**PECIFICATIONS

| Feature                         | Detail   |
|---------------------------------|--|
| Brand                           | SofaBaton  |
| Model Number                    | X1S  |
| Package Dimensions              | 8.94 x 5.51 x 2.72 inches  |
| Item Weight                     | 1.37 pounds  |
| Batteries                       | 1 Lithium Polymer battery required (included)                            |
| Color                           | Black  |
| Max Number of Supported Devices | 60   |
| Compatible Devices              | Stereo System, Set Top Box, Television, DVD/Blu-ray Player, Home Theater |
| Special Features                | Universal, Lightweight, Glow In The Dark Button, Backlit, Rechargeable   |
| Manufacturer                    | SofaBaton  |

| Feature           | Detail |
|-------------------|--------|
| Country of Origin | China  |

# WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official SofaBaton website or contact their customer service directly. Details regarding product registration, troubleshooting guides, and frequently asked questions can typically be found on the manufacturer's support pages.

The SofaBaton app also provides resources and updates to enhance your experience.

