



[Manuals.plus](#) /

> [KMD](#) /

> KMD Clutch Handheld Grip for Nintendo Switch - GC Purple User Manual

KMD B0CTGX86J3

KMD Clutch Handheld Grip for Nintendo Switch - GC Purple User Manual

Model: B0CTGX86J3

1. INTRODUCTION

This user manual provides comprehensive instructions for the KMD Clutch Handheld Grip, designed specifically for the Nintendo Switch. Please read this manual thoroughly before use to ensure proper installation, operation, and maintenance of your device. This grip enhances comfort and control during extended gaming sessions.

2. SAFETY INFORMATION

To prevent damage to the product or injury to yourself and others, please observe the following safety precautions:

- Do not expose the grip to extreme temperatures, direct sunlight, or high humidity.
- Keep out of reach of small children. This product is not a toy.
- Do not attempt to disassemble or modify the grip. This will void the warranty and may cause damage.
- Avoid dropping the grip or subjecting it to strong impacts.
- Clean only with a soft, dry cloth. Do not use liquid cleaners or solvents.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x KMD Clutch Handheld Grip for Nintendo Switch - GC Purple
- 1 x User Manual (this document)

4. SETUP AND INSTALLATION

Follow these steps to properly install your Nintendo Switch console into the KMD Clutch Handheld Grip:

1. Ensure your Nintendo Switch console is powered off or in sleep mode.
2. Carefully slide the left Joy-Con controller off the console.
3. Carefully slide the right Joy-Con controller off the console.
4. Align the Nintendo Switch console with the central slot of the KMD Clutch Handheld Grip.
5. Gently slide the console into the grip until it is securely seated. Ensure the USB-C port on the console aligns with the opening on the bottom of the grip.
6. The grip is designed to hold the console firmly without the Joy-Cons attached. The grip itself provides integrated buttons and joysticks for gameplay.
7. To remove the console, gently push it out from the bottom opening of the grip.



Figure 4.1: Front View of KMD Clutch Handheld Grip with Nintendo Switch. This image displays the KMD Clutch Handheld Grip in its GC Purple color, with a Nintendo Switch console securely inserted. The front shows the integrated left and right control sections, including joysticks, D-pad, action buttons (A, B, X, Y), and shoulder buttons. The translucent purple casing allows a view of the internal components.



Figure 4.2: Back View of KMD Clutch Handheld Grip with Nintendo Switch. This image shows the rear of the KMD Clutch Handheld Grip, highlighting its ergonomic contours designed for comfortable holding. The back features cutouts for the Nintendo Switch's kickstand and ventilation, ensuring proper airflow during use. The translucent purple material is visible from this angle as well.

5. OPERATING INSTRUCTIONS

The KMD Clutch Handheld Grip integrates directly with your Nintendo Switch console, providing an enhanced control experience. Once the console is securely installed, the grip's controls will function as the primary input method.

5.1 Button Layout and Functionality

Control	Description
Left Analog Stick	Movement and camera control in games. Press down for L3 button functionality.
D-Pad	Directional input, menu navigation.
Minus (-) Button	Access in-game menus or specific functions.

Control	Description
Screenshot Button	Capture screenshots of gameplay.
L/ZL Buttons	Left shoulder and trigger buttons for in-game actions.
Right Analog Stick	Camera control or specific in-game actions. Press down for R3 button functionality.
A/B/X/Y Buttons	Standard action buttons for gameplay.
Plus (+) Button	Access in-game menus or specific functions.
Home Button	Return to the Nintendo Switch HOME Menu.
R/ZR Buttons	Right shoulder and trigger buttons for in-game actions.

The grip draws power directly from the Nintendo Switch console and does not require separate charging or batteries.

6. MAINTENANCE AND CARE

Proper care will extend the life of your KMD Clutch Handheld Grip:

- **Cleaning:** Use a soft, dry, lint-free cloth to wipe down the surface of the grip. Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the material.
- **Storage:** When not in use, store the grip in a clean, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Avoid dropping the grip or applying excessive force to the buttons or joysticks.

7. TROUBLESHOOTING

If you encounter issues with your KMD Clutch Handheld Grip, please refer to the following common solutions:

Problem	Possible Cause / Solution
Grip controls are unresponsive.	<ul style="list-style-type: none"> ◦ Ensure the Nintendo Switch console is fully and securely seated within the grip. ◦ Verify that the Nintendo Switch console itself is powered on and functioning correctly. ◦ Try removing and re-inserting the console into the grip.
Console does not fit properly.	<ul style="list-style-type: none"> ◦ Ensure you are using a standard Nintendo Switch console (not Switch Lite or OLED model, if this grip is not compatible). This grip is designed for the original Nintendo Switch. ◦ Check for any obstructions in the grip's slot or on the console.
Buttons feel sticky or unresponsive.	<ul style="list-style-type: none"> ◦ Clean the area around the buttons with a soft, dry cloth to remove any dust or debris. ◦ Avoid spilling liquids on the grip.

If the problem persists after attempting these solutions, please contact KMD customer support for further assistance.

8. PRODUCT SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Product Name	KMD Clutch Handheld Grip
Model Number	B0CTGX86J3
Color	GC Purple
Compatibility	Nintendo Switch (Original Model)
Dimensions (Approx.)	12 x 5 x 2 inches (Package Dimensions)
Weight (Approx.)	14.1 ounces
Manufacturer	KMD

9. WARRANTY AND SUPPORT

KMD products are manufactured to high quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official KMD website. Keep your proof of purchase for warranty claims.

Customer Support:

For technical support, troubleshooting assistance, or warranty inquiries, please contact KMD customer service through their official channels. Contact information can typically be found on the product packaging or the KMD official website.

Note: Warranty terms and conditions may vary by region.

