

## KMD Clutch Handheld Grip (8-Bit Grey)

# KMD Clutch Handheld Grip for Nintendo Switch User Manual

Model: Clutch Handheld Grip (8-Bit Grey)

### PRODUCT OVERVIEW

The KMD Clutch Handheld Grip is designed to enhance your Nintendo Switch gaming experience by providing a comfortable and secure grip, along with extended battery life and additional functionalities. This wireless gamedeck integrates seamlessly with your Switch console, offering improved control and convenience for on-the-go gaming.



Image: Front view of the KMD Clutch Handheld Grip with a Nintendo Switch console docked. The grip is grey, and the console screen is black. This image illustrates the product's primary function as a handheld accessory for the Nintendo Switch.

Key features include wireless connectivity, a long-lasting 1000mAh Lithium Ion battery for up to 15 hours of gameplay, adjustable dual-vibration, motion sensing controls, two additional back buttons for mapped combos, and turbo functionality for rapid-fire inputs. A USB to USB-C split cable is included for simultaneous charging.

## SETUP AND INSTALLATION

1. **Unboxing:** Carefully remove the KMD Clutch Handheld Grip and all accessories from the packaging. Verify that all components are present: the Clutch Wireless Gamedeck and the USB to USB-C split cable.
2. **Charging the Device:** Before first use, it is recommended to fully charge the Clutch Wireless Gamedeck. Connect the USB-C end of the provided cable to the charging port on the gamedeck and the USB-A end to a compatible USB power source (e.g., Nintendo Switch dock, computer USB port, or USB wall adapter). The charging indicator light will provide status.
3. **Docking the Nintendo Switch:** Gently slide your Nintendo Switch console into the central slot of

the Clutch Wireless Gamedeck. Ensure the console is securely seated and the USB-C connector on the gamedeck aligns with the console's USB-C port. The gamedeck is designed to connect wirelessly once the console is docked.

4. **Initial Connection:** Once the Switch is docked, the Clutch Wireless Gamedeck should automatically connect wirelessly. If it does not connect, navigate to the "Controllers" menu on your Nintendo Switch and select "Change Grip/Order" to initiate pairing.

## OPERATING INSTRUCTIONS

---

### Basic Controls

The Clutch Wireless Gamedeck replicates the standard Nintendo Switch controls while adding enhanced ergonomics and additional features.

- **Analog Sticks:** For movement and camera control.
- **D-Pad:** For directional input, especially useful in 2D games.
- **Action Buttons (A, B, X, Y):** Standard in-game actions.
- **Shoulder Buttons (L, R, ZL, ZR):** For various in-game functions.
- **Plus (+) and Minus (-) Buttons:** System menu navigation.
- **Home Button:** Returns to the Nintendo Switch HOME Menu.
- **Capture Button:** Takes screenshots or video clips.

### Advanced Features

- **Turbo Functionality:** To activate turbo for a specific button, press and hold the desired action button (e.g., A) and then press the Turbo button (if present, or a designated function button). Repeat the process to deactivate. Refer to the specific button layout for the Turbo button location.
- **Adjustable Dual-Vibration:** The intensity of the vibration can be adjusted. Consult the gamedeck's specific button combinations or a dedicated button for vibration adjustment.
- **Motion Sensing Controls:** The gamedeck supports motion controls for compatible games. Ensure your Nintendo Switch system settings allow for motion control input from connected controllers.
- **Back Buttons:** The two additional back buttons can be mapped to replicate other button combos. Refer to the included quick start guide or product specific instructions for mapping procedures.

## MAINTENANCE AND CARE

---

- **Cleaning:** Use a soft, dry cloth to wipe down the surface of the gamedeck. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the finish.
- **Storage:** When not in use, store the gamedeck in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, ensure the battery is partially charged (around 50%) to prolong its lifespan.

- **Battery Care:** The integrated Lithium Ion battery is designed for long life. Avoid fully discharging the battery frequently. Recharge the device when the battery indicator is low. Do not attempt to replace the battery yourself.
- **Handling:** Handle the gamedeck with care. Avoid dropping it or subjecting it to strong impacts, which can damage internal components.



Image: Back view of the KMD Clutch Handheld Grip. This perspective highlights the ergonomic contours designed for comfortable holding and reveals the placement of the two additional programmable back buttons, which are a key feature for advanced gameplay.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Gamedeck does not connect wirelessly.	Low battery; incorrect pairing; console not recognizing device.	Ensure gamedeck is charged. Re-dock the Switch console. Go to Switch HOME Menu > Controllers > Change Grip/Order and attempt to pair manually. Restart both the Switch and the gamedeck.
Buttons or analog sticks are unresponsive.	Software glitch; physical obstruction; hardware malfunction.	Restart the Nintendo Switch console. Ensure no debris is lodged around buttons. If problem persists, contact customer support.
Battery life is shorter than expected.	Frequent full discharge; high vibration settings; aging battery.	Reduce vibration intensity. Avoid fully draining the battery. Ensure proper charging practices.

## SPECIFICATIONS

- **Model Name:** Clutch Handheld Grip (8-Bit Grey)
- **Brand:** KMD
- **Compatibility:** Nintendo Switch
- **Connectivity:** Wireless
- **Battery Type:** 1000mAh Lithium Ion
- **Estimated Battery Life:** Up to 15 hours
- **Dimensions:** Approximately 12.41 x 5 x 2.21 inches (31.52 x 12.7 x 5.61 cm)
- **Weight:** Approximately 14.1 ounces (400 grams)
- **Features:** Adjustable dual-vibration, motion sensing controls, two additional back buttons, turbo functionality.
- **Included:** USB to USB-C split cable
- **Date First Available:** January 29, 2024

## WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official KMD website or contact KMD customer service directly. Keep your proof of purchase for warranty claims.

**KMD Official Website:** [Visit the KMD Store on Amazon](#)

For further assistance, please contact KMD customer support through their official channels.

© 2024 KMD. All rights reserved.

This manual is for informational purposes only. KMD reserves the right to make changes to product specifications without prior notice.