

[Manuals.plus](#) /

› [NexaEase](#) /

› NexaEase G4 3-in-1 Travel Steamer Iron User Manual

## NexaEase G4

# NexaEase G4 3-in-1 Travel Steamer Iron User Manual

Model: G4 | Brand: NexaEase

## INTRODUCTION

Thank you for choosing the NexaEase G4 3-in-1 Travel Steamer Iron. This versatile device is designed to keep your clothes wrinkle-free with ease, whether you are at home or traveling. It functions as a steamer, a flat iron, and a clip iron, making it suitable for a wide range of fabrics.

## IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before use.
- Use only with 120V power outlets. Do not use with other voltage systems.
- Keep the appliance away from water and other liquids.
- Do not touch hot surfaces. Use handles or knobs.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- Do not direct steam at people, animals, or electrical appliances.
- Use distilled water to prevent mineral buildup and extend product life.
- Ensure the water tank cap is securely closed before operating.
- Keep out of reach of children.

## PACKAGE CONTENTS

Your NexaEase G4 3-in-1 Travel Steamer Iron package includes:

- NexaEase G4 3-in-1 Travel Steamer Iron
- Flannel Storage Bag
- Measuring Cup (50ml capacity)
- User Manual (this document)

## PRODUCT OVERVIEW

Familiarize yourself with the components of your NexaEase G4 Travel Steamer Iron:



**Image:** Diagram showing the NexaEase G4 Travel Steamer Iron with its various parts labeled, including the outer ironing panel, inner ironing panel, indicator lamp, clasp, switch button, silicone water tank plug, power cable, and 50ml water tank.

1. **Outer Ironing Panel:** Used for flat ironing and general steaming.

2. **Inner Ironing Panel:** Provides additional heat for pressing.
  3. **Indicator Lamp:** Illuminates during heating and steaming.
  4. **Clasp:** Secures the ironing panels in the closed position.
  5. **Switch Button:** Controls power on/off and steam activation.
  6. **Silicone Water Tank Plug:** Seals the water tank opening.
  7. **Power Cable:** Connects the device to a 120V power outlet.
  8. **50ml Water Tank:** Reservoir for water used in steaming.
- 

## SETUP

Before using your NexaEase G4 3-in-1 Travel Steamer Iron for the first time, please follow these steps:

1. **Unlock the Iron:** Locate the clasp on the side of the steamer. Slide it to the "open" position to release the ironing panels.
2. **Fill the Water Tank:**
  - Open the silicone water tank plug.
  - Using the provided 50ml measuring cup, carefully fill the water tank with distilled water. Avoid overfilling.
  - Securely close the silicone water tank plug.
3. **Connect to Power:** Plug the power cable into a standard 120V electrical outlet. The indicator lamp will illuminate, signaling that the device is heating up.
4. **Preheating:** The steamer will preheat in approximately 15 seconds. The indicator lamp will turn off or change color (depending on the model) once it's ready for use.

Your browser does not support the video tag.

**Video:** An official product video demonstrating the setup and basic operation of the NexaEase 3-in-1 Travel Steamer Iron, including filling the water tank and initial heating.

---

## OPERATING INSTRUCTIONS

The NexaEase G4 offers three ironing methods: steaming, flat ironing, and clip ironing.

### 1. Steaming (Hanging Ironing)

This method is ideal for quickly removing wrinkles from hanging garments.

1. Hang your garment on a hanger.
2. Ensure the water tank is filled and the steamer is preheated.
3. Hold the steamer upright, a few inches away from the fabric.
4. Press the switch button to release steam. Move the steamer slowly over the wrinkled areas, from top to bottom.
5. Gently pull the fabric taut with your free hand to help smooth out wrinkles.

## Suitable for a Wide Range of Fabrics



Cotton



Polyester



Wool



Linen



Silk



Nylon

Image: A woman using the NexaEase G4 steamer on a hanging blazer, illustrating its use on cotton, polyester, wool, linen, silk, and nylon fabrics.



Hanging Ironing



Flat Ironing

Image: A user performing hanging ironing with the NexaEase G4 steamer on a brown coat, demonstrating the upright steaming method.

## 2. Flat Ironing

For a more pressed look, use the flat ironing function on a heat-resistant surface.

1. Place the garment flat on an ironing board or a heat-resistant surface.
2. Ensure the water tank is filled and the steamer is preheated.
3. Close the ironing panels using the clasp.
4. Gently press the panels onto the fabric and glide the iron over the wrinkles. You can press the switch button for steam bursts as needed.



**Image:** A user performing flat ironing with the NexaEase G4 steamer on a brown coat, showing the device closed and pressed against the fabric.

## 3. Clip Ironing

The clip ironing feature is perfect for creating crisp creases and smoothing difficult areas like collars, cuffs, and pant legs.

1. Ensure the water tank is filled and the steamer is preheated.
2. Open the ironing panels.
3. Place the fabric section (e.g., collar, cuff, pant seam) between the open panels.
4. Close the panels gently to clip the fabric. Press the switch button for steam and glide the steamer along the desired area.

# INNOVATIVE CLIP IRONING

Smooth Out Wrinkles & Crimp Folds



**Image:** The NexaEase G4 Travel Steamer Iron being used for clip ironing on various garment parts, including collars, cuffs, pant legs, and seams, highlighting its precision.

## General Usage Tips:

- For best results, use slow, steady strokes.
- Always test on an inconspicuous area of the fabric first.
- The 360° leak-proof design allows for use at any angle without water leakage.
- The 900W power delivers 20g/min of dry steam, effectively removing wrinkles without wetting clothes.

## MAINTENANCE

### Cleaning

1. Always unplug the steamer from the power outlet and allow it to cool completely before cleaning.
2. Empty any remaining water from the tank.
3. Wipe the exterior of the steamer with a soft, damp cloth. Do not use abrasive cleaners or solvents.

4. For mineral buildup in the steam vents, use a cotton swab dipped in a vinegar solution to gently clean the openings. Rinse thoroughly with distilled water afterwards.

## Storage

1. Ensure the steamer is completely cool and dry before storing.
2. Empty the water tank completely.
3. Close the ironing panels and secure them with the clasp.
4. Store the steamer in its flannel storage bag to protect it from dust and scratches.
5. Keep the steamer in a cool, dry place, away from direct sunlight and moisture.



**Image:** The NexaEase G4 Travel Steamer Iron shown packed in a suitcase and a handbag, illustrating its compact design for easy travel and storage.

## TROUBLESHOOTING

If you encounter any issues with your NexaEase G4 3-in-1 Travel Steamer Iron, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No steam or low steam output.	Water tank is empty or low. Steamer not fully preheated. Mineral buildup in steam vents.	Refill the water tank. Allow 15 seconds for preheating until indicator light changes. Clean steam vents as per maintenance instructions.
Water leaking or dripping.	Water tank plug not securely closed. Overfilled water tank. Steamer not fully preheated before use.	Ensure the silicone plug is firmly in place. Do not overfill the tank; use the measuring cup. Wait for the indicator light to signal readiness before steaming.
Steamer not turning on.	Not plugged in correctly. Power outlet issue.	Check if the power cable is securely plugged into a 120V outlet. Test the outlet with another appliance.
Wrinkles not removing effectively.	Moving too quickly. Fabric type.	Use slower, more deliberate strokes. Some fabrics may require multiple passes or the flat ironing method.

---

## SPECIFICATIONS

- **Model:** G4
- **Brand:** NexaEase
- **Power:** 900 Watts
- **Voltage:** 120 Volts
- **Heat Time:** Approximately 15 seconds
- **Steam Output:** 20g/min
- **Water Tank Capacity:** 50 Milliliters
- **Product Dimensions:** 10.6"L x 2.2"W x 10.6"H
- **Item Weight:** 14.4 ounces (approx. 0.9 lbs)
- **Cord Length:** 6 feet
- **Functions:** 3-in-1 (Steamer, Flat Iron, Clip Iron)
- **Fabric Compatibility:** Suitable for silk, linen, cotton, nylon, polyester, wool, and more.

---

## WARRANTY AND SUPPORT

For warranty information, product support, or any inquiries not covered in this manual, please contact NexaEase customer service through the retailer where the product was purchased or visit the official

NexaEase website. Please retain your proof of purchase for any warranty claims.