

[Manuals.plus](#) /

> [IBOWZ](#) /

> IBOWZ Lazy Susan Turntable Instruction Manual

IBOWZ Lazy Susan Turntable

IBOWZ Lazy Susan Turntable Instruction Manual

Model: Lazy Susan Turntable

INTRODUCTION

Thank you for choosing the IBOWZ Lazy Susan Turntable. This product is designed to enhance your dining experience and provide convenient access to dishes and decorative items on your table. This manual provides essential information for the safe and effective use of your turntable. Please read it thoroughly before use and retain it for future reference.

SAFETY INFORMATION

- Ensure the turntable is placed on a stable, flat surface to prevent tipping.
- Do not overload the turntable beyond its weight capacity.
- Keep fingers clear of the rotating mechanism during operation.
- Avoid sudden impacts or dropping the turntable, as this may damage the rotating mechanism or the surface.
- The anti-collision edge design helps prevent items from falling off, but exercise caution when rotating.
- This product is intended for household and light commercial use.

PACKAGE CONTENTS

Your IBOWZ Lazy Susan Turntable package should contain the following items:

- 1 x IBOWZ Lazy Susan Turntable (main disc with integrated rotating base)
- Instruction Manual (this document)

Note: The turntable is typically shipped fully assembled.



Figure 1: Turntable securely packaged for transport.

SETUP

1. **Unpacking:** Carefully remove the turntable from its packaging. Inspect for any signs of damage during transit.
2. **Placement:** Choose a stable, flat dining table or surface where you intend to use the Lazy Susan.
3. **Positioning:** Place the Lazy Susan turntable centrally on your dining table. The integrated anti-skid nails on the base are designed to prevent movement.
4. **Sizing Recommendation:** For optimal use, it is recommended that the Lazy Susan turntable diameter be 40-50cm (15-20 inches) smaller than your dining table diameter. For example, a 90cm/36-inch turntable is suitable for a dining table approximately 130-140cm (51-55 inches) in diameter.

It is recommended that the size of the lazy susan turntable is 40-50cm (15-20 inch) smaller than the dining table
60cm/24inch, 70cm/27inch, 80cm/30inch



Due to the special edging process of glass products, the size of the turntable will have an error of about 1-3cm.

Figure 2: Recommended sizing for the Lazy Susan turntable in relation to your dining table.

Round Tabletop Rotating Serving Tray

Reduced the center of gravity of the turntable

Runs more smoothly and rotates smoothly

Suitable for your traditional or modern modern home decoration



Figure 3: View of the turntable's base, highlighting the smooth rotating mechanism.

OPERATING INSTRUCTIONS

The IBOWZ Lazy Susan Turntable is designed for simple and smooth operation.

1. **Loading:** Place dishes, condiments, or decorative items evenly on the surface of the turntable. Ensure items are within the anti-collision edge.
2. **Rotation:** Gently push the edge of the turntable in the desired direction. The 360-degree free-spinning design allows for smooth and silent rotation.
3. **Serving:** Guests can easily rotate the turntable to access any dish without needing to reach across the table.



Figure 4: Examples of the Lazy Susan turntable in use for serving and display.

Various size and color options / Multi-purpose



Figure 5: The versatile application of the turntable in various settings.

MAINTENANCE AND CLEANING

Proper care will ensure the longevity and smooth operation of your Lazy Susan turntable.

- **Cleaning the Surface:** The surface is smooth and easy to clean. Wipe with a damp cloth and mild detergent. Dry immediately with a clean, soft cloth.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the surface finish.
- **Mechanism Care:** The rotating mechanism is designed to be maintenance-free. Avoid disassembling the base. If the rotation becomes stiff, ensure no debris is lodged in the mechanism.
- **Storage:** Store the turntable in a dry place when not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Turntable does not rotate smoothly.	Debris in the rotating mechanism; uneven load; damaged mechanism.	Check for and remove any debris. Redistribute items evenly on the surface. If the issue persists, contact customer support.
Turntable slides on the table.	Table surface is too smooth or wet; anti-skid nails are worn or missing.	Ensure the table surface is dry and clean. If anti-skid nails are damaged, contact customer support for assistance.
Items fall off during rotation.	Overloaded; rotated too quickly; items placed too close to the edge.	Do not overload. Rotate gently and at a moderate speed. Ensure items are placed securely within the anti-collision edge.

SPECIFICATIONS

Feature	Detail
Brand	IBOWZ
Model	Lazy Susan Turntable
Shape	Round
Function	360° Rotating Serving Tray
Material Options	Wood, Marble (various finishes available)
Diameter Range	50-90cm (19-35 inches)
Special Features	Anti-collision edge, Encrypted anti-skid nails, Smooth and silent rotation



Figure 6: Available material and color options for the turntable.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the purchase documentation or contact your retailer. Keep your proof of purchase for any warranty claims.

Manufacturer: IBOWZ