

[Manuals.plus](#) /

› [PERFASCIN](#) /

› PERFASCIN RMT-TX450E Replacement Remote Control User Manual for Sony 4K Ultra HD OLED TV

## PERFASCIN RMT-TX450E

# PERFASCIN RMT-TX450E Replacement Remote Control User Manual

Model: RMT-TX450E

## 1. INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your PERFASCIN RMT-TX450E replacement remote control. This remote is designed to be compatible with various Sony 4K Ultra HD OLED TV models.

## 2. PRODUCT OVERVIEW

The PERFASCIN RMT-TX450E is a direct replacement infrared remote control for specific Sony 4K Ultra HD OLED TVs. It requires no programming or pairing; simply insert batteries to begin use.

**Compatible Sony TV Models include:**

- A80LSERIES
- FWD-50X80L
- FWD-55X80L
- FWD-75X80L
- FWD-75X95L
- KD-50X75WL
- KD-65X75WL
- FWD-77A80L





Figure 1: Front view of the RMT-TX450E remote control, displaying the button layout.

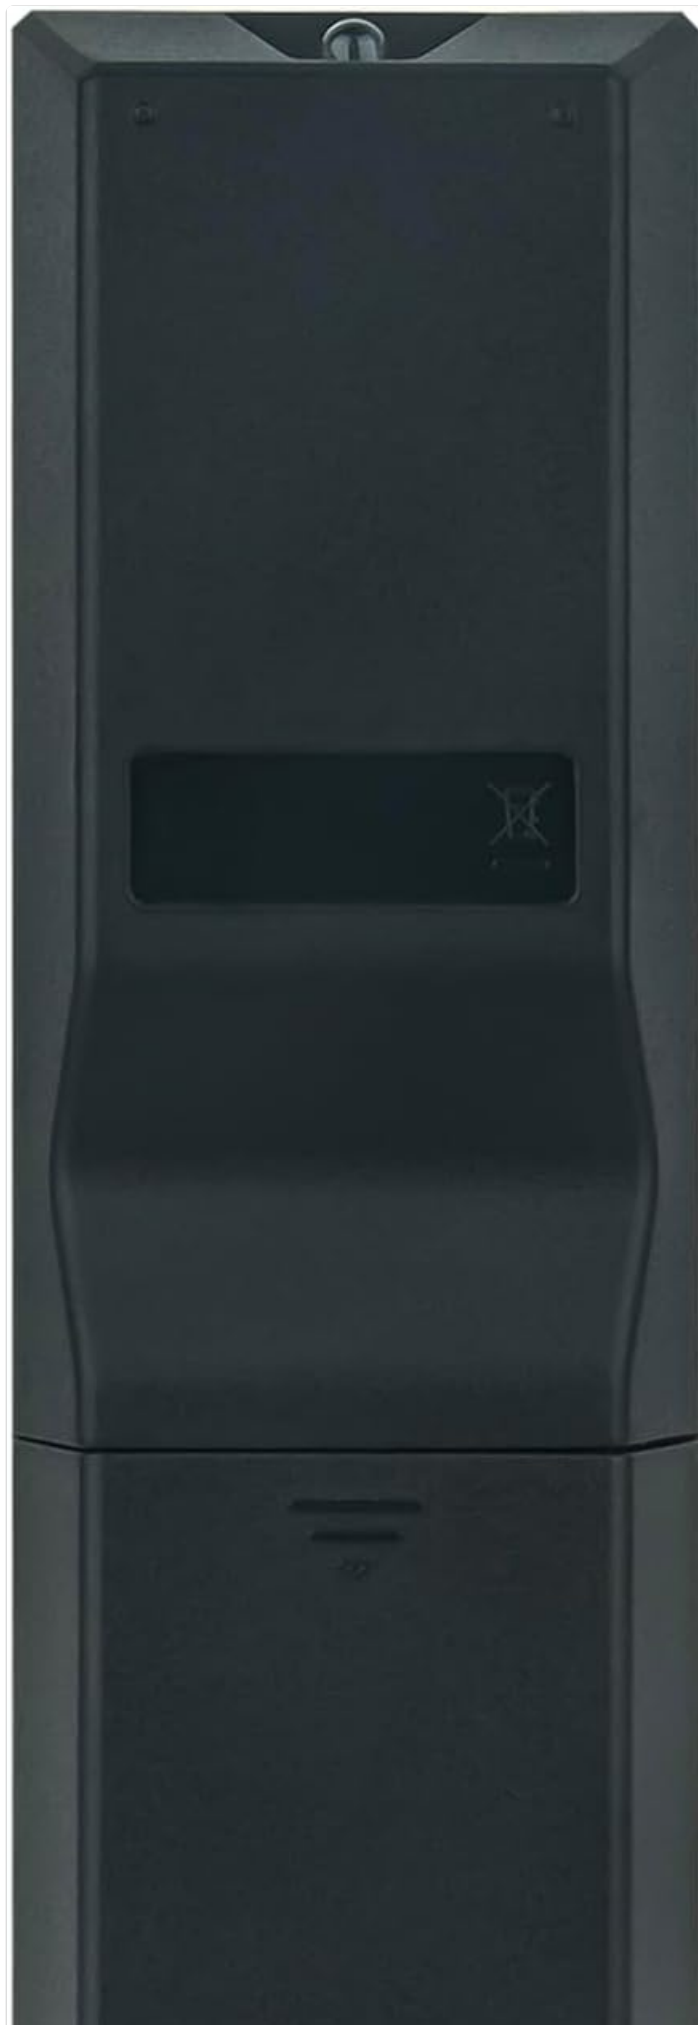




Figure 2: Back view of the RMT-TX450E remote control.

## 3. SETUP

---

### 3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or press the latch and lift to open.
3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery cover by sliding it back into place until it clicks securely.

No programming or pairing is required. The remote is ready for use once batteries are installed.

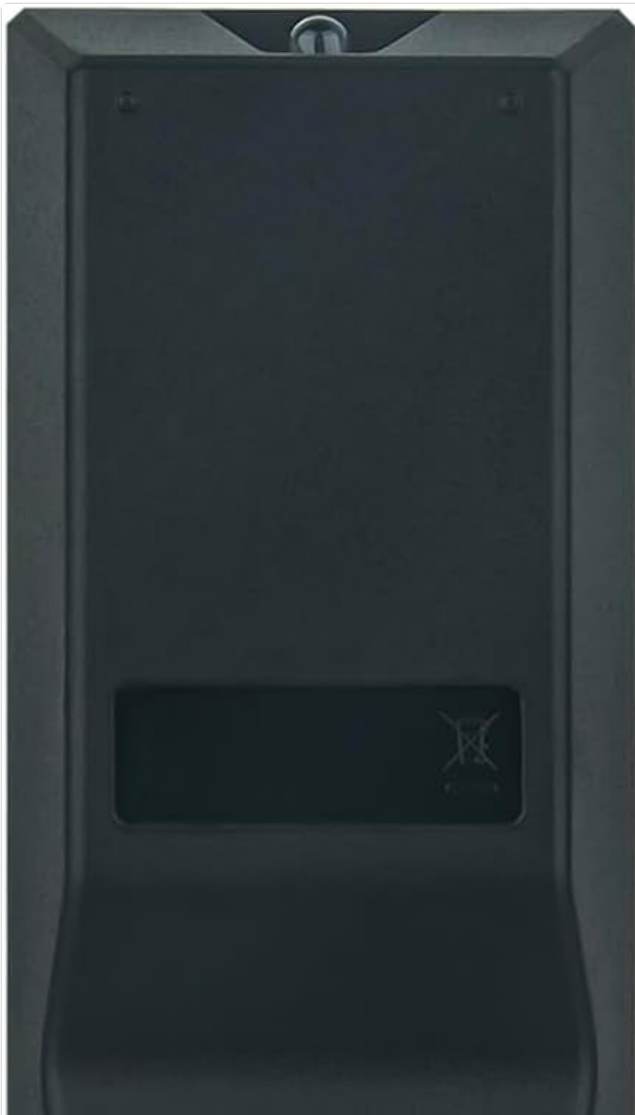




Figure 3: Battery compartment with cover removed, showing battery placement.

## 4. OPERATING INSTRUCTIONS

---

Point the remote control directly at your Sony TV. Ensure there are no obstructions between the remote and the TV's infrared receiver.

### 4.1 Basic Functions

- **Power Button ( ):** Turns the TV on or off.
- **Number Buttons (0-9):** Select channels directly.
- **Volume Up/Down (VOL +/-):** Adjusts the TV volume.
- **Channel Up/Down (CH +/-):** Changes TV channels.
- **Mute ( ):** Mutes or unmutes the TV sound.
- **Navigation Buttons (Up, Down, Left, Right, Enter):** Navigate through menus and select options.
- **MENU:** Accesses the TV's main menu.
- **HOME ( ):** Returns to the TV's home screen.
- **EXIT:** Exits the current menu or application.
- **AUDIO:** Selects audio tracks or modes.
- **HELP:** Accesses the TV's help function.

Refer to your Sony TV's user manual for specific functions related to advanced buttons or smart TV features.

## 5. MAINTENANCE

---

### 5.1 Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

### 5.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

### 5.3 Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the device.

## 6. TROUBLESHOOTING

---

### 6.1 Remote Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-) and are not depleted. Replace with new batteries if necessary.
- **Line of Sight:** Make sure there are no objects blocking the path between the remote control and the TV's infrared sensor.
- **Distance:** Ensure you are within the effective operating range of the remote control (typically within 20 feet/6 meters).
- **TV Sensor:** Verify that the TV's infrared sensor is not obstructed or dirty.

### 6.2 Specific Buttons Not Working

- This remote is a replacement and may not support all advanced functions or smart features of your original TV remote. Basic TV functions are fully supported.

## 7. SPECIFICATIONS

---

|                    |                                    |
|--------------------|------------------------------------|
| Model Number       | RMT-TX450E                         |
| Brand              | PERFASCIN                          |
| Compatible Devices | Sony 4K Ultra HD OLED Televisions  |
| Special Feature    | Ergonomic, No Programming Required |
| Color              | Black                              |
| Power Source       | 2 x AAA Batteries (not included)   |
| Product Dimensions | 6 x 5 x 0.55 inches                |
| Item Weight        | 1.4 ounces                         |

## 8. WARRANTY AND SUPPORT

This product is typically covered by a 30-day refund/replacement policy. For any questions or assistance, please feel free to contact the seller or manufacturer.

Manufacturer: PERFASCINYIKUN

© 2024 PERFASCIN. All rights reserved.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question