

Garwarm 19.6in Caged Ceiling Fan (ASIN: B0CTHKY992)

Garwarm 19.6in Caged Ceiling Fan with Light Instruction Manual

Brand: Garwarm | Model: 19.6in Caged Ceiling Fan (ASIN: B0CTHKY992)

1. INTRODUCTION

Thank you for purchasing the Garwarm 19.6in Caged Ceiling Fan with Light. This product combines modern and farmhouse aesthetics with advanced functionality, including 6-speed fan control, timing functions, and remote/app operation. This manual provides detailed instructions for safe installation, operation, and maintenance to ensure optimal performance and longevity of your ceiling fan.



Figure 1: Garwarm 19.6in Caged Ceiling Fan with Light.

2. SAFETY INSTRUCTIONS

Please read all safety instructions carefully before installation and use. Failure to follow these instructions may result in electric shock, fire, or serious personal injury.

- Ensure the power is turned off at the circuit breaker before installation or maintenance.
- All electrical connections must be in accordance with local codes, ordinances, and the National Electric Code (NEC).
- Consult a qualified electrician if you are unsure about the installation process.
- This product is designed for **Indoor use only**. Do not install in damp or wet locations.
- Mount the fan to a ceiling joist or support structure capable of supporting the fan's weight.
- Do not insert fingers or any objects into the fan blades while the fan is operating.

3. PACKAGE CONTENTS

Verify all components are present and undamaged before beginning installation:

- Light kit
- Remote Control
- Instructions Manual
- All necessary mounting hardware


*Note: 4 x E26 base bulbs are**not included** and must be purchased separately.*

4. SPECIFICATIONS

Feature	Detail
Brand	Garwarm
Color	Black
Material	Metal
Style	Modern/Simple/Industrial/Vintage
Product Dimensions	19.6"L x 19.6"W x 8.26"H
Room Type	Kids Room, Kitchen, Living Room, Bedroom, Home Office, Dining Room, Breakfast Area, Restaurant
Indoor/Outdoor Usage	Indoor
Power Source	AC
Installation Type	Flush Mount
Special Feature	Timer
Control Method	Remote, App Control
Number of Light Sources	4
Bulb Base	E26
Wattage	15 watts (Motor)
Item Weight	7.7 Pounds
Assembly Required	Yes

Table 1: Product Specifications.

PRODUCT SIZE

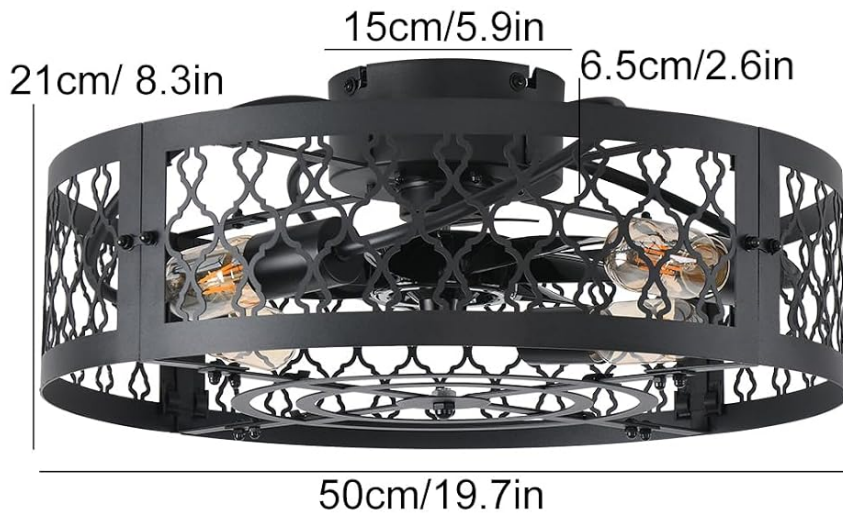

Remote Control

You can easy use remote control the lighting , wind speed adjustment, timing function .



Applicable types of light bulbs
(Bulbs not included)



Edison Light Bulb



Incandescent Light Bulb



Energy-Saving Light Bulbs



LED Light Bulb

TURN OFF



TURN ON

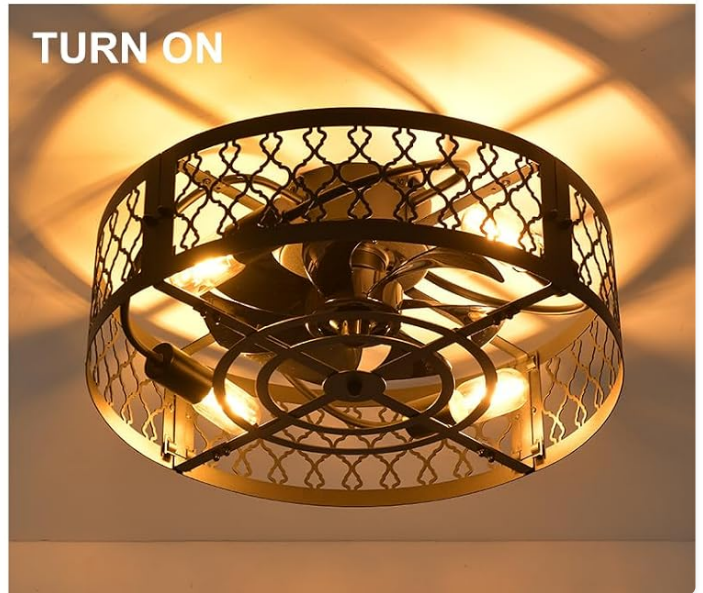


Figure 2: Product dimensions and remote control features, including applicable bulb types (Edison, Incandescent, Energy-Saving, LED).

5. SETUP AND INSTALLATION

The Garwarm Caged Ceiling Fan requires assembly and installation. Detailed steps are provided in the included instructions manual. For visual guidance, you can scan the QR code in the manual to watch an installation video.

5.1 Remote Control Holder Installation

The remote control comes with a wall-mountable holder for convenient storage.

1. Select a suitable location on a wall near your fan for easy access.
2. Use a drill to create pilot holes for the mounting screws.
3. Secure the remote holder to the wall using the provided screws.

4. Place the remote control into the installed holder.



Figure 3: Installation steps for the remote control holder.

6. OPERATING INSTRUCTIONS

Your Garwarm ceiling fan can be controlled using the included remote control or a dedicated smartphone application.

6.1 Remote Control Functions

The remote allows independent control of the fan and light, along with speed adjustments and timing features.

- **Fan On/Off:** Turns the fan on or off.
- **Light On/Off:** Turns the light on or off.
- **Fan Speed:** Adjusts between 6 wind speeds (1-2 Gentle breeze, 3-4 Natural wind, 5-6 Strong wind).

- **Timing Function:** Set the fan to turn off automatically after 1, 2, 4, or 8 hours.
- **Forward/Reverse:** Changes the direction of the fan blades for summer (downdraft) or winter (updraft) modes.
- **No Beep:** A button is available to eliminate the beeping sound.



SMART CEILING FAN



6 Wind Speeds



Timing function



Quiet operation



Light memory



Remote control



Night light

Figure 4: Visual representation of the 6-speed adjustable wind settings.



kitchen



dining room



bedroom



home office

Figure 5: Airflow circulation modes for summer (downdraft) and winter (updraft).

6.2 App Control

The fan also supports control via a smartphone application. This app provides similar functionalities to the remote control, allowing you to manage the fan and light settings from your phone.

Your browser does not support the video tag.

Video 1: Demonstration on how to use the remote and app for the Garwarm ceiling fan. This video shows the remote's timer functions and how to control the fan and light via the app interface, including adjusting fan speed and light settings.

The app interface allows you to:

- Turn the fan and light on/off independently.
- Adjust fan speed (0-6).
- Access instructions and troubleshooting tips directly within the app.

Note: The remote and app cannot achieve infinite dimming.

7. MAINTENANCE

Regular maintenance ensures the longevity and efficient operation of your ceiling fan.

- **Cleaning:** Use a soft, damp cloth to clean the fan and light fixture. Do not use abrasive cleaners or solvents. Ensure power is off before cleaning.
- **Bulb Replacement:** Replace E26 base bulbs as needed. Ensure the power is off and bulbs have cooled before handling.
- **Blade Inspection:** Periodically check the fan blades for any dust buildup or damage.

8. TROUBLESHOOTING

If you encounter issues with your Garwarm ceiling fan, refer to the following common solutions:

Problem	Possible Cause	Solution
Fan does not turn on	No power, loose wiring, remote battery dead	Check circuit breaker, ensure secure wiring, replace remote batteries.
Light does not turn on	Bulbs not installed correctly, faulty bulbs, loose wiring	Ensure bulbs are screwed in tightly, replace bulbs, check wiring connections.
Dimming function not working	Lamp is off	Ensure the light is turned on before attempting to dim. Note: Infinite dimming is not supported.
Fan makes loud noise	Loose screws, unbalanced blades	Tighten all mounting screws. Check for any obstructions or imbalance in blades. The motor is designed for ultra-quiet operation (less than 30db).
Remote/App not responding	Remote battery dead, pairing issue, app not updated	Replace remote batteries. Refer to manual for pairing instructions. Ensure app is updated to the latest version.

Table 2: Common Troubleshooting Steps.

9. WARRANTY AND SUPPORT

Garwarm provides **2 years of after-sales service** for this product. If you encounter any issues or require assistance, please contact Garwarm customer support. Refer to the product packaging or the official Garwarm website for contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question