

[Manuals.plus](#) /

› [NOLYTH](#) /

› NOLYTH External CD/DVD Drive User Manual for Mac, Windows, and Linux (Model 0726133313151)

NOLYTH 0726133313151

NOLYTH External CD/DVD Drive User Manual

Model: 0726133313151

1. INTRODUCTION

This manual provides instructions for the NOLYTH External CD/DVD Drive. This device offers multi-functional capabilities including CD/DVD reading and writing, an SD card reader, a TF card reader, and two USB 3.0 ports. It is designed for use with various computer systems.

What's in the Box:

- 1 x NOLYTH External CD/DVD Drive
- 1 x USB Data Cable
- 1 x USB Power Cable
- 1 x User Manual



Figure 1: NOLYTH External CD/DVD Drive overview with included cables.

2. SETUP

The NOLYTH External CD/DVD Drive is designed for plug-and-play functionality. No additional drivers are typically required for most operating systems.

Connection Steps:

1. Connect the micro-USB end of the data cable to the corresponding port on the back of the external CD/DVD drive.
2. Connect the USB-A or USB-C end of the data cable to an available USB port on your computer.
3. If your computer's USB port does not provide sufficient power, connect the USB power cable from the drive's DC port to another available USB port on your computer or a powered USB hub.
4. The drive should be automatically detected by your operating system.



Figure 2: Detailed view of the drive's ports and buttons.



Figure 3: The included USB data cable with USB-A and USB-C connectors for versatile connectivity.

Note:

- For optimal performance, ensure both the data and power cables are connected, especially when using older USB ports or performing write operations.
- A playback software is required on your computer system to watch DVDs or listen to audio CDs. Windows 10 and newer macOS versions may not include built-in DVD playback software.

3. OPERATING INSTRUCTIONS

3.1 Playing a DVD Movie

1. Ensure your computer has a DVD playback program installed (e.g., VLC Media Player, CyberLink PowerDVD).
2. Connect the external CD/DVD drive to your computer as described in the Setup section.
3. Press the eject button on the front panel of the drive to open the disc tray.
4. Place the DVD disc into the tray, label side up, and gently push the tray back into the drive until it clicks.
5. Your computer should detect the disc. Open your DVD playback software and select the DVD drive to begin playback.

3.2 Playing an Audio CD

1. Connect the external CD/DVD drive to your computer.
2. Press the eject button to open the disc tray.
3. Place the audio CD into the tray, label side up, and close the tray.
4. On Windows, a prompt may appear asking what to do with the audio CD. Select your preferred media player (e.g., Windows Media Player). If no prompt appears, open your media player manually and select the CD drive.
5. On macOS, the Music app (formerly iTunes) should automatically recognize and play the CD.

3.3 Backing Up Files to CD/DVD (Burning)

To back up files, you will need blank writable CD-R/RW or DVD-R/RW discs and appropriate burning software (e.g., Windows File Explorer's built-in burning feature, Nero, Roxio).

1. Insert a blank writable disc into the drive.
2. Open File Explorer (Windows) or Finder (macOS).
3. Select the files you wish to copy. Right-click and choose "Send to" (Windows) or drag and drop (macOS) to the CD/DVD drive icon.
4. Follow the on-screen prompts to finalize the burning process.



Figure 4: The drive supports various functions including burning, data backup, software installation, and media playback.

3.4 Using the SD/TF Card Reader and USB Ports

The drive features 2 USB 3.0 ports, 1 SD card slot, and 1 TF card slot for expanded connectivity.

- **USB 3.0 Ports:** Connect USB hard drives, flash drives, mice, keyboards, or other USB computer accessories. These ports also support charging for compatible devices.
- **SD/TF Card Slots:** Insert SD or TF (MicroSD) cards to transfer files between your camera or other devices and your computer.

Note: The SD card port and TF card port cannot be used simultaneously.



Figure 5: Integrated SD and TF card slots.



Figure 6: Two USB 3.0 ports for connecting peripherals.

4. COMPATIBILITY

This external CD/DVD drive is compatible with a wide range of operating systems and computer types.

Supported Systems:

- Windows 11 / 10 / 8.1 / 7 / Vista / XP
- macOS (all versions)
- Linux

It works with laptops, desktops, MacBooks, and iMacs.

Incompatible Devices:

Please note that this USB DVD drive is designed for connection to laptops and desktops only. It is generally not compatible with:

- TVs
- Car entertainment systems
- Blu-ray players
- Projectors
- Chrome OS devices
- PS4 consoles
- Smartphones
- Tablets / iPads

Widely Compatible



Know before You Buy

The following may cause the optical drive can't read the CD/DVD

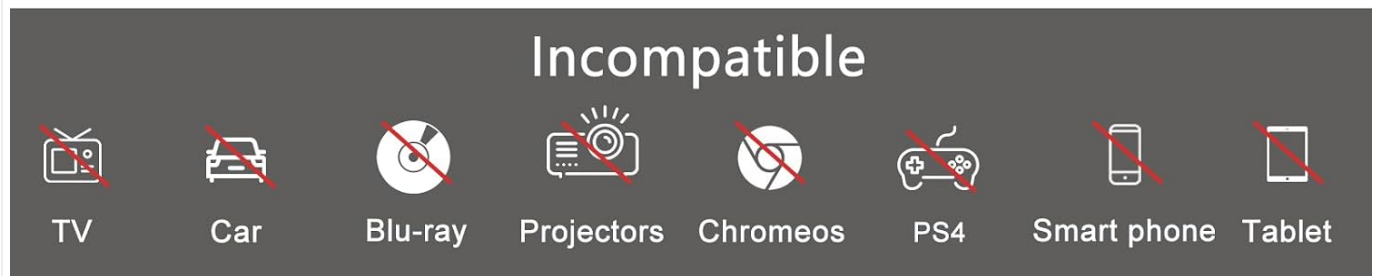


Figure 7: Compatibility overview for the NOLYTH External CD/DVD Drive.

5. TROUBLESHOOTING

5.1 Hard to Open the Disc Tray

- Unplug the external DVD drive and plug it back in. While the green light is flashing, press the eject button.
- Insert a pin into the small emergency eject hole on the front panel to manually open the tray.
- Use the eject function from your computer's operating system (e.g., right-click the drive icon and select "Eject").

5.2 Problems with Burning Discs

- Ensure you are using a blank, writable disc (CD-R/RW or DVD-R/RW).
- Verify that your burning software is correctly configured and compatible with your operating system.
- If burning video files, you may need third-party software to convert your file format to one that is compatible with disc playback before burning. Burning files without proper format conversion may result in unplayable discs.

5.3 Drive Not Recognized

- Ensure both the USB data cable and, if necessary, the USB power cable are securely connected to your computer.
- Try connecting the drive to a different USB port on your computer.
- Restart your computer.
- Check Device Manager (Windows) or System Information (macOS) to see if the drive is listed. If there are driver issues, try updating or reinstalling them (though typically not required for this plug-and-play device).

6. SPECIFICATIONS

Feature	Detail
Brand	NOLYTH
Model Number	0726133313151
Hardware Platform	Laptop, Mac, PC
Operating System	Windows, macOS, Linux
Item Weight	15.8 ounces
Product Dimensions	5.85 x 5.54 x 0.74 inches
Color	N-Silver
Special Feature	5-in-1 design with 2 USB & 1 TF & 1 SD slot, Aluminum Alloy cover, Plug & Play
Hardware Interface	USB 3.0, USB 3.0 Type C
Optical Storage Write Speed	Max 24x CD-R, Max 8x DVD+/-R
Optical Storage Read Speed	Max 24x CD, Max 8x DVD



Figure 8: High read and write speeds for CD and DVD formats.

7. WARRANTY AND SUPPORT

NOLYTH offers comprehensive support for this external CD/DVD drive:

- **Lifetime Technical Support:** Professional customer service is available for any technical inquiries or assistance you may need.
- **1-Year Warranty:** The product is covered by a 1-year warranty from the date of purchase.
- **60-Day Money-Back Guarantee:** A 60-day money-back guarantee is provided for your satisfaction.

For questions or suggestions, please contact NOLYTH customer service.

8. PRODUCT VIDEO DEMONSTRATION

Watch this video for a visual guide on connecting and using the NOLYTH External CD/DVD Drive with its various features.

Your browser does not support the video tag.

Video 1: Demonstration of the NOLYTH External CD/DVD Drive's connectivity and functionality, including disc playback and use of integrated ports.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question