

Pwshymi Pwshymi563e7az1tm

Pwshymi Cordless 2-in-1 Stick Handheld Vacuum Cleaner Instruction Manual

Model: Pwshymi563e7az1tm

Brand: Pwshymi

[Introduction](#) [Safety](#) [Contents](#) [Setup](#) [Operating](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty](#)

1. INTRODUCTION

Thank you for choosing the Pwshymi Cordless 2-in-1 Stick Handheld Vacuum Cleaner. This manual provides essential information for the safe and efficient use of your new appliance. Please read it thoroughly before operation and retain it for future reference.

Key Features:

- **2-in-1 Design:** Easily converts between stick and handheld modes for versatile cleaning.
- **Powerful Suction:** Provides strong suction to effectively remove dust and dirt from various surfaces.
- **Cordless & Portable:** Offers freedom of movement without the hassle of a power cord.
- **Long Battery Life:** Equipped with a high-capacity Lithium-Ion battery for extended cleaning sessions.
- **Silent Operation:** Designed with a low-noise motor for quiet cleaning.
- **Triple Filtration:** Ensures efficient dust capture and discharge of fresh air.

Cordless Vacuum Cleaner

Vacuuming and mopping in one, easy to cleaning



Image 1.1: Overview of the Pwshymi Cordless Vacuum Cleaner's key features.

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, please observe the following safety precautions:

- Read all instructions before using the appliance.
- Do not leave the appliance unattended when plugged in. Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- Do not use without dust bag and/or filters in place.
- Store the appliance indoors.

3. PACKAGE CONTENTS

Verify that all items are included in your package:

- Main Vacuum Unit (Handheld)
- Extension Wand (Stick)

- Floor Brush Head
- Crevice Tool
- Brush Attachment
- Charging Dock
- User Manual



Image 3.1: All components included in the package.

4. SETUP AND ASSEMBLY

Follow these steps to assemble your vacuum cleaner:

1. **Attach the Extension Wand:** Align the main vacuum unit (handheld part) with the top end of the extension wand. Push firmly until it clicks into place.
2. **Attach the Floor Brush Head:** Connect the bottom end of the extension wand to the floor brush head. Ensure it is securely attached.
3. **For Handheld Use:** To use the vacuum in handheld mode, detach the extension wand and attach desired accessories (crevice tool or brush attachment) directly to the main vacuum unit.
4. **Charging:** Before first use, fully charge the vacuum cleaner using the provided charging dock. Connect the charging dock to a power outlet and place the vacuum on the dock. The indicator light will show charging status.



Image 4.1: The vacuum cleaner assembled in stick mode.

5. OPERATING INSTRUCTIONS

Power On/Off:

Press the power button located on the main unit to turn the vacuum cleaner on or off.

Using in Stick Mode:

For floor cleaning, ensure the extension wand and floor brush head are attached. Glide the vacuum over hard floors, tiles, or low-pile carpets. The powerful suction will effectively pick up dust and debris.



Handheld/Pusher Dual-Use
Cordless Design for Easy
Vacuuming

Three lengths, can be changed
freely

Using in Handheld Mode:

Detach the extension wand to convert the unit into a handheld vacuum. Attach the crevice tool for narrow spaces, corners, or car interiors. Use the brush attachment for upholstery, curtains, or delicate surfaces.



Image 5.2: Handheld mode is ideal for cleaning furniture and hard-to-reach areas.

Powerful Suction:



Image 5.3: The vacuum's powerful suction effectively removes various types of dirt.

Official Product Video:

Video 5.1: A demonstration of the Powerful Cordless Vacuum Cleaner 2 in 1 Rechargeable Stick.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

Emptying the Dustbin:

1. Ensure the vacuum cleaner is turned off.
2. Locate the dustbin release button on the main unit.
3. Press the button and carefully detach the dustbin.
4. Empty the contents into a trash receptacle.

Cleaning the Filter:

The vacuum features a washable filter for sustained performance.

1. After emptying the dustbin, remove the filter assembly.
2. Tap the filter gently to dislodge any loose dust.
3. Rinse the filter under running water until clean. Do not use detergent.
4. Allow the filter to air dry completely for at least 24 hours before reinserting it into the dustbin. Ensure it is completely dry to prevent damage to the motor.

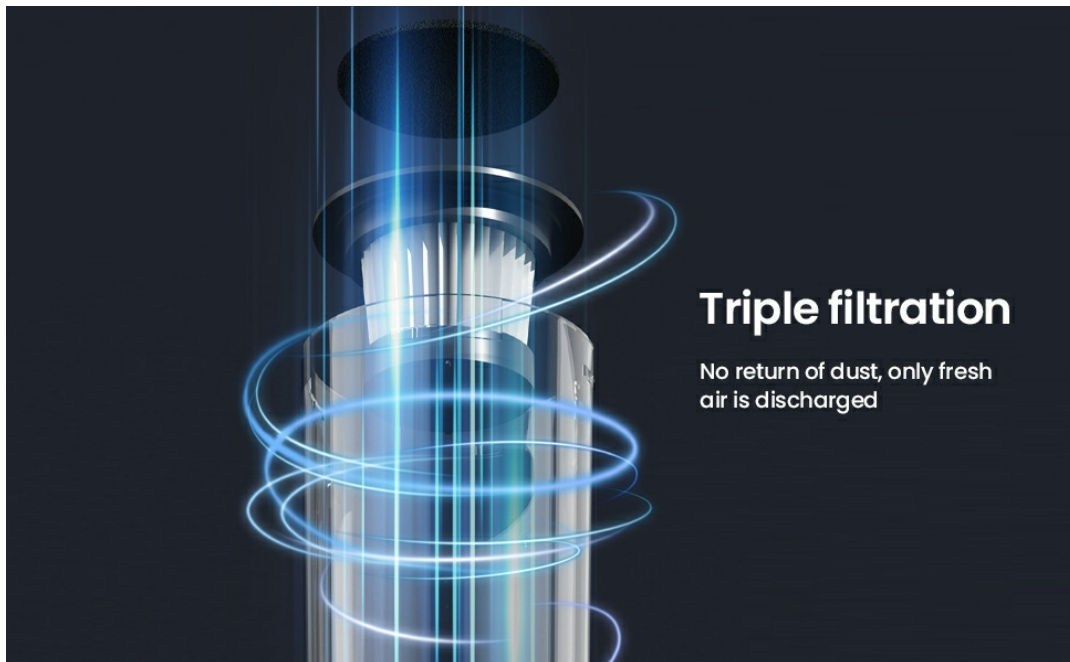


Image 6.1: The triple filtration system ensures clean air discharge.

7. TROUBLESHOOTING

If you encounter any issues with your vacuum cleaner, refer to the following table:

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is low or depleted Power button not pressed correctly	Charge the battery fully Press the power button firmly
Low suction power	Dustbin is full Filter is clogged Nozzle/hose is blocked	Empty the dustbin Clean or replace the filter Remove any blockages from the nozzle/hose

Problem	Possible Cause	Solution
Unusual noise	Blockage in the brush head or hose Filter not installed correctly	Check for and remove blockages Reinstall the filter correctly
Battery not charging	Charger not connected properly Faulty charger or battery	Ensure charger is securely connected Contact customer support for assistance

8. SPECIFICATIONS

Feature	Detail
Brand	Pwshymi
Model Number	Pwshymi563e7az1tm
Form Factor	Stick
Item Weight	2.42 pounds
Package Dimensions	16.69 x 6.34 x 4.84 inches
Battery Type	Lithium-Ion
Included Components	Charging Dock

9. WARRANTY AND SUPPORT

Your Pwshymi Cordless 2-in-1 Stick Handheld Vacuum Cleaner comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions.

For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact Pwshymi customer service through the contact information provided on your warranty card or the official Pwshymi website.