

[manuals.plus](#) /› [Porodo](#) /› [Porodo Android TV & Game Stick PDX540 with Wireless Controllers Instruction Manual](#)

Porodo PDX540

Porodo Android TV & Game Stick PDX540 with Wireless Controllers Instruction Manual

This manual provides detailed instructions for the setup, operation, and maintenance of your Porodo Android TV & Game Stick PDX540, including its accompanying wireless gaming controllers. Please read thoroughly before use.

1. PRODUCT OVERVIEW

The Porodo Android TV & Game Stick PDX540 is a compact entertainment device that transforms your TV into a smart Android system and a gaming console. It comes bundled with two wireless controllers for an immersive gaming experience. The stick features a robust Android 12.1 OS, dual-band Wi-Fi (2.4GHz and 5GHz), 2GB RAM, and 16GB internal storage, allowing you to stream media, browse the internet, and play a wide variety of games.

Package Contents

- 1 x Porodo Android TV & Game Stick PDX540
- 2 x Porodo Wireless Gaming Controllers
- 1 x USB Power Cable
- 1 x HDMI Extension Cable (if included)
- 1 x User Manual (This document)

Product Components



Image 1: The Porodo Android TV & Game Stick PDX540 with two included wireless controllers.



Image 2: Close-up view of a single Porodo wireless gaming controller.



Image 3: Front view of the Porodo Android TV & Game Stick PDX540 retail box.

2. SPECIFICATIONS

Feature	Detail
Model Number	PDX540
Operating System	Android 12.1 OS
RAM	2GB
Internal Storage	16GB
Wireless Connectivity	Wi-Fi (2.4GHz & 5GHz)

Feature	Detail
Controller Type	Wireless Gamepad
Compatible Devices	TVs with HDMI input, various Android applications and games
Dimensions (Game Stick)	Approx. 10 x 5 x 3 cm
Item Weight (Game Stick)	Approx. 99 grams
Color	Black (Game Stick), White (Controllers)
Special Features	Lightweight, easy to use, original product

3. SETUP GUIDE

3.1 Connecting the Game Stick to Your TV

1. Locate an available HDMI port on your television or monitor.
2. Carefully insert the Porodo Android TV & Game Stick PDX540 into the HDMI port. If space is limited, use the provided HDMI extension cable.
3. Connect the USB power cable to the Game Stick's power input port.
4. Plug the other end of the USB power cable into a USB power adapter (not included) or a powered USB port on your TV. Ensure the power source provides sufficient power (e.g., 5V/1A).
5. Turn on your TV and select the correct HDMI input source using your TV remote. The Android OS interface should appear on your screen.

3.2 Charging the Wireless Controllers

Before first use, ensure your controllers are fully charged.

- Connect the USB charging cable to the charging port on each controller.
- Plug the other end of the USB charging cable into a USB power source (e.g., a computer USB port, a USB wall adapter).
- The controller's indicator light will typically show charging status (e.g., solid light while charging, off when fully charged).

3.3 Pairing the Wireless Controllers

The controllers should automatically pair with the Game Stick when both are powered on. If not, follow these steps:

1. Ensure the Game Stick is powered on and connected to your TV.
2. Turn on the wireless controller by pressing the **HOME** button.
3. The controller's indicator light should blink, indicating it is searching for a connection.
4. Once connected, the indicator light will become solid. If it fails to connect, try pressing and holding the **HOME** button for a few seconds to initiate pairing mode, or consult the on-screen settings of the Android TV Stick for Bluetooth device management.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

- **Power On:** The Game Stick powers on automatically when connected to a power source and the TV is on the correct HDMI input. Turn on the controllers by pressing the **HOME** button.
- **Power Off:** To turn off the Game Stick, disconnect its power cable. To turn off the controllers, press and hold the **HOME** button until the indicator light turns off.

4.2 Basic Controller Functions

- **Directional Pad (D-Pad):** Navigate menus and control character movement.
- **Analog Sticks:** Provide precise 360-degree movement and camera control.
- **Action Buttons (A, B, X, Y):** Perform in-game actions, confirm selections.
- **HOME Button:** Return to the main menu, power on/off controller.
- **SELECT/START Buttons:** Access in-game menus, pause, or select options.
- **Shoulder/Trigger Buttons (L1, L2, R1, R2):** Additional in-game actions.

4.3 Navigating the Android OS

Use the connected wireless controller to navigate the Android 12.1 OS interface. The analog sticks or D-pad can move the cursor or highlight options, and the A button typically acts as a 'confirm' or 'select' button.

4.4 Connecting to Wi-Fi

1. From the main menu, navigate to **Settings**.
2. Select **Network & Internet**.
3. Turn on Wi-Fi and select your desired network from the list.
4. Enter the Wi-Fi password using the on-screen keyboard and confirm.

4.5 Playing Games and Using Apps

- The Game Stick comes with pre-installed games. Navigate to the 'Games' section on the home screen to access them.
- You can download additional apps and games from the pre-installed app store or by installing APK files (ensure sources are trusted).
- Ensure your controllers are paired and charged for optimal gaming performance.

5. MAINTENANCE

5.1 Cleaning

- Use a soft, dry cloth to wipe the Game Stick and controllers.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Do not use harsh chemicals, solvents, or abrasive materials, as these can damage the product's finish.
- Ensure no liquid enters the ports or openings of the devices.

5.2 Storage

- Store the Game Stick and controllers in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid storing in dusty environments.
- If storing for an extended period, ensure controllers are partially charged to maintain battery health.

6. TROUBLESHOOTING

6.1 No Display on TV

- Ensure the Game Stick is securely plugged into the HDMI port.
- Verify that the USB power cable is connected and the Game Stick is receiving power.
- Check that your TV is set to the correct HDMI input source.
- Try connecting the Game Stick to a different HDMI port or TV.

6.2 Controllers Not Connecting/Responding

- Ensure the controllers are charged.
- Press the **HOME** button on the controller to turn it on.
- If the controller does not connect automatically, try re-pairing it as described in Section 3.3.
- Ensure there are no other strong wireless interference sources nearby.

6.3 Wi-Fi Connection Issues

- Verify your Wi-Fi password is correct.
- Ensure the Game Stick is within range of your Wi-Fi router.
- Restart your Wi-Fi router and the Game Stick.
- Check if other devices can connect to your Wi-Fi network.

6.4 System Lag or Freezing

- Close any unnecessary background applications.
- Clear the cache of frequently used apps in the Android settings.
- Ensure the Game Stick has adequate ventilation to prevent overheating.
- Consider performing a factory reset if issues persist (Note: this will erase all data and installed apps).

7. WARRANTY AND SUPPORT

7.1 Warranty Information

Porodo products are designed for quality and reliability. This product comes with a standard manufacturer's warranty against defects in materials and workmanship. Please refer to the warranty card included in your product packaging or visit the official Porodo website for detailed warranty terms and conditions. Keep your proof of purchase for warranty claims.

7.2 Customer Support

If you encounter any issues not covered in this manual or require further assistance, please contact Porodo customer support. You can typically find contact information on the official Porodo website or through your retailer.

- **Online Support:** Visit the [Porodo Brand Store on Amazon](#) for product information and support resources.
- **Email/Phone:** Check the Porodo official website for the most up-to-date contact details.

© 2024 Porodo. All rights reserved. Information in this manual is subject to change without notice.