

Hape E3215

Hape Ding & Pop-Up Toaster Instruction Manual

Model: E3215

PRODUCT OVERVIEW

The Hape Ding & Pop-Up Toaster is a wooden play set designed to encourage imaginative play and skill development in children aged 24 months and up. This set allows children to engage in role-playing scenarios, fostering creativity and cognitive growth.

- Children engage in imaginative scenarios and role-playing, fostering creativity, storytelling skills, and cognitive growth.
- Manipulating the toaster lever, inserting play food, and picking up toasted slices promote hand-eye coordination and fine motor skills.
- Through play, children might explore different types of toast enjoyed in various cultures, promoting cultural awareness. Conversations about healthy toppings and balanced meals can foster an early interest in nutrition and eating well.
- The toaster features a lever that can be pushed down, producing a ticking sound for 6 seconds before a 'ding' as the toast pops out. The toaster has a stylish and modern design with functional elements and accessories.



The Hape Ding & Pop-Up Toaster set, showcasing the toaster and accompanying play food items.

WHAT'S INCLUDED

The Hape Ding & Pop-Up Toaster set includes the following components:

- One toy toaster
- Two toast pieces
- Three avocado slices
- Sliceable butter
- Jam
- Ham
- Cheese
- One knife
- One plate



Love play, learn.

Hape offers innovative,
eco-friendly,
and educational toys,
designed to inspire creativity
and learning in children
while committing to quality,
sustainability and safety.

A child interacting with the Hape toaster, demonstrating its use in a play kitchen setting.

SETUP

The Hape Ding & Pop-Up Toaster requires minimal setup. Simply remove all components from the packaging. No assembly is required. Place the toaster and accessories on a flat, stable surface for play.

OPERATING INSTRUCTIONS

To operate the Hape Ding & Pop-Up Toaster:

1. Insert one or two pieces of play toast into the slots on top of the toaster.
2. Push down the lever located on the side of the toaster. This will initiate a ticking sound.
3. After approximately 6 seconds, the toast will automatically pop up with a 'ding' sound, indicating it is 'ready'.
4. Use the adjustable dial on the front to simulate different toasting levels.
5. Utilize the included knife and other play food items to prepare pretend meals.

Demonstration of a wooden pop-up toaster set, showing the toast being inserted, the lever being pressed, and the toast popping up, along with various play food items.

CARE AND MAINTENANCE

To ensure the longevity of your Hape Ding & Pop-Up Toaster:

- Wipe all wooden and plastic components with a damp cloth and mild soap as needed.
- Avoid submerging the toy in water.
- Store the toy and its accessories in a dry place away from direct sunlight to prevent warping or fading.
- Regularly inspect all parts for any signs of wear or damage. Discontinue use if any part is broken.

TROUBLESHOOTING

If you encounter any issues with your Hape Ding & Pop-Up Toaster:

- **Toast not popping up:** Ensure the lever is fully pushed down. The mechanism is designed to release after a short delay.
- **Pieces getting stuck:** Check that only the designated toast pieces are inserted into the slots. Avoid forcing other items into the toaster.
- **Loss of sound:** The ticking and ding sounds are mechanical. If they cease, inspect the lever mechanism for any obstructions.

SPECIFICATIONS

Product Dimensions	14 x 8 x 3.5 inches
Item Weight	1.98 pounds
Item Model Number	E3215
Manufacturer Recommended Age	24 months and up
Manufacturer	Hape

SAFETY INFORMATION

This product is suitable for children aged 2 years and older (2 Y+).

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the contact details provided on the product packaging or visit the official Hape website. Keep your purchase receipt for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question