

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Jimmyjane](#) /
- › [JIMMYJANE Hello Touch Pro Rechargeable Finger Vibrators User Manual](#)

## Jimmyjane JJ10525

# JIMMYJANE Hello Touch Pro User Manual

Rechargeable Finger Vibrators with Silicone Sleeves & Rechargeable Travel Case

## INTRODUCTION

---

Welcome to the JIMMYJANE Hello Touch Pro user manual. This guide provides essential information for the safe and effective use, maintenance, and troubleshooting of your new finger vibrators. Please read thoroughly before first use.



The JIMMYJANE Hello Touch Pro set, including the two finger vibrators, silicone sleeves, and rechargeable travel case, shown with its packaging.

## PRODUCT OVERVIEW

The JIMMYJANE Hello Touch Pro consists of two compact, powerful finger vibrators designed for intuitive exploration. They feature hygienic silicone contact domes and come with supple silicone sleeves for comfortable use. The set includes a rechargeable travel case that also functions as a wireless remote.

- Two mini finger massagers with powerful vibrations.
- Powered case that charges the massagers while stored.
- Rechargeable case doubles as a wireless remote for full control.
- Includes two silicone sleeves that easily attach to your fingertips.




Individual components of the Hello Touch Pro: two finger vibrators, the charging case, and two silicone finger sleeves.

## SETUP

### Charging the Devices and Case

Before first use, fully charge both finger vibrators and the charging case. The included magnetic USB charging cable can be used for both.

1. Connect the magnetic USB charging cable to the charging port on each finger vibrator individually to charge them directly.
2. Alternatively, place the finger vibrators into the charging case.
3. Connect the magnetic USB charging cable to the charging port on the case. The case will charge itself and the vibrators stored inside.
4. Ensure the charging indicator light on the case or vibrator illuminates to confirm charging is active.

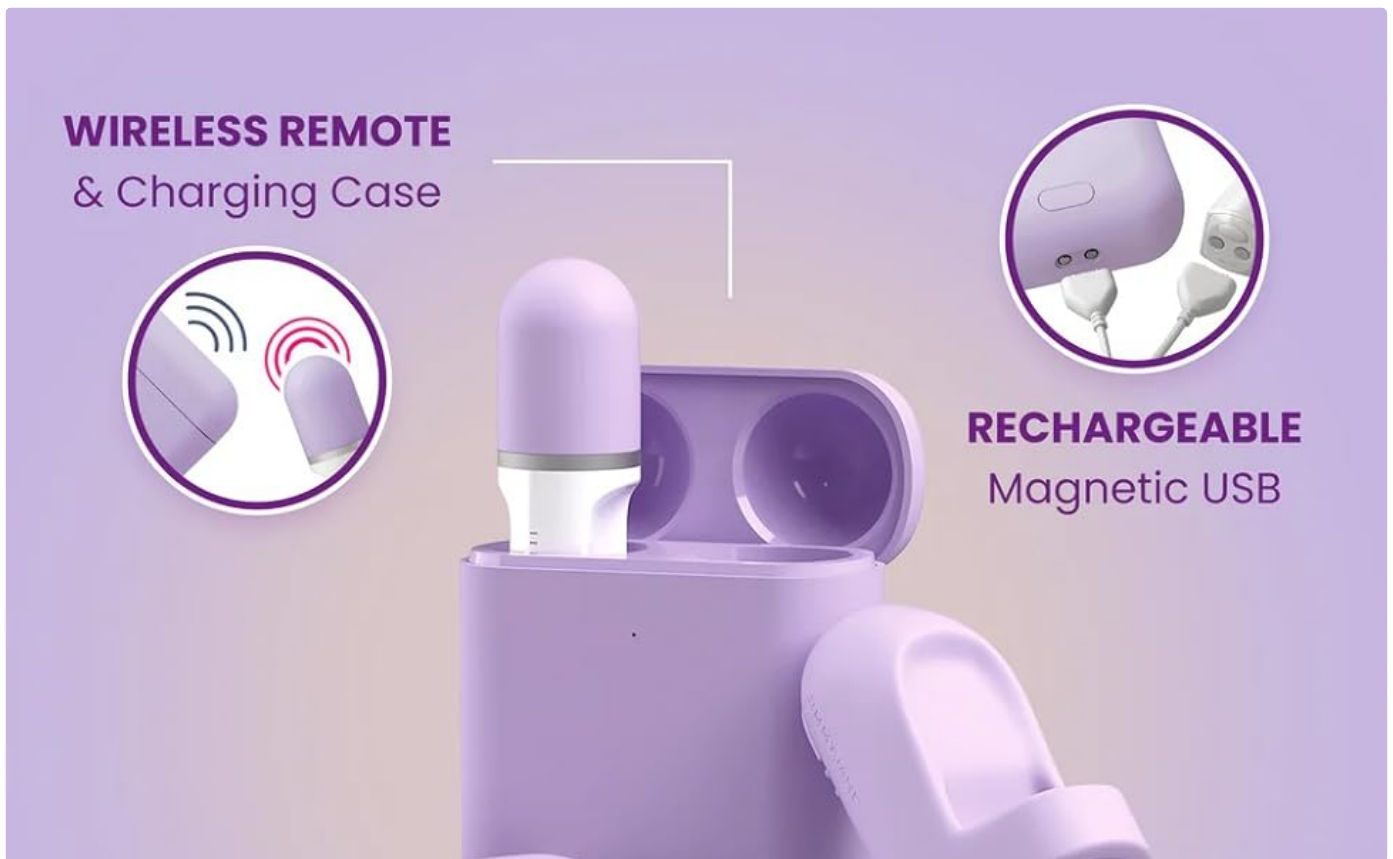

**WIRELESS REMOTE**  
& Charging Case

**RECHARGEABLE**  
Magnetic USB

Demonstration of connecting the magnetic USB cable to charge either a single vibrator or the charging case.

Your browser does not support the video tag.

Video demonstrating the features of the Hello Touch Pro, including how to use the silicone sleeves, single-button control, remote control via the charging case, IPX6 splashproof rating, and magnetic USB charging. (Source: JIMMYJANE)

## OPERATING INSTRUCTIONS

---

### Using the Silicone Sleeves

For intuitive exploration and comfortable use, place each vibrator into a supple silicone sleeve.

1. Gently insert the vibrator into the opening of the silicone sleeve.
2. Ensure the vibrator is securely seated within the sleeve.
3. Slip the sleeve onto your fingertip.



A hand demonstrating the use of the Hello Touch Pro vibrators with the silicone sleeves comfortably slipped onto the fingertips.

### **Single Button Control**

Each vibrator features a single button for control.

- Press the button on the base of each vibrator to turn it on and cycle through 10 exciting vibration patterns.
- Press and hold the button to turn the vibrator off.





A hand holding one of the compact Hello Touch Pro vibrators, highlighting its small size and single-button control.

## Remote Control via Charging Case

The charging case doubles as a wireless remote to control both vibrators simultaneously.

- Ensure both vibrators are powered on and within range of the charging case.
- Press the button on the side of the charging case to control both vibrators simultaneously, cycling through their vibration patterns.

## MAINTENANCE

---

### Cleaning

The Hello Touch Pro vibrators and silicone sleeves are made from hygienic silicone and are splashproof (IPX6 rated) for easy cleaning.

- Clean the vibrators and silicone sleeves with warm water and a mild soap or a toy cleaner after each use.
- Rinse thoroughly and allow to air dry completely before storing.
- Do not submerge the charging case in water. Wipe it clean with a damp cloth.

### Storage

Store the Hello Touch Pro in its charging case in a clean, dry place away from direct sunlight and extreme temperatures.

## TROUBLESHOOTING

---

- **Device not turning on:** Ensure the device is fully charged. Connect to the magnetic USB cable or place in the charged case.
- **Vibrations are weak:** Recharge the device. Low battery can result in weaker vibrations.
- **Remote control not working:** Ensure both vibrators are charged and powered on. Make sure they are within close proximity to the charging case.
- **Difficulty inserting vibrators into sleeves:** Ensure sleeves are dry. A small amount of water-based lubricant can assist if needed.

## SPECIFICATIONS

---

<b>Model Name</b>	JJ10525
<b>Brand</b>	Jimmyjane
<b>Material</b>	Silicone
<b>Color</b>	Lavender

<b>Style</b>	Finger Vibrators
<b>Water Resistance</b>	IPX6 (Splashproof)
<b>Power Source</b>	Rechargeable (Magnetic USB)
<b>Package Dimensions</b>	7.5 x 3.9 x 2.2 inches; 8.01 ounces
<b>Manufacturer</b>	JimmyJane

## IMPORTANT INFORMATION

---

### Legal Disclaimer

Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.

© 2024 JimmyJane. All rights reserved.