

## Kibiy MS-308

# Kibiy Electric Shaver MS-308 User Manual

Model: MS-308 | Brand: Kibiy

## 1. INTRODUCTION

---

Thank you for choosing the Kibiy Electric Shaver MS-308. This manual provides detailed instructions for the safe and effective use, maintenance, and troubleshooting of your new electric shaver. Please read this manual thoroughly before first use and keep it for future reference.



Figure 1.1: Kibiy Electric Shaver MS-308 and its retail packaging.

## 2. PRODUCT OVERVIEW

---

### 2.1 Key Features

- **3D Floating Smooth Shaving System:** The shaver's blade holder is designed to float, reducing pressure and following every curve of your face for a clean, comfortable shave.

# 3D FLOATING SMOOTH SHAVING SYSTEM

## Provide A Close Comfortable Shave

The razor's blade holder can float and reduce pressure, follows every curve of your face providing a clean, comfortable shave.

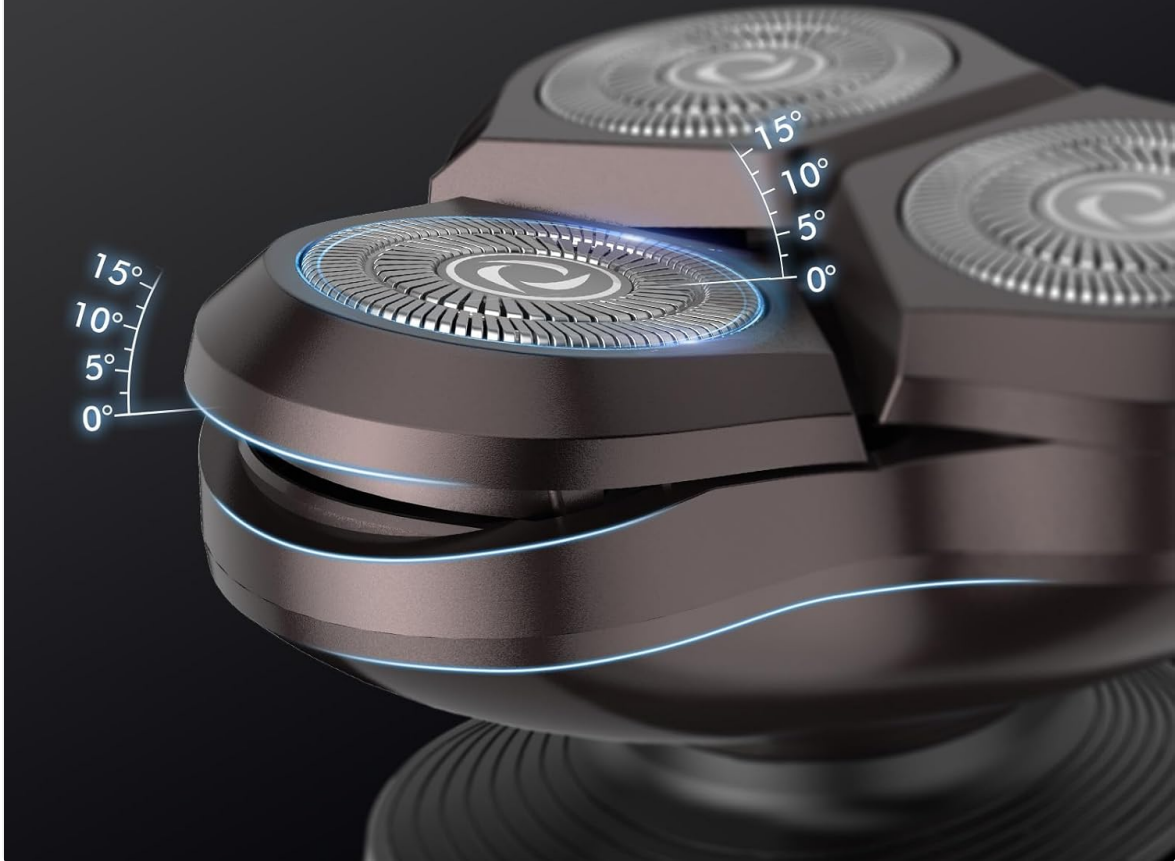


Figure 2.1: The 3D floating shaving system adapts to facial contours.

- **Dual-Ring Steel Precision Blade:** Features a dual-ring blade net that increases beard intake by 50% compared to single-ring blade nets, enabling faster and more efficient shaving.

# DUAL-RING STEEL PRECISION BLADE

For A Comfortable, Clean Shave

The dual-ring blade net increases beard intake by 50% compared to a single-ring blade net, enabling faster shaving.



Figure 2.2: Dual-ring blades for enhanced shaving efficiency.

- **Wet and Dry Shaving Capability:** Can be used for both dry shaving and wet shaving with foam or gel, offering versatility and comfort.

## SHAVE WET OR DRY WITH FOAM OR GEL

---



Figure 2.3: The shaver is suitable for both wet and dry use.

- **Two Speed Modes:** Offers 'Soft mode' for a smooth shave and 'Turbo mode' for an efficient shave, effortlessly handling various beard types.

## 2 SPEED MODES

Effortlessly handling various types of beards.



**Soft mode**

Smooth shave



**Turbo mode**

Efficient shave



Figure 2.4: Control panel indicating Soft and Turbo speed modes.

- **Long-Lasting Battery:** A single full charge provides up to 90 minutes of shaving convenience, equivalent to approximately 3 months of typical use. It supports USB-C charging.

# LONG LASTING BATTERY

One fully charge enjoy up to 3 months of shaving convenience.



Figure 2.5: The shaver features a long-lasting battery and USB-C charging.

- **100% Waterproof (IPX7):** Designed with IPX7 waterproofing, allowing for easy disassembly of the magnetic suction blade head and direct rinsing under water for cleaning.

# 100% WATERPROOF

IPX7 waterproof, magnetic suction blade head for easy disassembly and direct rinsing.



Figure 2.6: The shaver is IPX7 waterproof for easy cleaning.

## 2.2 What's Included

The package contains the following items:

- Electric Rotary Shaver
- Type-C Charging Cable
- Lubricating Oil
- Cleaning Brush

## WHAT'S INCLUDED

- Electric Rotary Shaver
- Type C charging cable
- Lubricating Oil
- Cleaning Brush

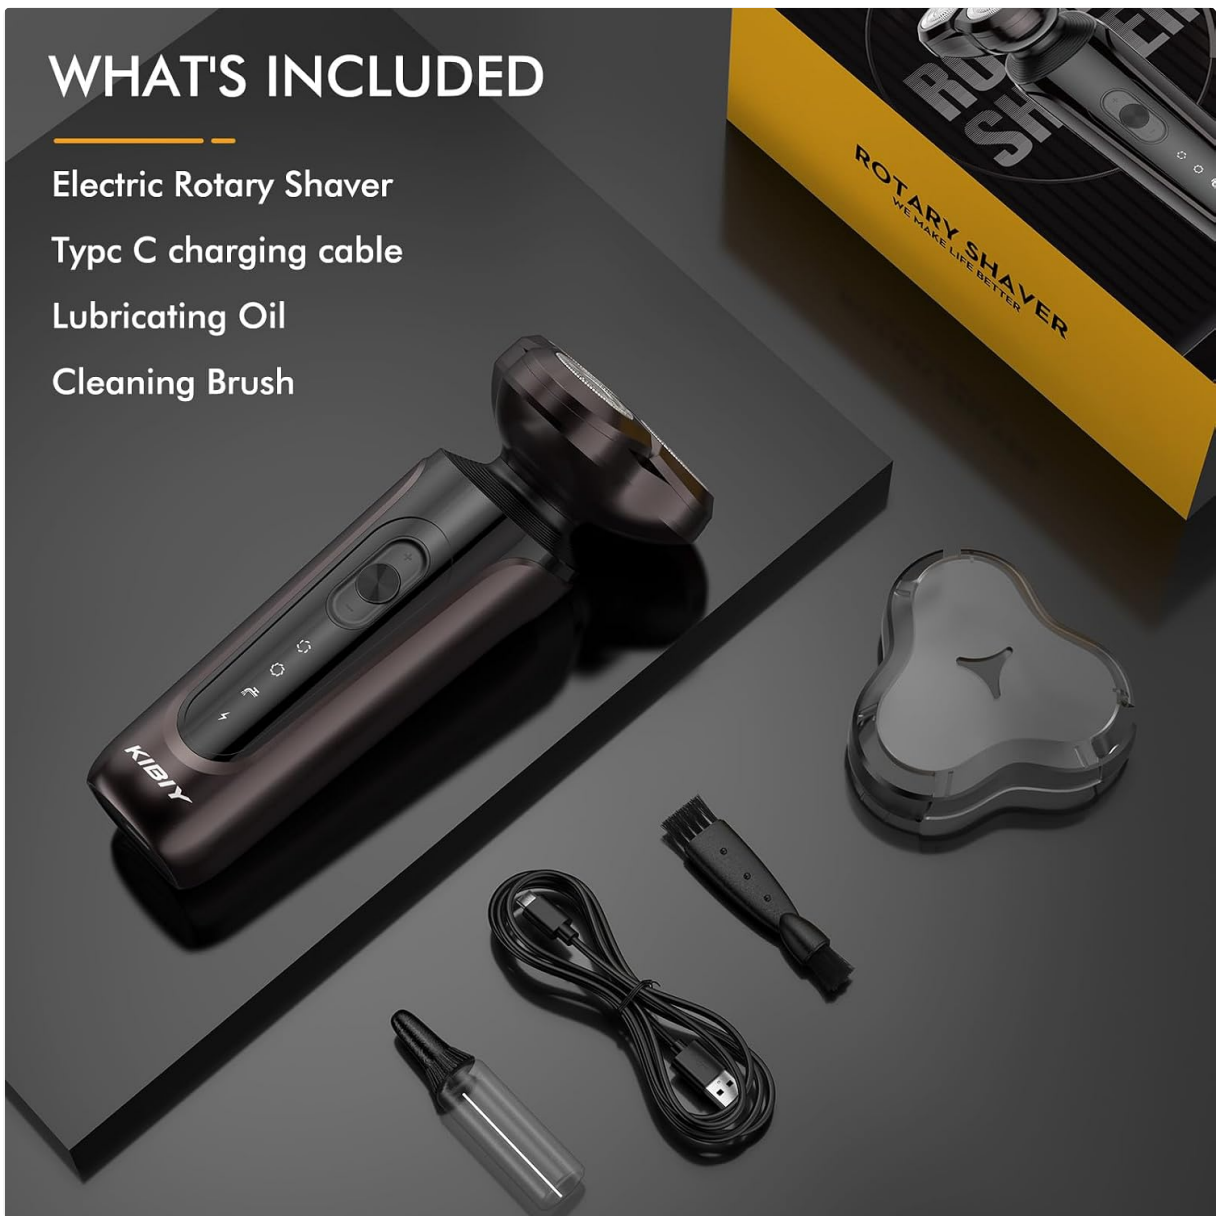


Figure 2.7: All items included in the Kibiy Electric Shaver package.

### 3. SETUP

---

#### 3.1 Charging the Shaver

Before first use, fully charge the shaver. The shaver is powered by a Lithium-ion battery.

1. Connect the Type-C charging cable to the charging port on the shaver.
2. Plug the other end of the USB cable into a compatible USB power source (e.g., USB charger, PC, power bank, car charger).
3. The battery indicator on the shaver will show charging status. A full charge typically takes approximately 90 minutes and provides up to 90 minutes of cordless shaving time.
4. Once fully charged, disconnect the shaver from the power source.

### 4. OPERATING INSTRUCTIONS

---

#### 4.1 Turning On/Off

- To turn on the shaver, press the power button once.
- To turn off the shaver, press the power button again.

## 4.2 Selecting Speed Mode

The shaver features two speed modes:

- **Soft Mode:** Ideal for sensitive skin or lighter stubble, providing a gentle and smooth shave.
- **Turbo Mode:** Provides a more powerful and efficient shave, suitable for denser beards or faster results.

To switch between modes, press the mode selection button (usually indicated by a wave or gear icon) after turning on the shaver.

## 4.3 Shaving Tips

- **For Dry Shaving:** Ensure your face is clean and dry. Move the shaver in small, circular motions against the direction of hair growth.
- **For Wet Shaving:** Apply shaving foam or gel to your face. Move the shaver in small, circular motions. Rinse the shaver head frequently during shaving to prevent clogging.
- For best results, stretch your skin with your free hand to make the hairs stand upright.
- Do not press the shaver too hard against your skin, as this can cause irritation and reduce shaving efficiency.

## 5. MAINTENANCE AND CLEANING

---

Regular cleaning and maintenance will ensure optimal performance and extend the lifespan of your shaver.

### 5.1 Daily Cleaning (After Each Use)

1. Turn off the shaver and disconnect it from any power source.
2. Gently pull the magnetic suction blade head to detach it from the shaver body.
3. Rinse the detached blade head and the main body (where the blade head connects) under running tap water. Ensure all hair clippings are washed away.
4. Shake off excess water and allow both parts to air dry completely before reattaching the blade head.

### 5.2 Deep Cleaning (Weekly/Bi-weekly)

1. Perform daily cleaning steps.
2. Use the provided cleaning brush to remove stubborn hair clippings from inside the blade head and around the individual rotary blades. Be careful not to damage the delicate blades.
3. Apply a small drop of the provided lubricating oil to each of the rotary blades. Run the shaver for a few seconds to distribute the oil evenly. This helps maintain blade sharpness and smooth operation.
4. Reattach the blade head securely.

**Caution:** Do not use abrasive cleaning agents, harsh detergents, or solvents to clean the shaver, as these can damage the surface or internal components.

## 6. TROUBLESHOOTING

---

If you encounter any issues with your Kibiy Electric Shaver, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Shaver does not turn on.	Battery is depleted.	Charge the shaver fully.
	Shaver is locked (travel lock).	Press and hold the power button for 3 seconds to unlock.

Problem	Possible Cause	Solution
Poor shaving performance / pulling hairs.	Blades are dirty or clogged with hair.	Clean the shaver head thoroughly as per maintenance instructions.
	Blades are worn out.	Replace the shaver head (contact Kibiy support for replacement parts).
Battery life is shorter than expected.	Battery not fully charged.	Ensure the shaver is fully charged before use.
	Aging battery.	Battery capacity may decrease over time. This is normal for rechargeable batteries.

If the problem persists after trying these solutions, please contact Kibiy customer support for further assistance.

## 7. SPECIFICATIONS

<b>Model Number</b>	MS-308
<b>Brand</b>	Kibiy
<b>Power Source</b>	Battery Powered
<b>Battery Type</b>	Lithium-ion (1 included)
<b>Blade Material</b>	Stainless Steel
<b>Number of Blades</b>	2 (Rotary Heads)
<b>Waterproof Rating</b>	IPX7
<b>Approximate Dimensions (Package)</b>	16 x 8.4 x 6.4 cm
<b>Approximate Weight (Package)</b>	230 grams
<b>Battery Life (Full Charge)</b>	Up to 90 minutes

## 8. WARRANTY AND SUPPORT

Kibiy products are manufactured with high-quality standards. For information regarding warranty coverage, technical support, or replacement parts, please refer to the warranty card included with your product or visit the official Kibiy website. You may also contact Kibiy customer service directly through the retailer where you purchased the product.

Please retain your proof of purchase for any warranty claims.