

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [MAXYOYO](#) /

› [MAXYOYO Giant Faux Fur Shell-Shaped Bean Bag Chair Instruction Manual](#)

MAXYOYO M-A54-Beige

MAXYOYO Giant Faux Fur Shell-Shaped Bean Bag Chair Instruction Manual

INTRODUCTION

This manual provides essential information for the setup, use, and maintenance of your MAXYOYO Giant Faux Fur Shell-Shaped Bean Bag Chair. Designed for comfort and versatility, this chair features a unique shell shape and is filled with high-density foam chunks for optimal support.



Image: The MAXYOYO Giant Faux Fur Shell-Shaped Bean Bag Chair in beige, showcasing its plush texture and ergonomic design.

The chair's polyester faux fur material offers a soft and cozy feel, enhancing the comfort of any indoor space. Its creative shell-shaped design allows it to integrate seamlessly with various home decor styles.

SETUP INSTRUCTIONS

Your bean bag chair is compressed for shipping convenience. Follow these steps to prepare it for use:

1. **Unpack:** Carefully remove the chair from its shipping box.
2. **Remove Compression Film:** Locate and remove any plastic compression film or packaging around the chair.
3. **Allow to Expand:** Place the chair in its desired location. It requires approximately 48 hours to fully breathe and regain its original elasticity and shape.
4. **Promote Rebound:** Gently tap and fluff the chair periodically during the 48-hour period to help distribute the foam chunks and accelerate the expansion process.

Product Dimensions



Image: A visual comparison showing the bean bag chair in its compressed state (Before) and fully expanded state (After).

Your browser does not support the video tag.

Video: A demonstration of unboxing the MAXYOYO Giant Shell Bean Bag Chair and allowing it to expand to its full size.

USAGE GUIDELINES

The MAXYOYO Giant Faux Fur Shell-Shaped Bean Bag Chair is designed for versatile use in various settings. Its large size and comfortable filling make it suitable for both adults and children.

- **Relaxation:** Ideal for lounging, watching movies, or simply unwinding.
- **Reading Nook:** Provides a cozy and supportive spot for extended reading sessions.
- **Gaming:** Offers comfortable seating for gaming enthusiasts.
- **Socializing:** A comfortable companion for spending time with family, friends, or pets.

Details



Soft Support



Faux Fur



Shell-shaped
Design

Image: A person comfortably seated in the bean bag chair, demonstrating its suitability for relaxation.

Enjoyment



Stylish



Comfortable



Breathable



Soft



Image: A person engrossed in reading a book while seated in the bean bag chair, highlighting its use as a reading spot.

MAINTENANCE AND CARE

Proper care will help maintain the appearance and longevity of your bean bag chair.

- **Spot Cleaning:** For minor spills or stains, gently spot clean the faux fur fabric with a mild detergent and a damp cloth. Blot the area dry.
- **Non-Removable Cover:** Please note that the outer cover of this bean bag chair is not designed to be removed for washing. Avoid machine washing or submerging the entire chair in water.
- **Fluffing:** To maintain the chair's shape and comfort, periodically fluff and rotate it. If the seat begins to sag, flipping the chair over can help redistribute the foam chunks and restore its fullness.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight may cause the fabric to fade over time.

TROUBLESHOOTING

Issue	Solution
-------	----------

Issue	Solution
Chair does not appear full or firm after unboxing.	The chair is compressed for shipping. Allow up to 48 hours for it to fully expand. Gently tap and fluff the chair to aid in foam distribution and rebound.
Seat feels saggy or less supportive over time.	This is normal for foam-filled bean bag chairs. Flip the chair over and leave it upside down overnight to redistribute the foam chunks and restore its shape and support.

SPECIFICATIONS

Feature	Detail
Brand	MAXYOYO
Model Number	M-A54-Beige
Color	Faux Fur Beige
Product Dimensions	47.2"D x 43.3"W x 33.4"H
Fabric Type (Outer Cover)	100% Polyester
Fill Material	Polyurethane Foam Chunks
Item Weight	44.1 pounds
Age Range	Adult, Kid
Indoor/Outdoor Usage	Indoor

WARRANTY AND SUPPORT

For specific warranty information or product support, please refer to the documentation included with your purchase or contact MAXYOYO customer service directly. Contact details can typically be found on the product packaging or the official MAXYOYO website.