

Generic B0CTK4FBCW

Instruction Manual for Replacement Remote Control

For Voltomat Heating 24652562 Electric Fireplace Infrared Quartz Space Heater

INTRODUCTION

This document provides essential instructions for the proper setup, operation, and maintenance of your new replacement remote control for the Voltomat Heating 24652562 Electric Fireplace Infrared Quartz Space Heater. Please read this manual thoroughly before use to ensure optimal performance and compatibility.

Important Note: This remote control is designed as a direct replacement. Please verify that your original remote control matches the appearance of the remote shown in this manual to ensure full compatibility. If your model number is not explicitly listed in the product title, please confirm compatibility before use.

PRODUCT OVERVIEW

The replacement remote control is a compact, black-colored device designed for infrared (IR) communication with your Voltomat Heating electric fireplace. It features clearly labeled buttons for various functions, allowing convenient control of your heater from a distance.



Figure 1: Front view of the remote control with all buttons visible.

SETUP

Battery Installation

The remote control requires 2 CR2 batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Gently slide the battery cover downwards or in the direction indicated by an arrow to open it.
3. Insert the 2 CR2 batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Figure 2: Back view of the remote control, illustrating the battery compartment.

Note: Always use new batteries of the specified type. Do not mix old and new batteries, or different types of batteries. Remove batteries if the remote will not be used for an extended period.

OPERATING INSTRUCTIONS

Point the remote control directly towards the infrared receiver on your Voltomat Heating electric fireplace. Ensure there are no obstructions between the remote and the fireplace.

Button Functions:

- **Power Button (■):** Turns the fireplace ON or OFF.
- **Heat Button (■):** Activates or deactivates the heating function. Press repeatedly to cycle through heat settings if available.
- **Plus Button (■):** Increases temperature, time, or other adjustable settings.
- **Minus Button (■):** Decreases temperature, time, or other adjustable settings.
- **Flame Button (■):** Controls the flame effect. Press to cycle through flame brightness levels or turn the flame effect ON/OFF.
- **Day Button (■):** Used for setting the day of the week in timer functions.
- **Hour Button (■):** Used for setting the hour in timer functions.
- **Min Button (■):** Used for setting the minute in timer functions.
- **Week/Time Button (■):** Toggles between week and time display/setting modes.
- **Set Up Button (■):** Enters or confirms settings for various functions, such as timer programming.

For detailed instructions on specific functions like timer programming, please refer to the original instruction manual of your Voltomat Heating 24652562 Electric Fireplace, as this remote is a replacement and assumes familiarity with the fireplace's features.

MAINTENANCE

Proper maintenance ensures the longevity and reliable operation of your remote control.

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the surface and internal components.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Replacement:** Replace batteries promptly when the remote's range decreases or it stops responding. Dispose of used batteries according to local regulations.
- **Avoid Drops:** Protect the remote from physical impact. Dropping it can damage internal circuitry.

TROUBLESHOOTING

If you experience issues with your remote control, try the following troubleshooting steps:

- **Remote Not Responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace the batteries with new ones.
 - Ensure there are no obstructions between the remote control and the fireplace's infrared receiver.
 - Make sure you are within the effective operating range of the fireplace's receiver.
- **Limited Range:**
 - This often indicates low battery power. Replace the batteries.
 - Ensure the remote's infrared emitter is clean and unobstructed.
- **Specific Functions Not Working:**
 - Verify that the fireplace itself supports the function you are trying to use. Some replacement remotes may have buttons for functions not present on all compatible fireplace models.
 - Refer to your fireplace's original manual for specific function details.

If the issue persists after trying these steps, it may indicate a problem with the fireplace's receiver or a non-compatible fireplace model. This remote is specifically for the Voltomat Heating 24652562 Electric Fireplace Infrared Quartz Space Heater.

SPECIFICATIONS

Feature	Detail
Product Type	Replacement Infrared Remote Control
Compatible Model	Voltomat Heating 24652562 Electric Fireplace Infrared Quartz Space Heater
Power Source	2 x CR2 Batteries (not included)
Color	Black
Material	ABS Plastic

This manual is for informational purposes only. Specifications are subject to change without notice.